

Date Purchased \_\_\_\_\_ Machine Serial No. \_\_\_\_\_

Size of Pump \_\_\_\_\_ Options \_\_\_\_\_

The key number system in this parts book is arranged as follows:

- ◎ - Key numbers with two circles denotes main assemblies.
- - Key numbers with one circle are individual parts

Please order parts by number



## **4" ELECTRIC TRANSFER PUMP**

**ELECTRIC PUMP – 4ft ▪ 260-00-00-000**

**ELECTRIC PUMP – 5ft ▪ 261-00-00-000**

**ELECTRIC PUMP – 6ft ▪ 262-00-00-000**

**ELECTRIC PUMP – 8ft ▪ 263-00-00-000**


**ELECTRIC PUMP – 10ft ▪ 264-00-00-000**

**ELECTRIC PUMP – 12ft ▪ 265-00-00-000**

### **OPERATING INSTRUCTIONS:**

1. Pump must turn counter-clockwise when looking down from top.
2. Fasten pump solid so it will not move when operating.
3. Make sure all moving parts are shielded.
4. Keep children and livestock away from pump.
5. Have an Electrician check amp draw when operating to make sure the motor has enough electricity.
6. Check bottom bearing for wear occasionally.
7. Keep belts snug but not overly tight.
8. **EXTREME DANGER** – Never enter a dirty manure spreader or storage tank – one breath of hydrogen sulphide gas is enough to kill. Have a ladder in your pit, so that if by accident you should fall in, you can get out.

MAIN FRAME

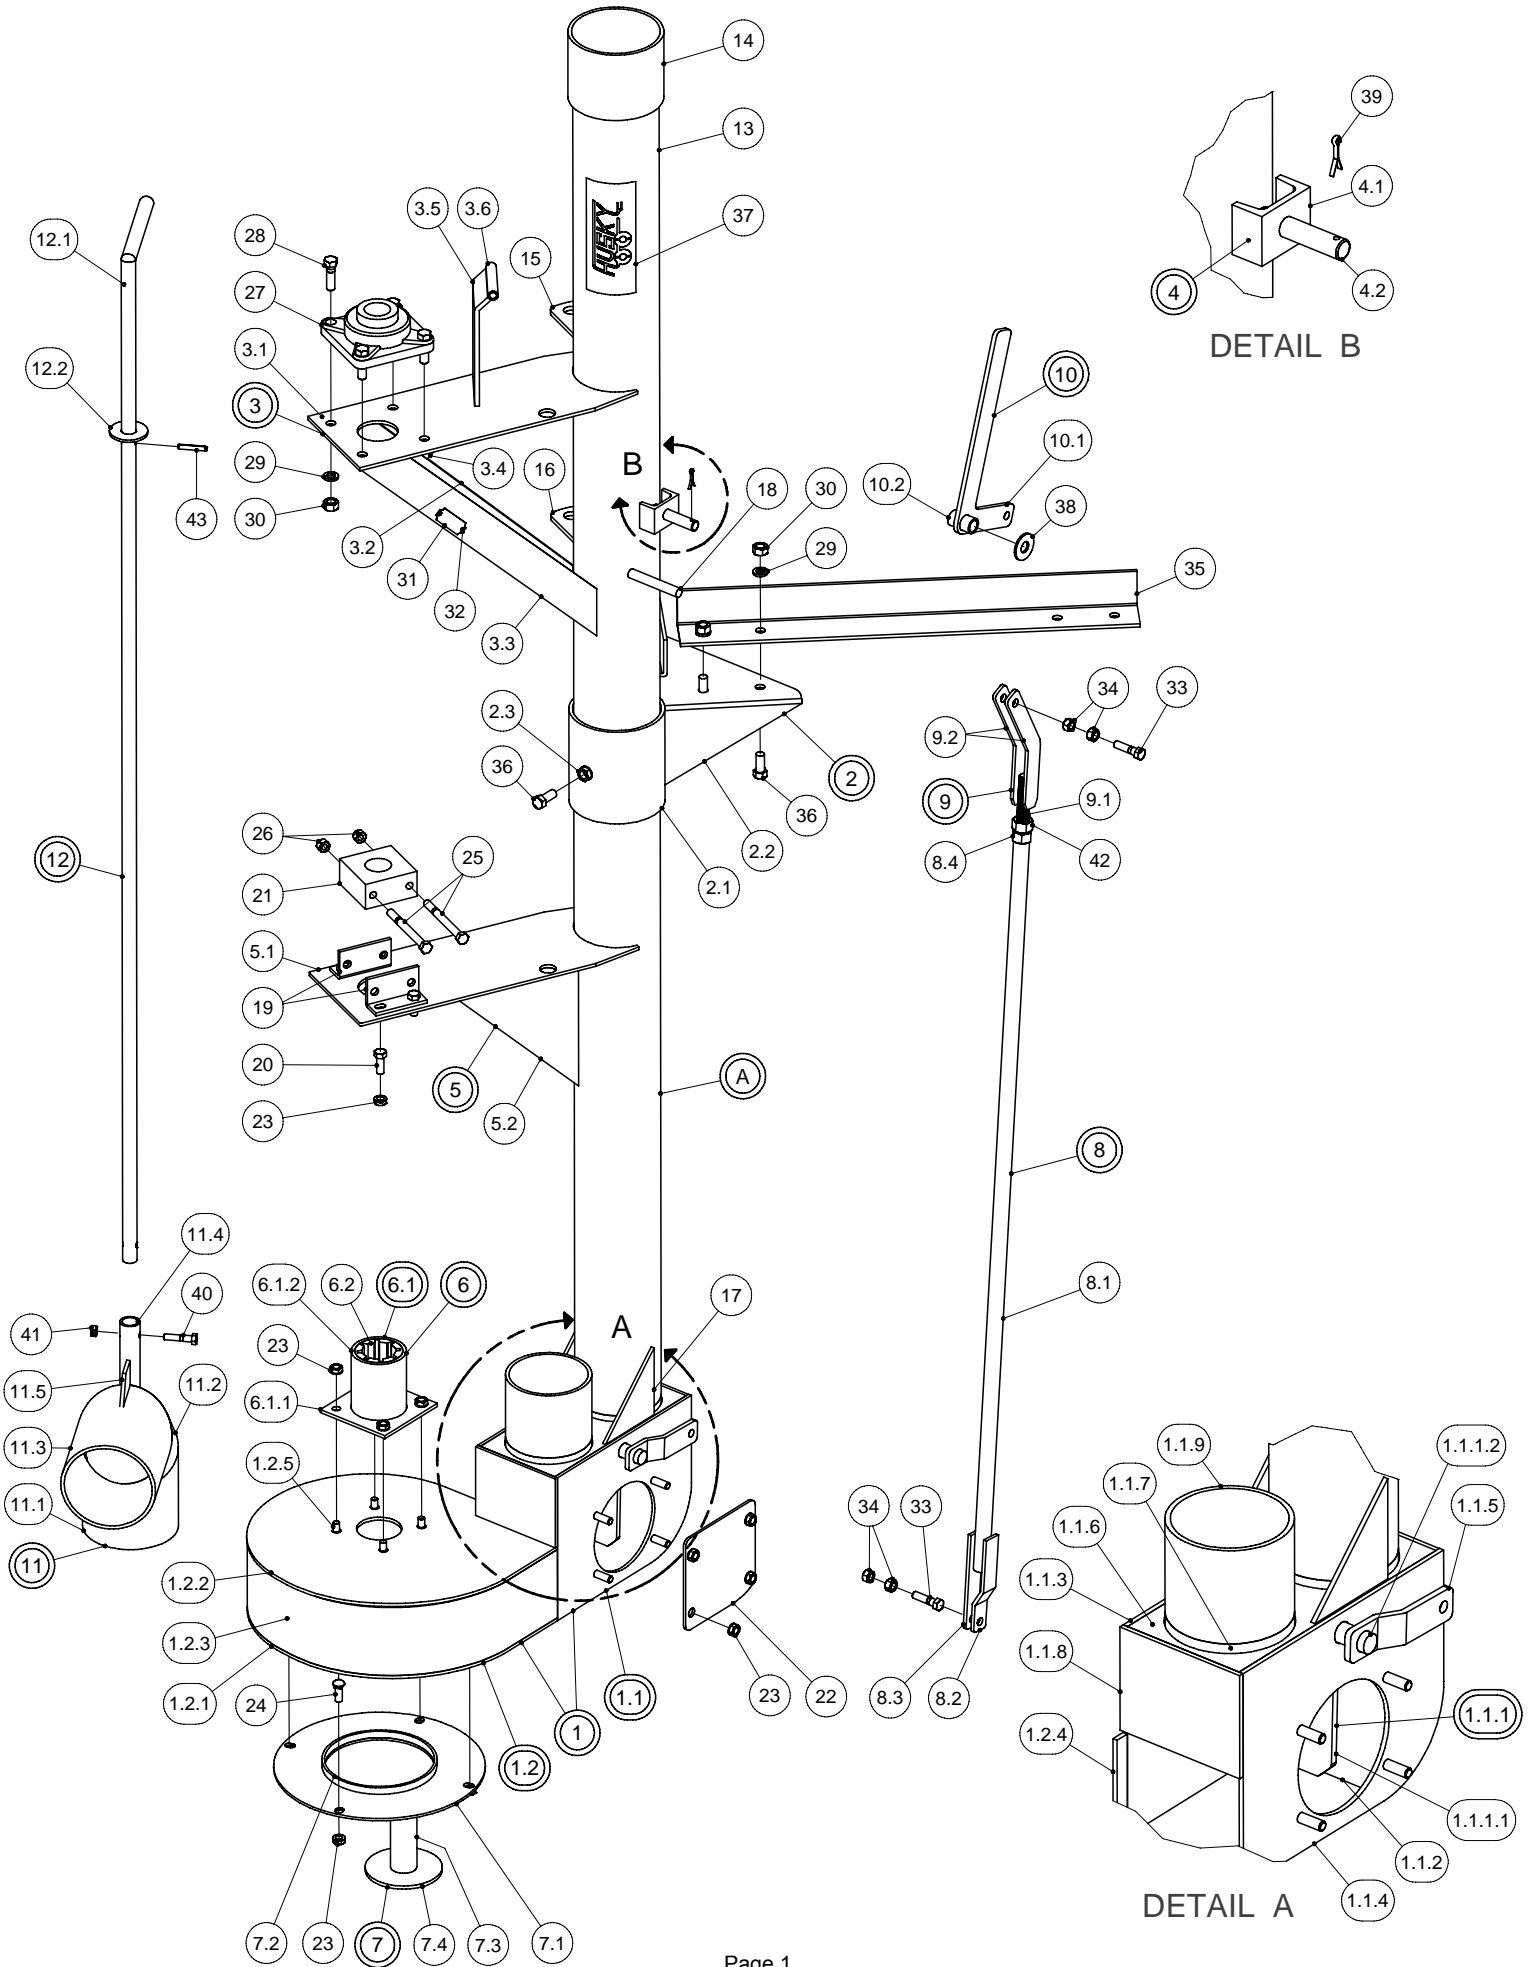


# MAIN FRAME

Parts List				Parts List			
ITEM	PART NUMBER	DESCRIPTION	QTY	ITEM	PART NUMBER	DESCRIPTION	QTY
A	265-10-00-000	PUMP HOUSING & STANDPIPE ASSY - 12 FT	1	8.2	230-05-00-056	CONTROL ROD BRKT	1
	264-09-00-000	PUMP HOUSING & STANDPIPE ASSY - 10 FT	1	8.3	230-05-00-057	CONTROL ROD BAR	1
	263-08-00-000	PUMP HOUSING & STANDPIPE ASSY - 8 FT	1	8.4	R07786	5/8 HEX NUT	1
	262-07-00-000	PUMP HOUSING & STANDPIPE ASSY - 6 FT	1	9	230-13-00-000	OVER CENTER ARM ASSY	1
	261-06-00-000	PUMP HOUSING & STANDPIPE ASSY - 5 FT	1	9.1	230-13-00-076	ADJUSTING ROD	1
	260-05-00-000	PUMP HOUSING & STANDPIPE ASSY - 4 FT	1	9.2	230-13-00-075	OVER CENTER ARM	2
1	260-02-00-000	CHANGE BOX & HOUSING ASSY	1	10	230-04-00-000	AGITATOR HANDLE ASSY	1
1.1	260-02-02-000	4" CHANGE BOX ASSY	1	10.1	230-04-01-131	HANDLE	1
1.1.1	260-02-07-000	FLAPPER ASSY	1	10.2	230-04-00-047	HANDLE PIVOT	1
1.1.1.1	260-02-02-012	FLAPPER	1	11	260-04-00-000	AGITATOR ELBOW ASSY	1
1.1.1.2	260-02-02-015	FLAPPER SHAFT	1	11.1	260-04-00-018	AGITATING ELBOW BASE	1
1.1.2	260-02-02-009	CHANGE BOX BAND	1	11.2	260-04-00-019	AGITATING ELBOW CENTER PIECE	1
1.1.3	260-02-02-008	SIDE PLATE	1	11.3	260-04-00-020	AGITATING ELBOW TOP PIECE	1
1.1.4	260-02-02-007	INSPECTION SIDE PLATE	1	11.4	230-01-03-020	TURN SOCKET	1
1.1.5	230-01-02-005	FLAPPER ARM	1	11.5	230-01-03-021	TURN SOCKET GUSSET	1
1.1.6	260-02-02-010	TOP PLATE	1	(12)	239-30-00-000	AGITATOR TURN LEVER ASSY - 12 FT MODEL	1
1.1.7	260-02-02-014	FLAPPER SEAT	2		238-29-00-000	AGITATOR TURN LEVER ASSY - 10 FT MODEL	1
1.1.8	260-02-02-011	END PLATE	1		236-28-00-000	AGITATOR TURN LEVER ASSY - 8 FT MODEL	1
1.1.9	260-02-02-013	FLAPPER SEAT EXTENSION	1		234-27-00-000	AGITATOR TURN LEVER ASSY - 6 FT MODEL	1
1.1.10	R08323	3/8 x 1 SS WELD STUD	4		232-26-00-000	AGITATOR TURN LEVER ASSY - 5 FT MODEL	1
1.2	260-02-01-000	FAN HOUSING ASSY	1	12	230-25-00-000	AGITATOR TURN LEVER ASSY - 4 FT MODEL	1
1.2.1	260-02-01-003	FAN HOUSING BOTTOM PLATE	1	(12.1)	239-30-00-000	AGITATOR TURN LEVER - 12 FT MODEL	1
1.2.2	260-02-01-004	FAN HOUSING TOP PLATE	1		238-29-00-000	AGITATOR TURN LEVER - 10 FT MODEL	1
1.2.3	260-02-01-005	HOUSING BAND	1		236-28-00-122	AGITATOR TURN LEVER - 8 FT MODEL	1
1.2.4	260-02-01-006	FILLER PLATE	1		234-27-00-121	AGITATOR TURN LEVER - 6 FT MODEL	1
1.2.5	R08244	3/8 x 3/4 FLAT HEAD SLOT S.S.	4		232-26-00-120	AGITATOR TURN LEVER - 5 FT MODEL	1
2	260-03-00-000	FLOOR BRACKET ASSY	1	12.1	230-25-00-119	AGITATOR TURN LEVER - 4 FT MODEL	1
2.1	260-03-00-016	SLIDE TUBE	1	12.2	R07827	3/4" FLAT WASHER	1
2.2	260-03-00-034	FLOOR BRACKET BASE	1	(13)	265-10-00-031	STANDPIPE - 12 FT	1
2.3	R07879	7/16 FLANGE NUT	1		264-09-00-030	STANDPIPE - 10 FT	1
3	260-05-03-000	UPPER BRG PLATE ASSY	1		263-08-00-029	STANDPIPE - 8 FT	1
3.1	260-05-03-021	UPPER BRG PLATE	1		262-07-00-028	STANDPIPE - 6 FT	1
3.2	260-05-03-023	LH BRG PLATE BRACE	1		261-06-00-027	STANDPIPE - 5 FT	1
3.3	260-05-03-022	RH BRG PLATE BRACE	1	13	260-05-00-025	STANDPIPE - 4 FT	1
3.4	260-05-03-033	TENSION ROD BRKT	1	14	260-05-00-024	ADAPTER TUBE	1
3.5	230-01-04-026	GUARD HINGE PLATE	1	15	230-01-00-138	UPPER MOTOR MOUNT ASSY	1
3.6	230-01-04-027	GUARD SLEEVE	1	16	230-01-00-139	LOWER MOTOR MOUNT ASSY	1
4	230-01-07-000	PIVOT PIN ASSY	1	17	230-01-00-040	STANDPIPE GUSSET	2
4.1	230-01-07-031	PIVOT PIN BRKT	1	18	260-05-00-035	STOP ROD	1
4.2	230-01-07-030	PIVOT PIN	1	19	234-00-00-144	BRG HOLDER	2
5	262-07-04-000	INTERMEDIATE BRG HOLDER ASSY (ON 6 FT & OVER)	1	20	R07619	3/8 x 1 HEX BOLT	4
5.1	262-07-04-026	INTERMEDIATE BRG PLATE	1	21	R20229	1 3/8 WOOD BRG	1
5.2	234-01-08-116	INTERMEDIATE BRG GUSSET	1	22	230-00-00-084	INSPECTION PLATE	1
6	230-33-00-000	BEARING & HOLDER ASSY	1	23	R07794	3/8 FLANGE NUT	16
6.1	230-33-09-000	BEARING HOLDER ASSY	1	24	R07721	3/8 x 1 CARRIAGE BOLT	4
6.1.1	230-33-09-128	BEARING HOLDER BACK PLATE	1	25	R07625	3/8 x 4 HEX BOLT	2
6.1.2	230-33-09-129	BRG HOLDER	1	26	R08247	3/8 NYLOCK NUT	2
6.2	R20223	URETHANE	1	27	R20185	1 3/8 FLANGE BRG	1
7	230-21-00-000	COVER PLATE ASSY	1	28	R07629	7/16 x 1 1/2 HEX BOLT	4
7.1	230-21-00-104	HOUSING COVER PLATE	1	29	R07804	7/16 LOCK WASHER	8
7.2	230-21-00-105	INLET RING	1	30	R07784	7/16 HEX NUT	8
7.3	230-06-00-059	FOOT SPACER	1	31	R09071	SERIAL NUMBER PLATE	1
7.4	230-06-00-060	FOOT	1	32	R08152	6 x 1/4 PAN HD SOCKET SCREW	2
(8)	239-05-00-000	CONTROL ROD ASSY - 12 FT MODEL	1	33	R07620	3/8 x 1 1/2 HEX BOLT	2
	238-05-00-000	CONTROL ROD ASSY - 10 FT MODEL	1	34	R07783	3/8 HEX NUT	4
	236-05-00-000	CONTROL ROD ASSY - 8 FT MODEL	1	35	230-00-00-077	FLOOR BRKT LEGS	2
	234-05-00-000	CONTROL ROD ASSY - 6 FT MODEL	1	36	R07628	7/16 x 1 HEX BOLT	5
	232-05-00-000	CONTROL ROD ASSY - 5 FT MODEL	1	37	R09671	"HUSKY" DECAL	1
8	230-05-00-000	CONTROL ROD ASSY - 4 FT MODEL	1	38	R07852	9/16 FLAT WASHER	1
(8.1)	239-05-00-055	CONTROL PIPE - 12 FT MODEL	1	39	R08021	1/8 x 1 S.S. COTTER PIN	1
	238-05-00-054	CONTROL PIPE - 10 FT MODEL	1	40	R07612	5/16 x 1 1/2 HEX BOLT	1
	236-05-00-053	CONTROL PIPE - 8 FT MODEL	1	41	R07888	5/16 - 2 WAY LOCK NUT	1
	234-05-00-052	CONTROL PIPE - 6 FT MODEL	1	42	R07786	5/8 HEX NUT	1
	232-05-00-051	CONTROL PIPE - 5 FT MODEL	1	43	R07962	1/4 x 1 1/2 ROLL PIN	1
8.1	230-05-00-050	CONTROL PIPE - 4 FT MODEL	1				

NOTE: 4ft & 5ft DO NOT INCLUDE AN INTERMEDIATE BRG PLATE ASSY  
6ft to 10ft INCLUDE 1 INTERMEDIATE BRG PLATE ASSY (PLUS HARDWARE)  
12ft INCLUDE 2 INTERMEDIATE BRG PLATE ASSY (PLUS HARDWARE)


# IMPELLER & SHAFT

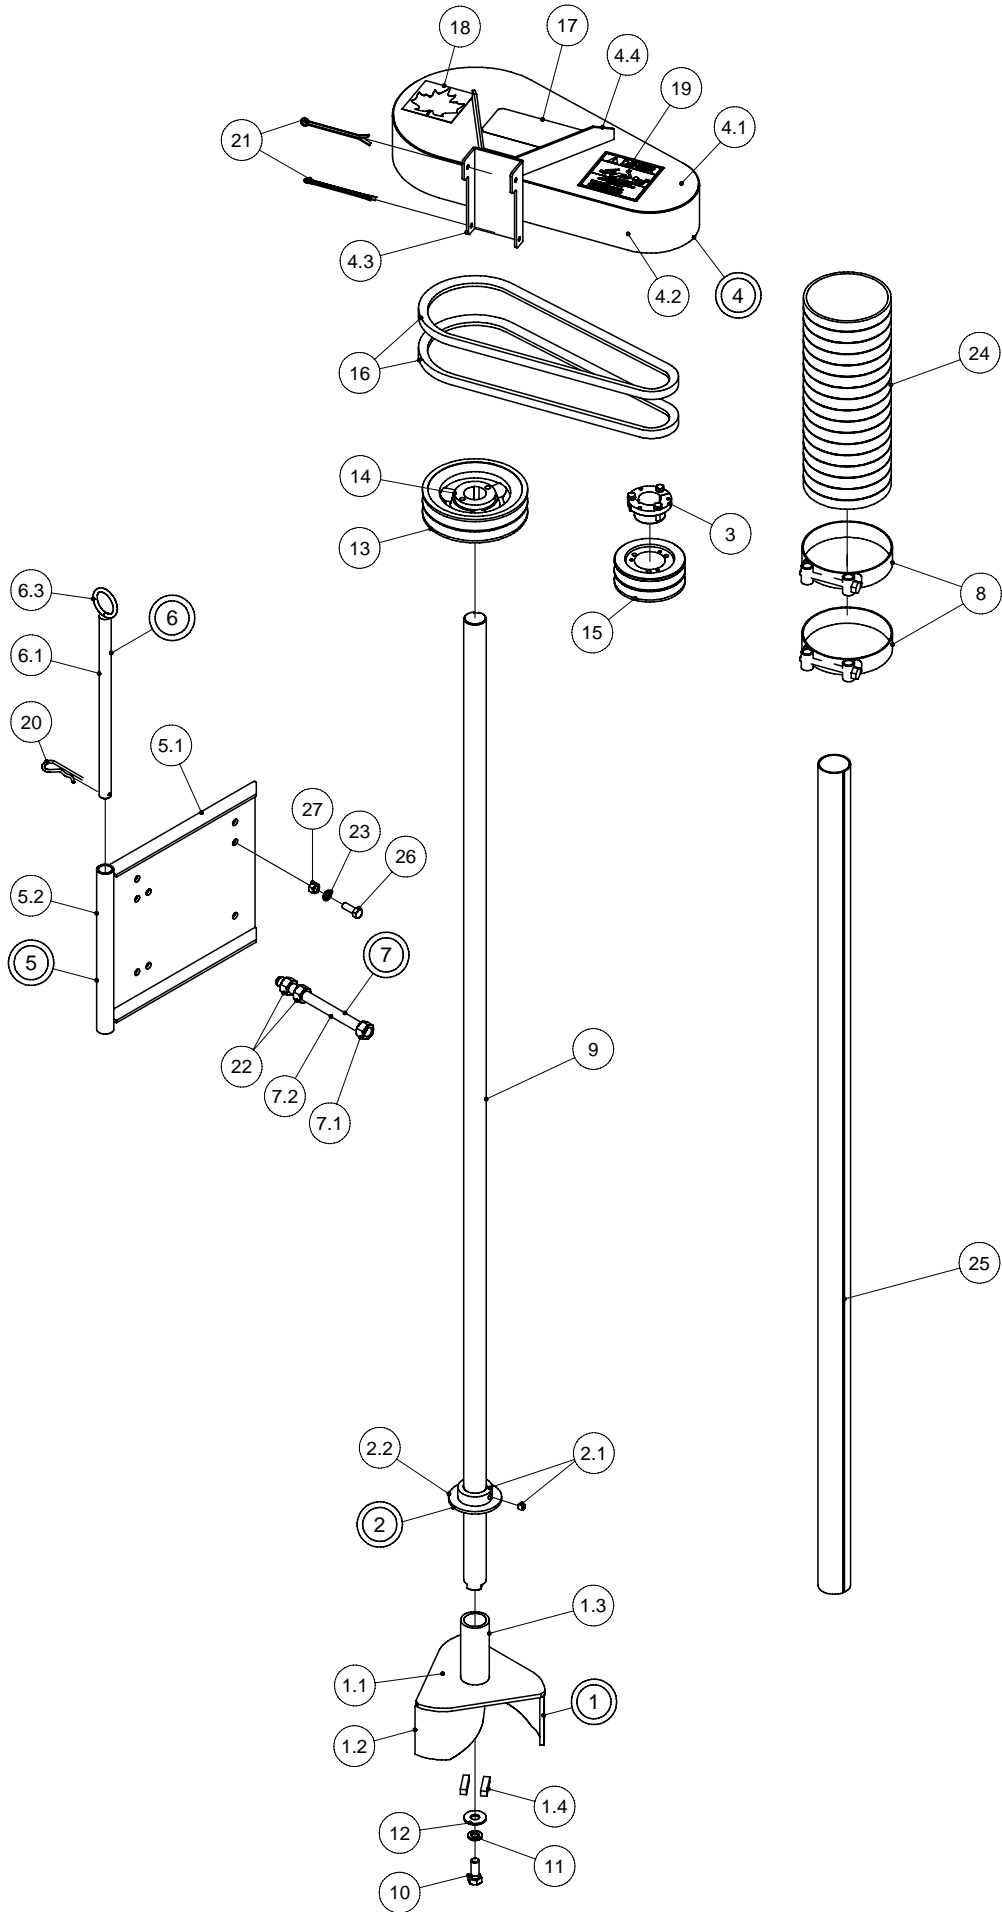

## IMPELLER & SHAFT

PARTS LIST			
ITEM	PART NUMBE	DESCRIPTION	QTY
1	260-01-00-000	IMPELLER ASSY	1
1.1	230-31-00-127	IMPELLER BACK PLATE	1
1.2	260-01-00-001	4" IMPELLER BLADE	3
1.3	260-01-00-002	SHAFT SLEEVE	1
1.4	230-31-00-103	SHAFT SLEEVE PIN	2
2	230-23-00-000	SPLASH GUARD ASSY	1
2.1	R09554	1 3/8" LOCK COLLAR	1
2.2	R07848	1 3/8 FLAT WASHER	1
3	R21049	1 3/8 SHEAVE BUSHING	1
	R21048	1 1/8 SHEAVE BUSHING	1
4	230-10-00-000	BELT GUARD ASSY	1
4.1	230-10-00-066	GUARD TOP	1
4.2	230-10-00-068	GUARD BAND	1
4.3	230-10-00-141	GUARD SUPPORT CHANNEL	1
4.4	230-10-00-142	GUARD BRACE	1
5	230-07-00-000	MOTOR MOUNT ASSY	1
5.1	230-07-00-062	MOTOR MOUNT	1
5.2	230-07-00-061	MOTOR MOUNT SLEEVE	1
6	230-08-00-000	MOTOR MOUNT PIN ASSY	1
6.1	230-08-00-064	MOTOR MOUNT PIN	1
6.3	250-00-00-354	1/4 X 1 1/2" RING	1
7	230-09-00-000	TENSION BOLT ASSY	1
7.1	R07786	5/8 HEX NUT	1
7.2	230-09-00-065	TENSION ROD	1
8	R02483	5" BAUER CLAMP	2
(9)	239-00-00-114	DRIVE SHAFT - 12 FT MODEL	1
	238-00-00-113	DRIVE SHAFT - 10 FT MODEL	1
	236-00-00-112	DRIVE SHAFT - 8 FT MODEL	1
	234-00-00-111	DRIVE SHAFT - 6 FT MODEL	1
	232-00-00-110	DRIVE SHAFT - 5 FT MODEL	1
9	230-00-00-109	DRIVE SHAFT - 4 FT MODEL	1
10	R08217	1/2 x 1 1/4 SS HEX BOLT	1
11	R07805	1/2 LOCK WASHER	1
12	R07825	1/2 FLAT WASHER	1
13	R21062	2 HB x 6.4 SHEEVE w/ BUSHING - 1 3/8 BORE	1
14	R21052	PULLEY BUSHING - 1 3/8	1
15	R21045	2HB - 3.6 x 1 3/8 BORE PULLEY (5 HP)	1
	R21055	2HB - 4.5 x 1 3/8 BORE PULLEY (7.5 HP & 10 HP)	1
16	R20932	38B - V BELTS	2
17	R09692	"CAUTION" - "ROTATING CCW" DECAL	1
18	R09508	"MADE IN CANADA" DECAL - LARGE	1
19	R21521	"ROTATING DRIVE LINE" DECAL	1
20	R07948	5/32 HAIR PIN	1
21	R08017	1/4 x 4 COTTER PIN	2
22	R07786	5/8 HEX NUT	2
23	R07803	3/8 LOCK WASHER	1
24	206-00-00-097	5" FLEX HOSE	1
(25)	239-00-00-137	SHAFT GUARD - 12 FT MODEL	1
	238-00-00-136	SHAFT GUARD - 10 FT MODEL	1
	236-00-00-135	SHAFT GUARD - 8 FT MODEL	1
	234-00-00-134	SHAFT GUARD - 6 FT MODEL	1
	232-00-00-133	SHAFT GUARD - 5 FT MODEL	1
25	230-00-00-132	SHAFT GUARD - 4 FT MODEL	1
26	R07619	3/8 x 1 HEX BOLT	1
27	R07783	3/8 HEX NUT	1

# 4" CHT SAND KIT

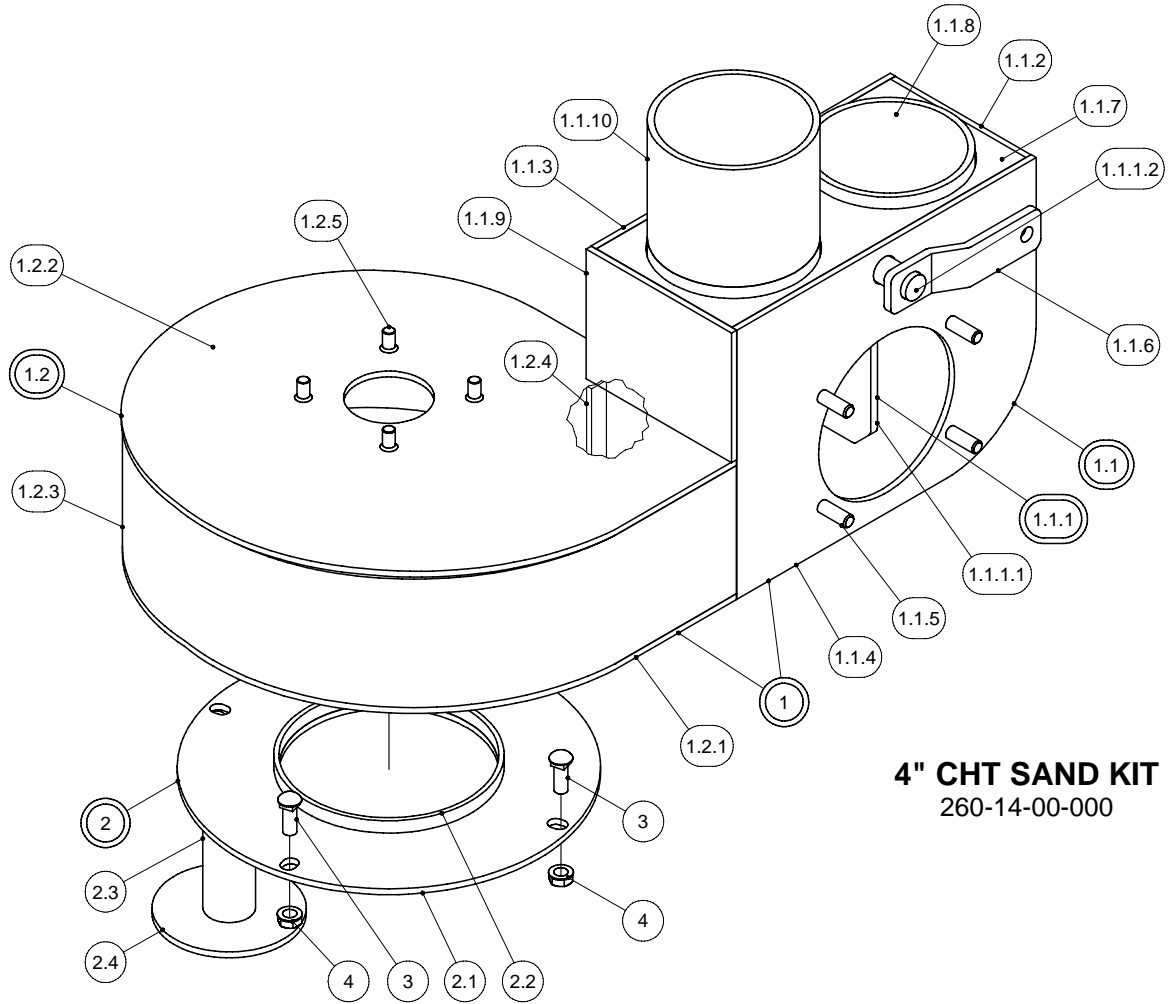

**4" CHT SAND KIT**  
260-14-00-000

PARTS LIST				PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY	ITEM	PART NUMBER	DESCRIPTION	QTY
1	260-14-04-000	4" CHT HOUSING & CHANGE BOX ASSY	1	1.2	260-14-01-000	CHT FAN HOUSING ASSY	1
1.1	260-14-02-000	4" CHT CHANGE BOX ASSY	1	1.2.1	260-14-01-042	CHT FAN HOUSING BOTTOM PLATE	1
1.1.1	260-14-03-000	CHT FLAPPER ASSY	1	1.2.2	260-14-01-041	CHT FAN HOUSING TOP PLATE	1
1.1.1.1	260-14-03-046	CHT FLAPPER	1	1.2.3	260-14-01-043	CHT HOUSING BAND	1
1.1.1.2	260-02-02-015	FLAPPER SHAFT	1	1.2.4	260-14-01-044	CHT FILLER PLATE	1
1.1.2	260-14-02-045	CHT CHANGE BOX BAND	1	1.2.5	R08244	3/8 x 3/4 FLAT HEAD SLOT S.S.	4
1.1.3	260-02-02-008	SIDE PLATE	1	2	230-35-03-000	CHT COVER PLATE ASSY	1
1.1.4	260-02-02-007	INSPECTION SIDE PLATE	1	2.1	230-35-03-151	CHT COVER PLATE	1
1.1.5	R08323	3/8 x 1 SS WELD STUD	4	2.2	230-35-03-152	CHT INLET RING	1
1.1.6	230-01-02-005	FLAPPER ARM	1	2.3	230-06-00-059	FOOT SPACER	1
1.1.7	260-02-02-010	TOP PLATE	1	2.4	230-06-00-060	FOOT	1
1.1.8	260-02-02-014	FLAPPER SEAT	2	3	R07721	3/8 x 1 CARRIAGE BOLT	4
1.1.9	260-02-02-011	END PLATE	1	4	R07794	3/8 FLANGE NUT	4
1.1.10	260-02-02-013	FLAPPER SEAT EXTENSION	1				

## **GUARANTEE**

All Husky Farm Equipment manufactured by Husky Farm Equipment Limited is guaranteed. Guarantee covers all the replacement cost or repair of all parts said to be defective from manufacture. Guarantee also covers labour installing said parts, if installed at Husky Manufacturing plant. Time and use is the essence of the guarantee. If equipment is used on a private property for an individual's use, guarantee will be in effect for twelve months from date of invoice. If equipment is used for commercial use to do custom work for money then guarantee will be in effect for three months only from date of invoice.

## **EXEMPTIONS FROM GUARANTEE**

Cost of transportation of equipment to or from Husky Farm Equipment Limited either by customer or by Husky's service staff or cost of mail or public transportation is not covered. Tires and electric or hydraulic motors are covered by manufacturer's warranty and although Husky may assist to get warranty, Husky will not be responsible other than that allowed by manufacturer's warranty. Items subject to normal wear from use not covered by guarantee if faulty part is simply worn.