

Date Purchased \_\_\_\_\_ Machine Serial No. \_\_\_\_\_

Size of Spreader \_\_\_\_\_ Options \_\_\_\_\_

The key number system in this parts book is arranged as follows:

- ⊙ - Key numbers with two circles denotes main assemblies.
- - Key numbers with one circle are individual parts

Please order parts by number



### 24500L SLIMLINE SPREADER ▪ 395-00-00-000

#### OPERATING INSTRUCTIONS:

1. Heed all warnings.
2. Minimum HP requirements to safely operate on level terrain, on hilly terrain HP should be increased.
 

4500L .....	70 HP
7000L .....	85 HP
9000L .....	95 HP
12000L .....	110 HP
14000L .....	130 HP
15000L .....	140 HP
18000L .....	160 HP
24500L .....	200 HP
27500L .....	250 HP
3. If machine is equipped with hydraulic brakes that are operated from the tractor hydraulics, they will not work should the tractor motor stop. Inspect brakes before each use. Brakes must be bled before initial use unless installed at factory. When releasing brakes the tractor hydraulic lever must be put in the opposing position to release pressure. Do not put in float position they will not release.
4. Tractor PTO spline must be approximately 14" (355mm) from end of compressed PTO for proper adjustment
5. Hitch tanker to tractor with minimum 1-1/2" (38mm) hardened hitch pin with a safety lock. Use two - 14,000 Lbs safety chains from spreader to tractor (4:1 Safety factor on the chain minimum).
6. Do not use tongue stand to support loaded spreader. Put jack in storage position before using.
7. When hooking PTO to tractor make sure motor is stopped. Make sure QD (Quick Disconnect) safety locking pin is in locked position before using.
8. Clean off hose ends before plugging into tractor hydraulics. If spreader is equipped with hydraulic drive on spreading attachment, make sure tractor has sufficient oil flow and pressure to maintain satisfactory spread pattern, if not use another tractor.
9. After using spreader in freezing conditions make sure impeller housing is drained.



## OPERATING INSTRUCTIONS continued:

10. Wash tank inside and out each time work is finished. This will increase the life of the tank by many years. See item 6 of Safety instructions
11. Do not drive on public roads after dusk unless equipped with lights required by Department of Transportation in your area.
12. Remove wheels annually and grease wheel bearings.
13. Because manure smells, many farmers have made unfriendly neighbours. If in a residential area a manure injector is a recommended option to bury the smell.
14. Much of the fertilizer value of manure is lost when exposed to air. Getting the manure covered quickly is a very important part of spreading manure.
15. If rustproof coating on interior shows signs of deterioration, have interior repainted. This can be done with a roller or brush. This helps to increase the life of your spreader. It is a valuable maintenance procedure.

## SAFETY INSTRUCTIONS:

Do not operate this machine until you fully understand the safe operating practices.

1. Make sure all moving parts are shielded to prevent coming in contact with loose clothing.
2. Keep children clear; do not let children or any person(s) ride the spreader at anytime.
3. Do not support loaded spreader on tongue jack.
4. Keep tire pressure to recommended pressure at all times. Recommended tire pressure being:

Size	Description	PSI	KPA
40 x 14	Airplane Tires	55	379
44 x 16	Airplane Tires	55	379
47 x 18 x 18	Airplane Tires	55	379
50 x 20 x 20	Airplane Tires	55	379
16.5L x 16.1	Implement Tires	35	241
21.5L x 16.1	Implement Tires	35	241
18.4L x 26	Turf Tires	30	207
23.1L x 26	Turf Tires	24	166
28L x 26	Turf Tires	24	166
30.5L x 32	Turf Tires	35-40	241
35.5L x 32	20 ply Turf Tires	35	241
18L x 22.5	Truck Tires	65	448
23.5L x 25	Loader Dozer Tires	55	379


5. Keep wheel bolts torqued to the recommended torque at all times. (Check Daily)

Wheel Bolt Size	Ft/Lbs Torque (Dry)	Ft/Lbs. - Oiled	Meter/Kg - Torque Dry	Meter/Kg - Oiled
9/16 – 18 NF GR. 5	120	90	16.59	12.44
5/8 – 18 NF GR. 8	240	180	33.18	24.89
3/4 – 16 NF GR. 8	420	310	58.07	42.86

6. Never enter a tanker without special breathing equipment to supply oxygen. Manure gases can kill instantly. One breath of Hydrogen Sulphide can kill.
7. When repairing hydraulic hoses, always relieve pressure in hose. Always wear safety glasses while working on spreader.
8. Caution – disc brakes will not release until valve lever is held momentarily in opposite position. This will relieve pressure in brake line. Do not put in float position, they will not release. (Rule does not apply to Husky Manure Spreaders equipped with a Knott Brake System)

24500L SLIM LINE COMPLETE


24500L SLIM LINE COMPLETE  
395-00-00-000

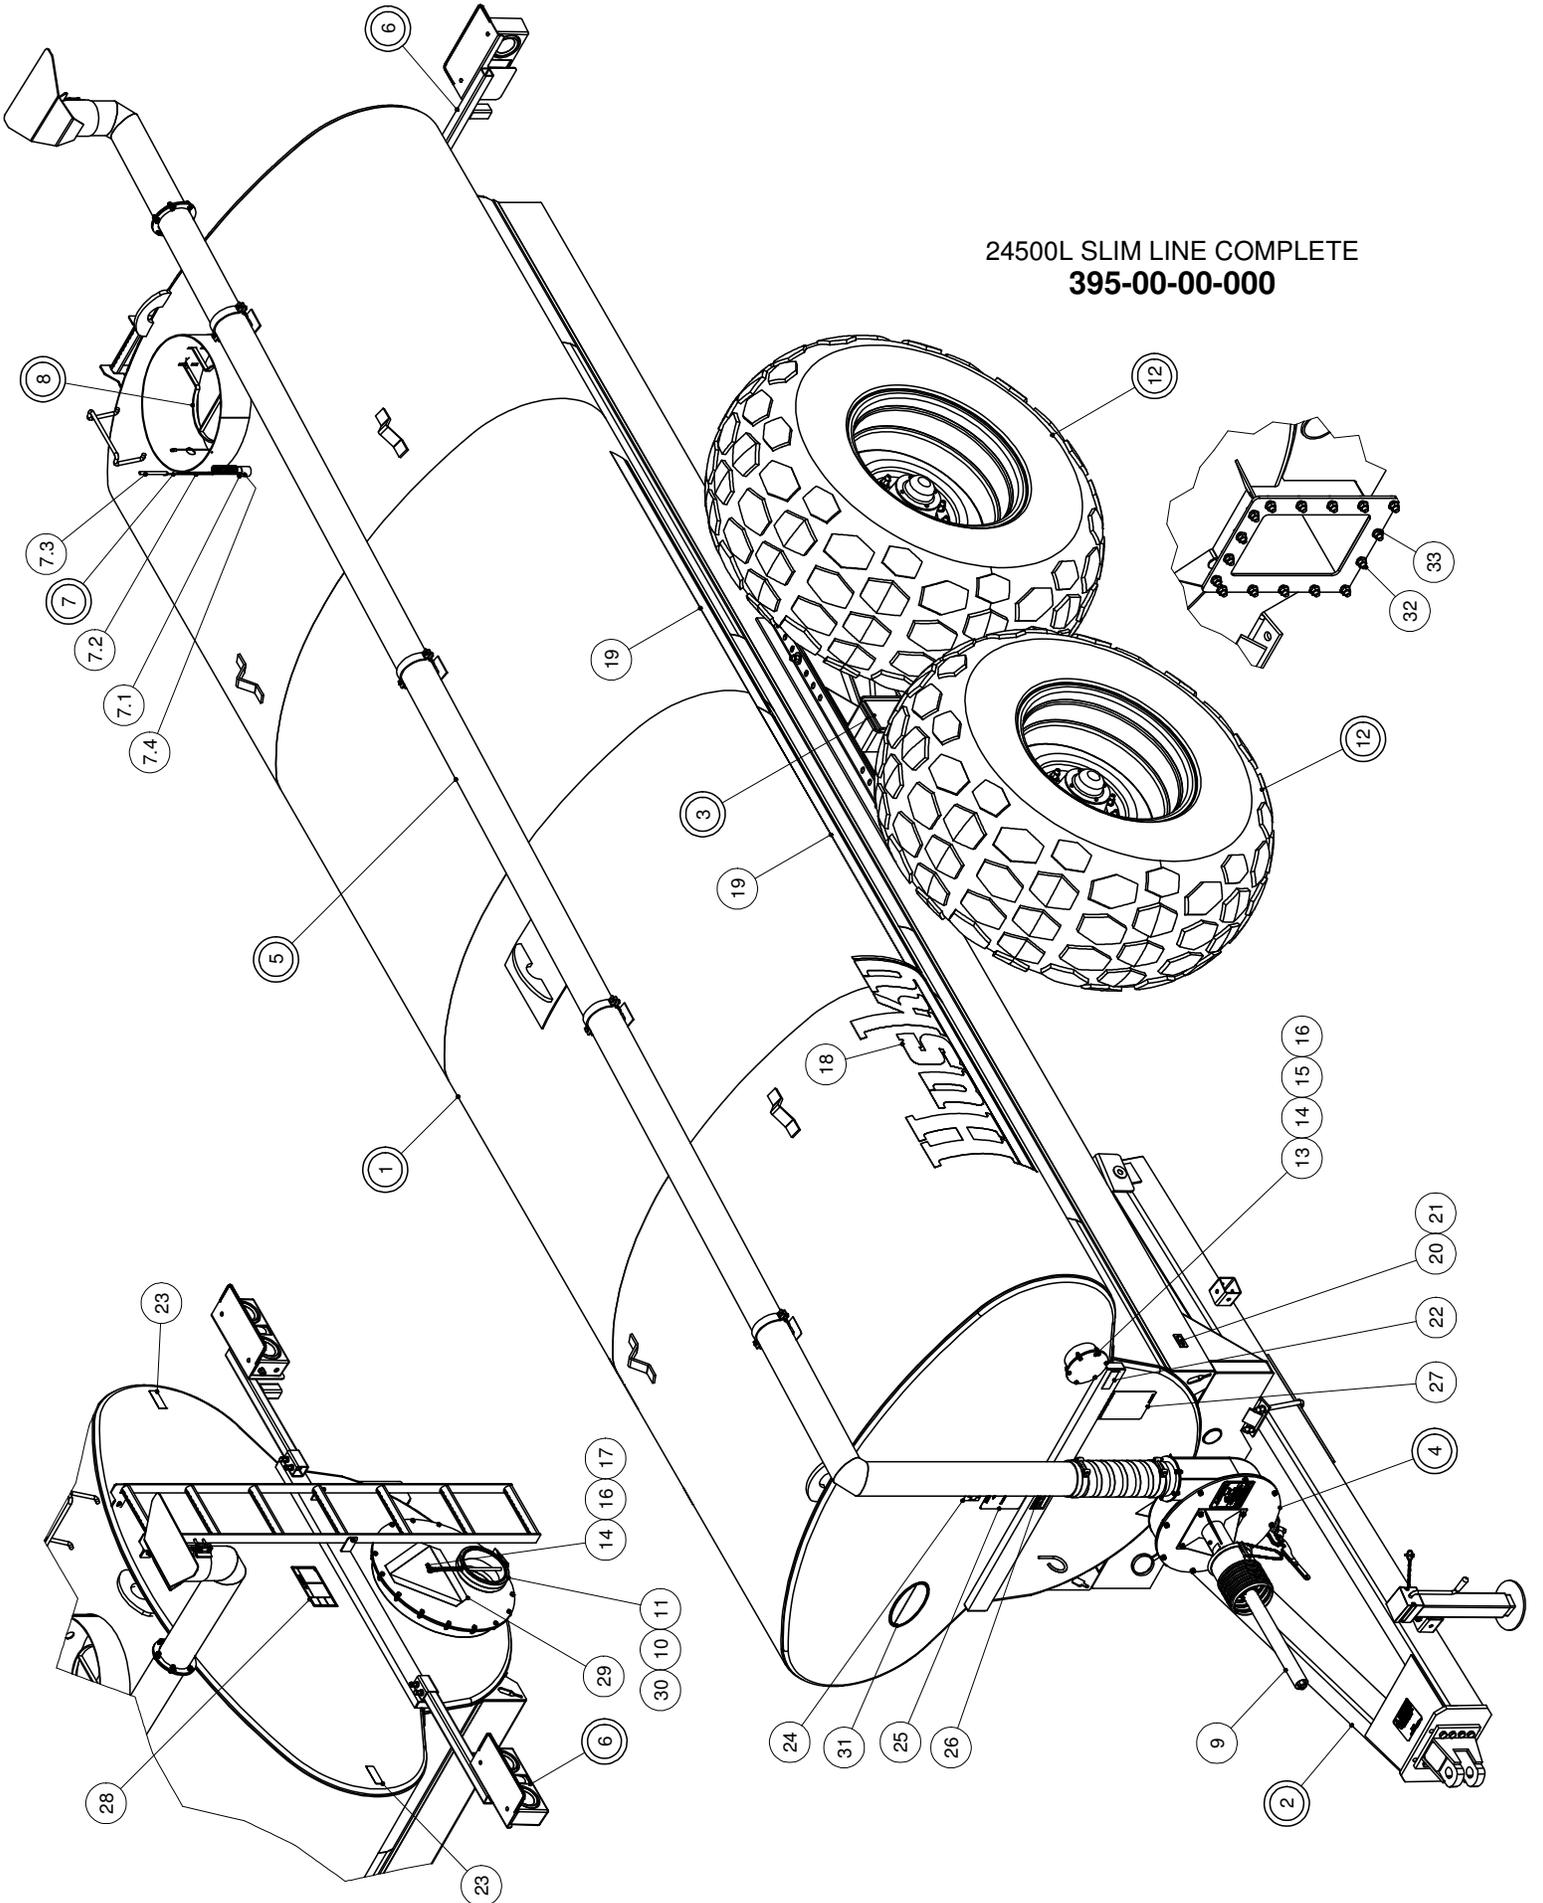

## 24500L SLIM LINE COMPLETE


PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY
1	395-08-00-000	24,500L LOW PROFILE TANK & SILL ASSY	1
2	395-07-00-000	24500L & 27500L SL TONGUE KIT	1
3	395-01-00-000	24500L SL AXLE COMPLETE	1
4	364-56-00-000	1000 FAN & HOUSING KIT	1
5	395-09-00-000	6" DISCHARGE PIPE KIT - 24,500L	1
6	357-30-00-000	TAIL LIGHT KIT	1
7	340-62-00-000	INDICATOR KIT	1
7.1	340-00-00-536	FLAG SPRING HOLDER	1
7.2	R08037	SPRING FOR SPREADER FLAG	1
7.3	340-62-00-553	INDICATOR HOSE	1
7.4	R07926	5/16-18 x 1/4" SET SCREW	1
8	357-63-00-000	SAFETY BAR ASSY	1
9	R21583	PTO - 1000RPM	1
10	395-08-04-000	DRAIN PLUG ASSY	1
11	244-09-00-000	8" CLAMP & CHAIN ASSY	1
12	357-07-00-000	30.5L x 32 TIRE & WHEEL ASSY - 25000LB	4
13	330-00-00-559	ACCESS TUBE COVER PLATE	1
14	R07675	3/8 x 1 1/4 UNC HEX BOLT	7
15	R07803	3/8" LOCK WASHER	6
16	R07783	3/8-16 UNC HEX NUT	7
17	R07823	3/8" FLAT WASHER	1
18	R09510	"HUSKY" DECAL	2
19	R09511	ACCENT STRIP	4
20	R09071	SERIAL NUMBER PLATE	1
21	R08152	6 x 1/4 PAN HD SOCKET SCREW	2
22	R10097	AMBER REFLECTOR	1
23	R10096	RED REFLECTOR	2
24	R09509	"MADE IN CANADA" DECAL - LARGE	1
25	R09730	TORQUE, TIRE PRESSURE DECAL	1
26	R09512	CAPACITY DECAL	1
27	R09783	"CAUTION" DECAL	1
28	R10334	TOXIC GAS PICTORAL DECAL	1
29	R09501	SLOW MOVING VEHICLE DECAL	1
30	R02863	8" CL GASKET	1
31	R10335	MANURE SPILL DECAL	1
32	R07671	7/16 x 1 1/4 UNC HEX BOLT	16
33	R07879	7/16-14 UNC FLANGE NUT	16

24500L SLIM LINE TANK ASSY

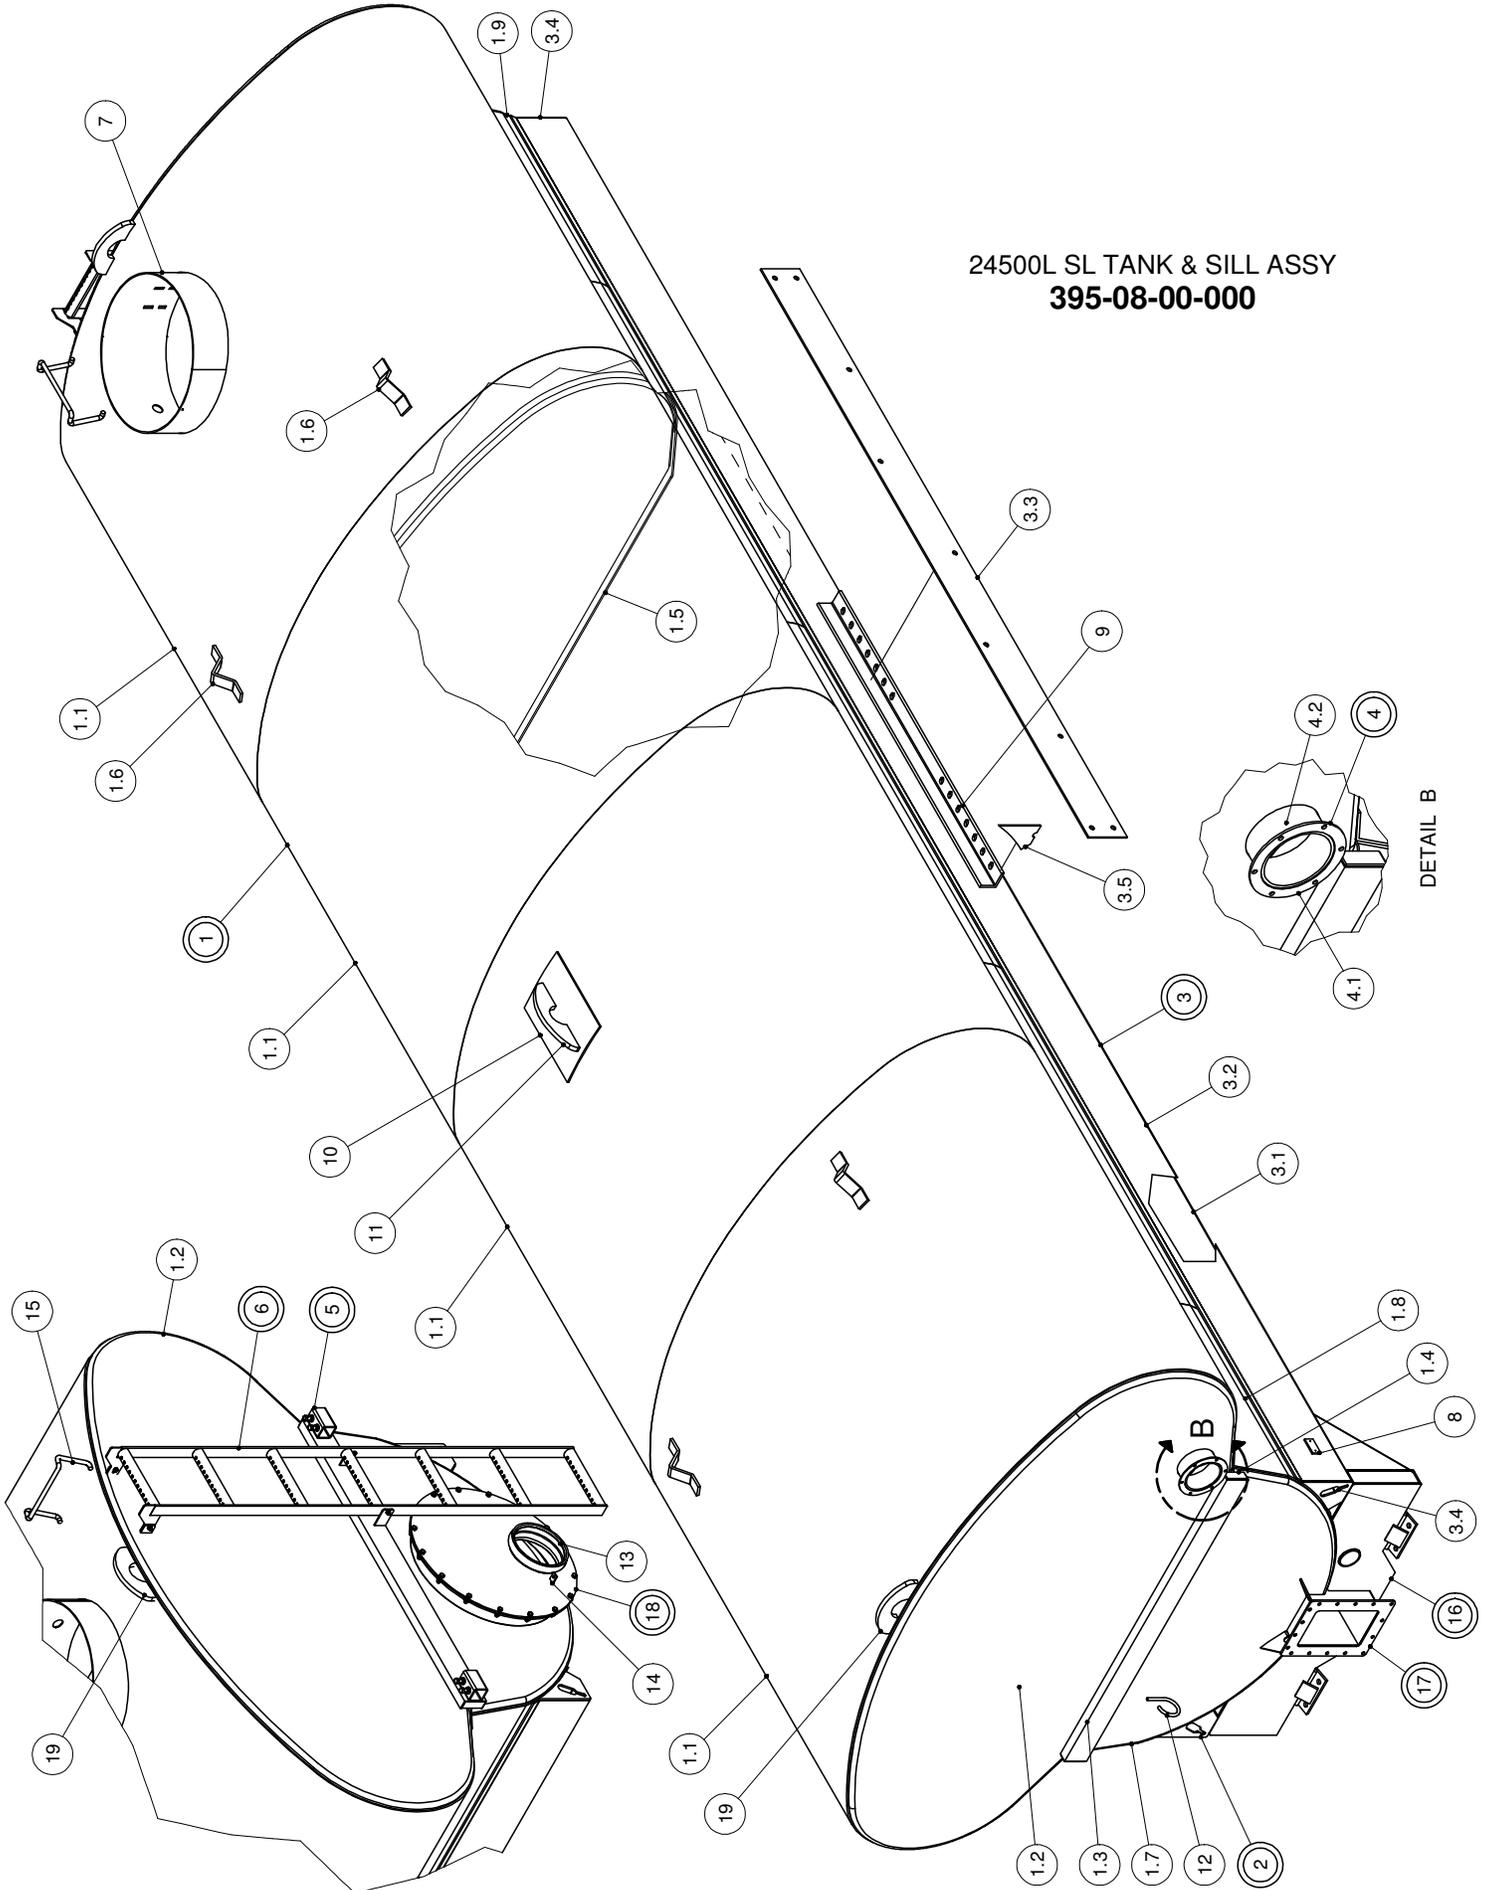


## 24500L SLIM LINE TANK ASSY

PARTS LIST				PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY	ITEM	PART NUMBER	DESCRIPTION	QTY
1	395-08-01-000	24,500L TANK & SILL ASSY	1	4.1	330-20-03-560	ACCESS TUBE FLANGE	1
1.1	395-08-01-045	TOP SHELL (LONG)	4	4.2	330-20-03-556	ACCESS TUBE	1
1.2	394-03-01-021	TOP END	2	5	357-30-03-000	MOUNT BRKT ASSY	2
1.3	394-03-01-024	TANK END STIFFENER	2	6	394-07-00-000	LADDER ASSY	1
1.4	330-66-00-258	STIFFENER END CAP	4	7	364-02-00-006	24" MANHOLE	1
1.5	394-03-01-023	BAFFLE	3	8	340-01-00-498	SERIAL NO. BACK PLATE	1
1.6	300-01-00-012	TANK LIFT HOOK	6	9	364-02-00-280	AXLE ADJUSTMENT ANGLE	2
1.7	394-03-01-022	BOTTOM FLANGED END	2	10	340-01-00-546	LIFT HOOK REINFORCING PLATE	1
1.8	394-03-01-020	BOTTOM SHELL	3	11	340-01-00-555	CENTER LIFT HOOK	1
1.9	396-06-01-139	SHORT BOTTOM SHELL	2	12	315-30-00-108	HYD. HOSE HOOK	1
2	395-08-02-000	RH SILL ASSY - 24,500 L	1	13	395-08-00-051	8" DRAIN PIPE	1
3	395-08-03-000	LH SILL ASSY - 24,500L	1	14	250-96-00-298	CHAIN LUG	1
3.1	395-08-02-046	INNER SILL - 24,500L	1	15	364-02-00-008	LADDER RUNG	1
3.2	395-08-02-047	SILL - 24,500L	1	16	396-06-05-000	28000 L CROSS MEMBER ASSY	1
3.3	395-03-02-031	SILL REINFORCING PLATE	1	17	384-42-00-000	LOW FLANGED TANK OUTLET ASSY	1
3.4	394-03-02-030	SILL CAP	2	18	384-40-00-000	ACCESS HOLE & COVER PLATE KIT	1
3.5	394-03-02-029	SILL STIFFENER	5	19	395-08-00-056	END LIFT HOOK	2
4	330-20-03-000	ACCESS TUBE ASSY	1				

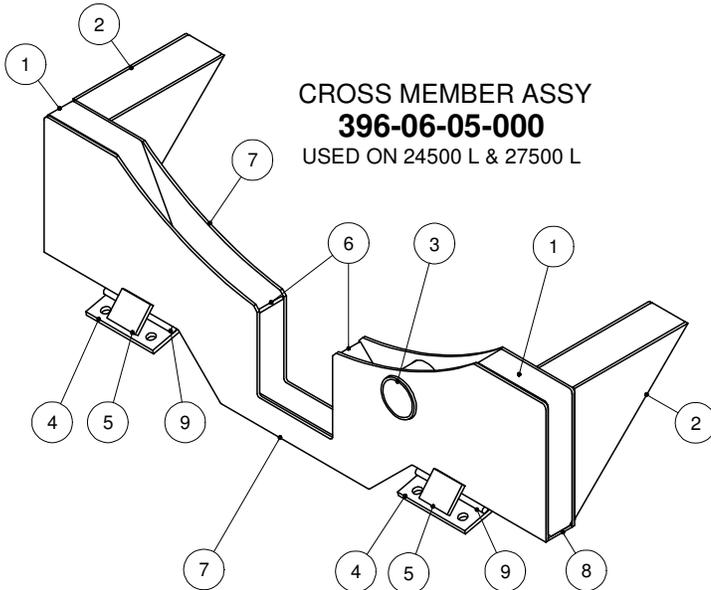

**CROSS MEMBER ASSY**  
**396-06-05-000**  
 USED ON 24500 L & 27500 L

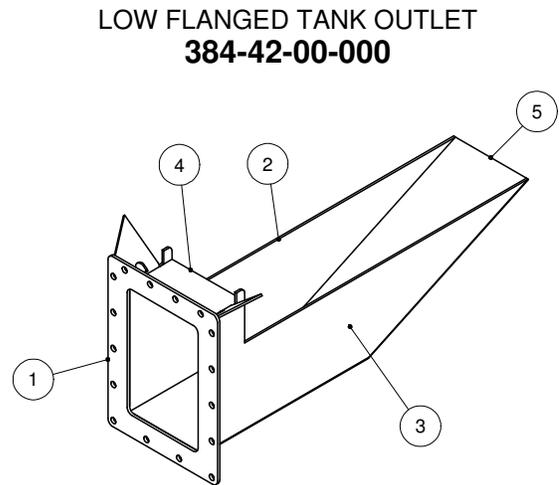


**LOW FLANGED TANK OUTLET**  
**384-42-00-000**

PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY
1	396-06-05-142	CROSS MEMBER CAP	2
2	396-06-05-143	DOUBLE GUSSET	2
3	395-02-00-020	ACCESS TUBE	1
4	358-45-00-148	TONGUE STRAP	2
5	364-02-17-123	TONGE STRAP GUSSET	2
6	396-06-05-144	MIDDLE REINFORCING BAR	2
7	396-06-05-140	28000 L CROSS MEMBER	2
8	396-06-05-141	CROSS MEMBER BOTTOM CAP	1
9	396-06-05-146	5/8" FILLER BAR	2


PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY
1	364-81-02-393	HOUSING FLANGE	1
2	384-42-00-535	LH OUTLET SIDE PC	1
3	384-42-00-536	RH OUTLET SIDE PC	1
4	364-01-03-104	OUTLET TOP PC	1
5	384-42-00-537	OUTLET BOTTOM PC	1

# SLIMLINE TONGUE & HITCH KIT

PARTS LIST				PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY	ITEM	PART NUMBER	DESCRIPTION	QTY
1	395-07-01-000	24500L & 27500L SL TONGUE ASSY		1 2.4	358-43-00-142	HITCH UPPER GUSSET	2
1.1	395-07-01-041	L.H. TONGUE TUBE	1	3	R07807	3/4" LOCK WASHER	12
1.2	395-07-01-042	R.H. TONGUE TUBE	1	4	R07787	3/4-10 UNC HEX NUT	8
1.3	358-42-00-137	HITCH BOLT PLATE	1	5	R07655	3/4 x 2 1/2 UNC HEX BOLT	8
1.4	315-36-00-147	TONGUE TUBE COVER	2	6	394-03-00-014	TONGUE "U" PC	2
1.5	315-36-00-145	TONGUE BUSHING	2	7	315-39-00-000	LOCK PIN ASSY	2
1.6	315-36-00-146	TONGUE SIDE PC	4	7.1	315-39-00-155	TONGUE LOCK PIN	1
1.7	357-27-00-166	UPPER TONGUE TUBE GUSSET	1	7.2	R07828	1" FLAT WASHER	1
1.8	357-00-00-129	TONGUE REINFORCING PLATE	2	8	R08016	1/4 x 2 COTTER PIN	2
1.9	357-27-00-310	LOWER TONGUE TUBE GUSSET	1	9	R08172	3/4" UNF x 10" - "U" BOLT	2
1.10	395-07-01-059	TONGUE JACK OUTER BRKT	2	10	R07820	3/4" FED. HIGH HEX NUT	4
2	408-04-00-000	HD CLEVIS HITCH ASSY-1 3/4" HOLE	1	11	364-00-00-131	U - BOLT SPACER	2
2.1	408-04-00-011	HITCH PLATE	2	12	R09672	CAUTION PTO LENGTH DECAL	1
2.2	358-43-00-139	HITCH BACK PLATE	1	13	395-14-00-000	8000 LB TONGUE JACK W/SQ MT BRKT	1
2.3	358-43-00-141	HITCH SIDE GUSSET	2	14	357-57-00-000	HD SINGLE POINT HITCH ASSY	1

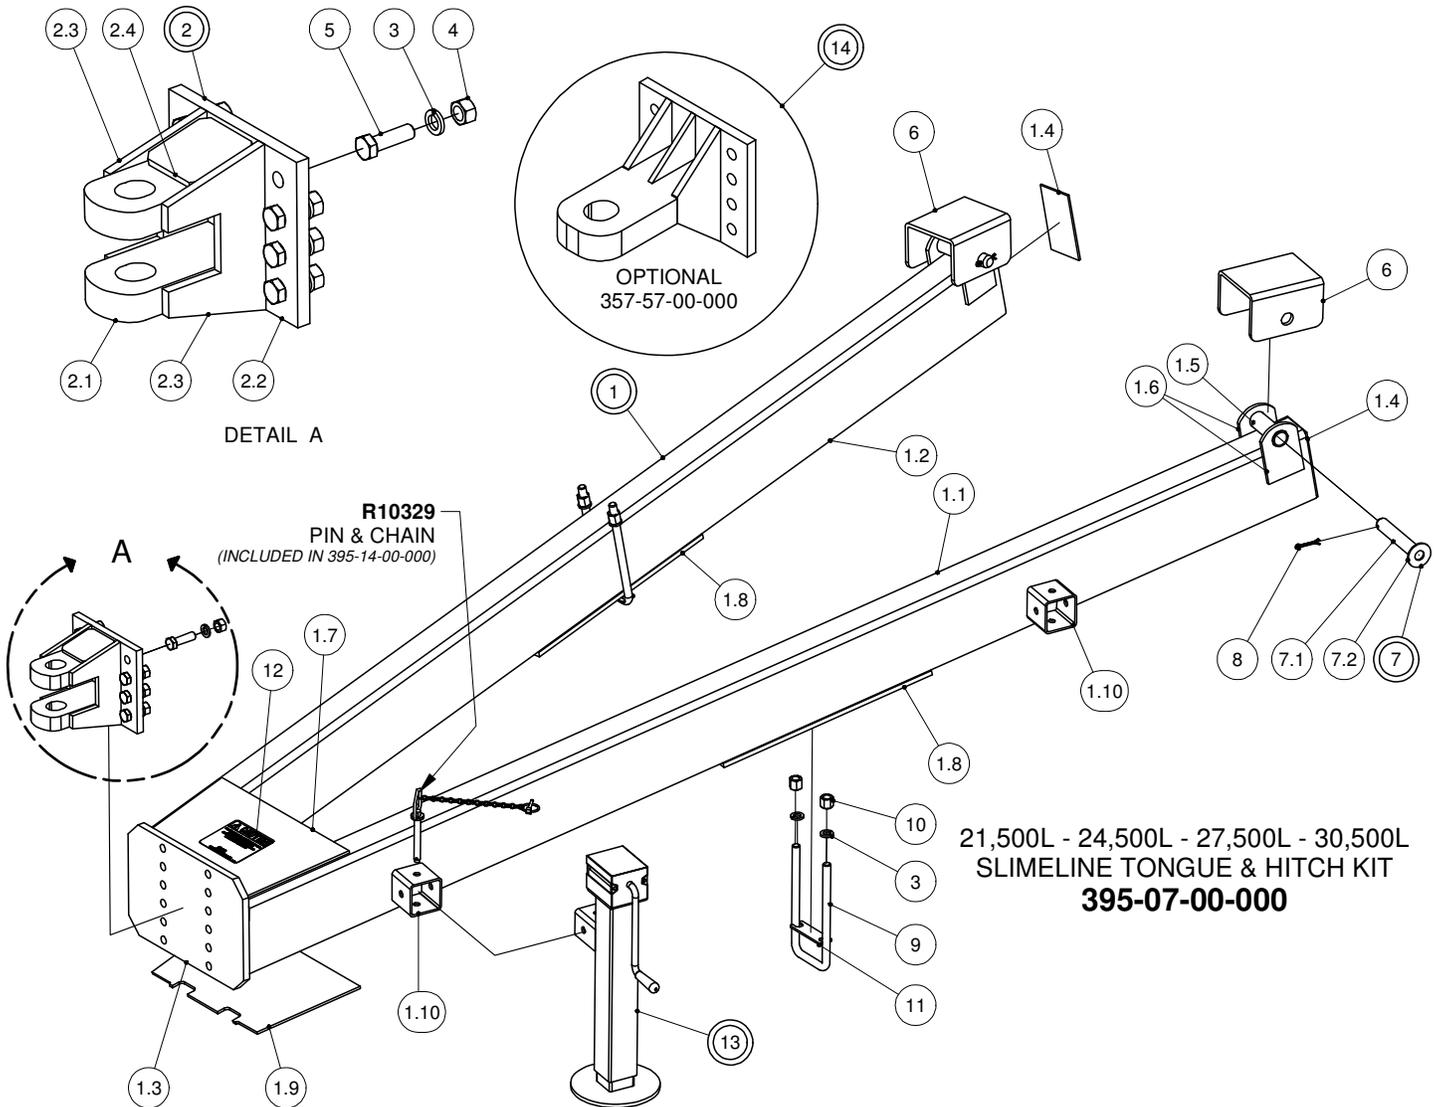

## 24500L & 27500L TIRES

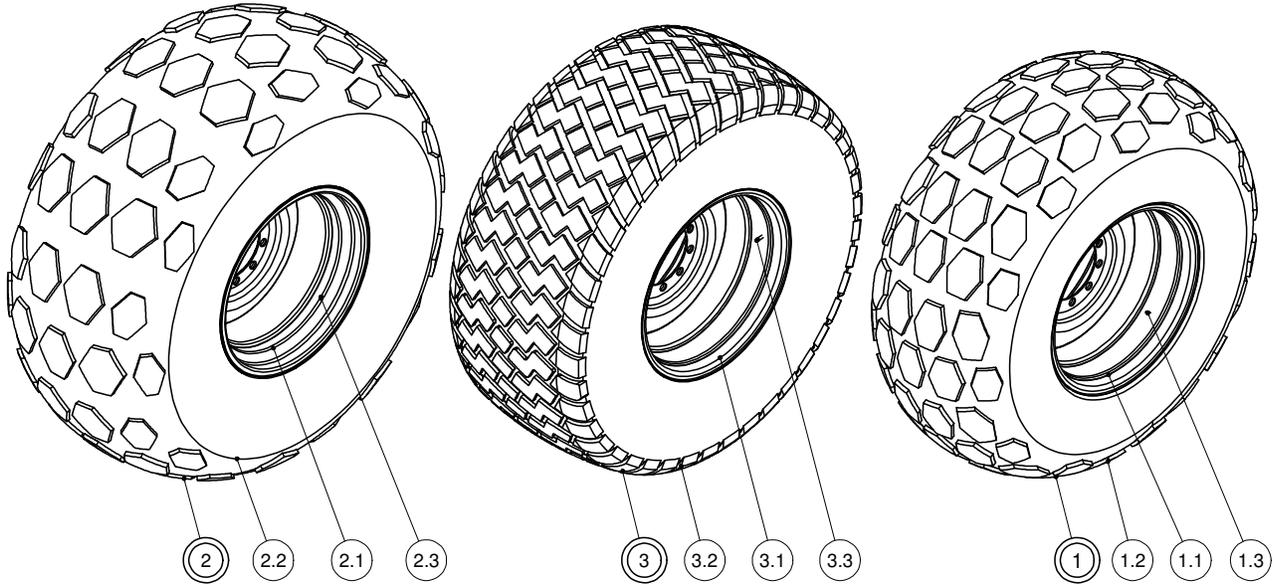


**35.5 x 32 BIAS  
TIRE & WHEEL ASSY  
356-08-00-000**

**30.5 x 32 RADIAL  
TIRE & WHEEL ASSY  
357-07-00-000**

**30.5 x 32 BIAS  
TIRE & WHEEL ASSY  
357-07-00-000**

PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY
1	357-07-00-000	30.5L x 32 TIRE & WHEEL ASSY - 25000LB	4
1.1	R22071	DW25-26 WHEEL 13.19 BC	1
1.2	R22070	30.5L x 32 R3 14 PLY FIRESTONE or 16 PLY GOODYEAR	1
1.3	R20161	VALVE STEM	1
2	356-08-00-000	35.5L x 32 TIRE & WHEEL ASSY - 25000LB	4
2.1	R22090	32x31 RIM - 11.063" PILOT 13.19 B.C.	1
2.2	R22089	35.5L x 32 TIRE	1
2.3	R20161	VALVE STEM	1
3	356-12-00-000	30.5x32 ALLIANCE RADIAL 390 T&W	1
3.1	R22071	DW25-26 WHEEL 13.19 BC	1
3.2	R22569	30.5x32 ALLIANCE RADIAL 390 TIRE	1
3.3	R20161	VALVE STEM	1

# 24500L SLIM LINE AXLE KIT

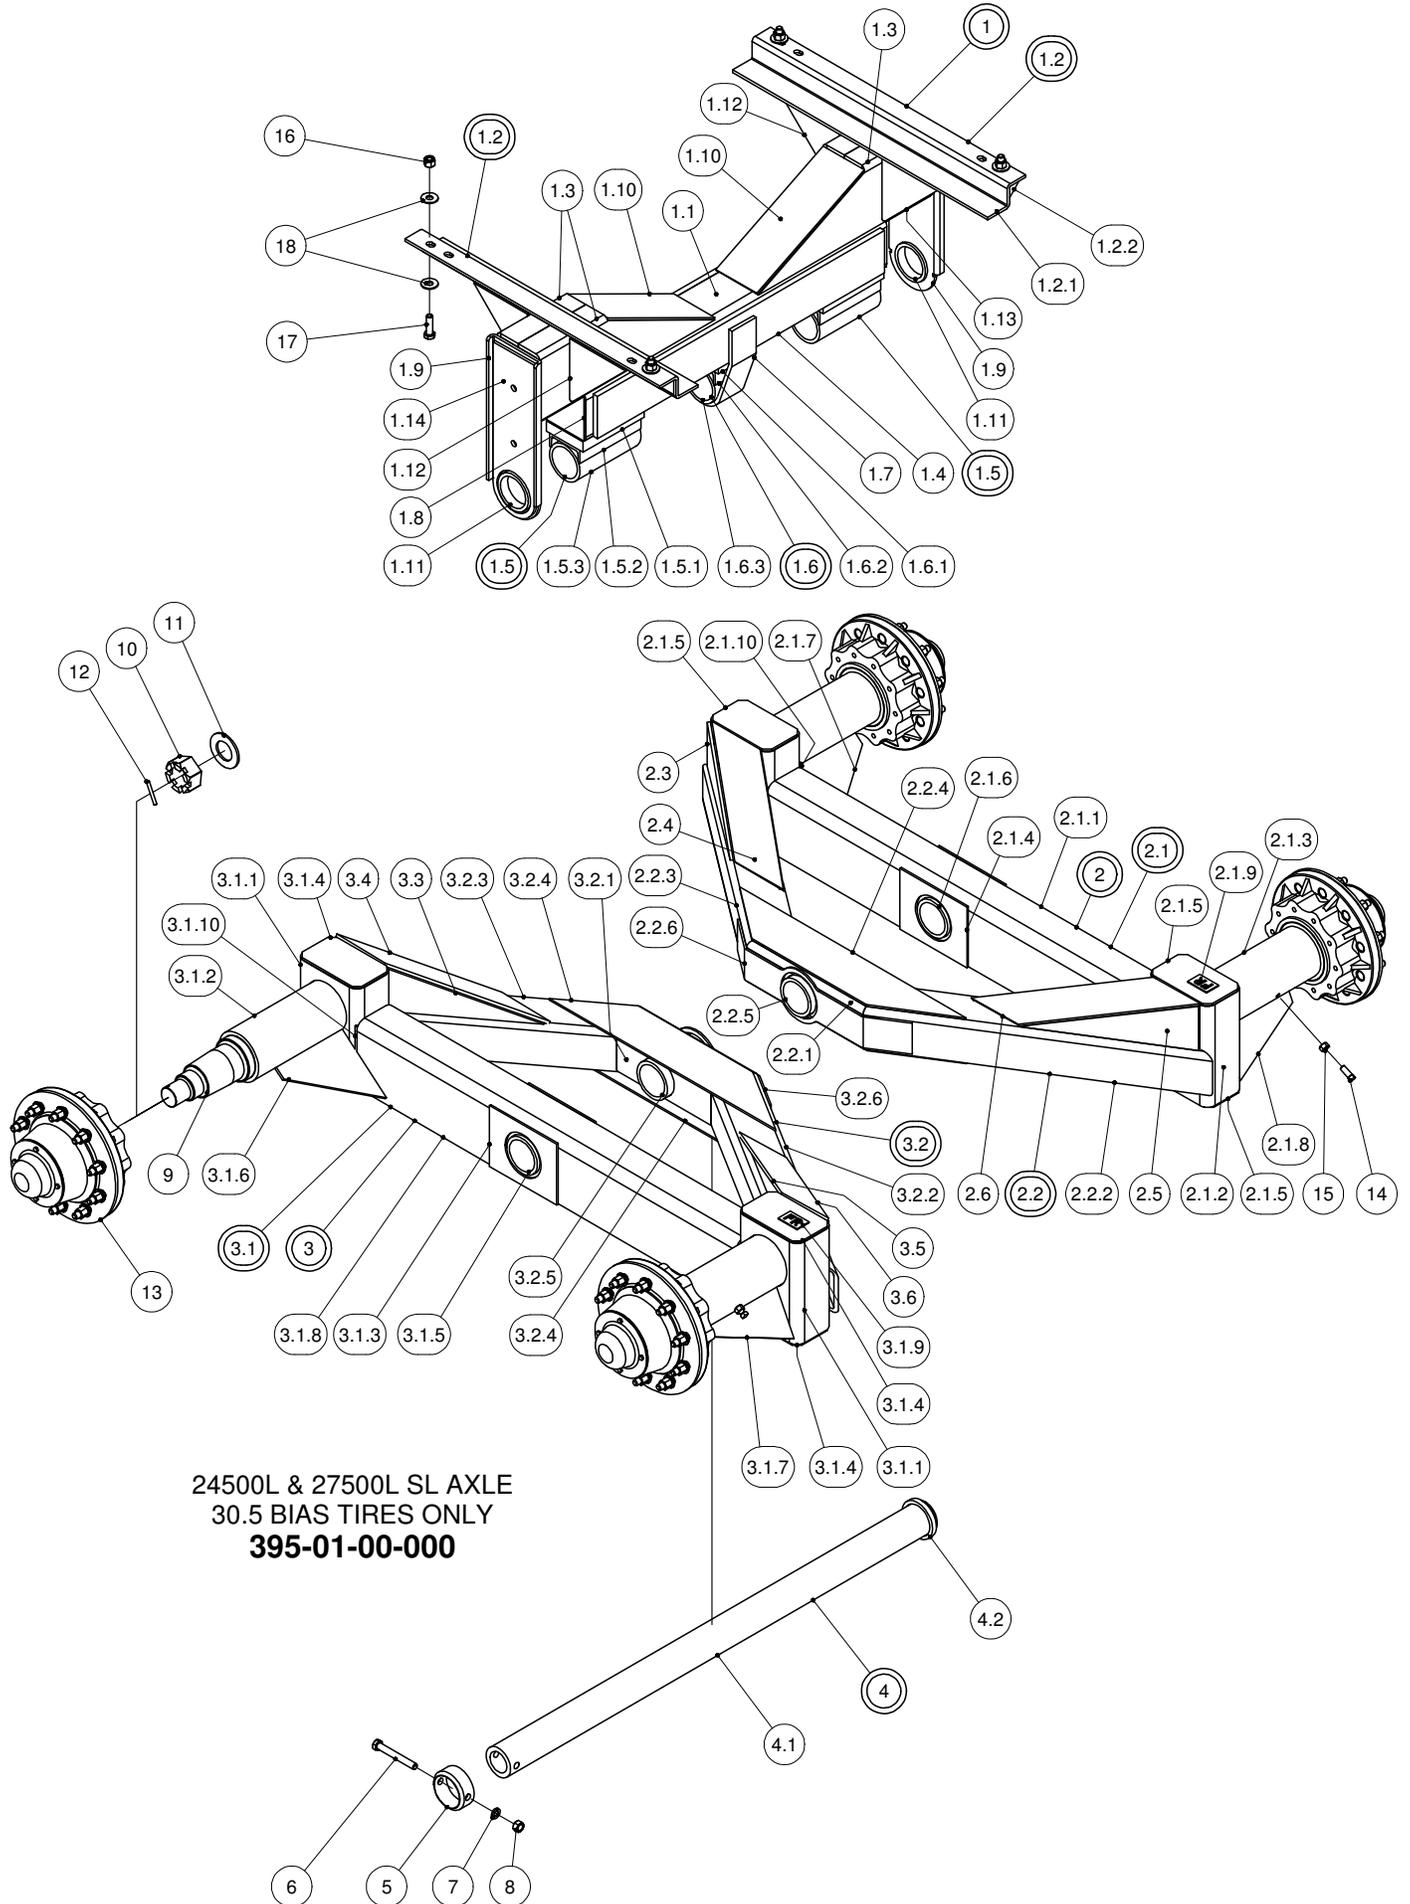

24500L & 27500L SL AXLE  
 30.5 BIAS TIRES ONLY  
**395-01-00-000**

## 24500L SLIM LINE AXLE KIT

PARTS LIST				PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY	ITEM	PART NUMBER	DESCRIPTION	QTY
1	395-01-06-000	BASE FRAME ASSY 18-27500L SL	1	2.4	395-01-03-013	REAR CAP	1
1.1	394-01-01-001	CROSS AXLE SUPPORT TUBE	1	2.5	395-01-03-008	FRONT OUTER GUSSET	2
1.4	395-01-06-014	REINFORCING BAR	2	2.6	395-01-03-010	FRONT CAP	1
1.5	358-09-02-000	OUTER SLEEVE ASSY	2	3	395-01-04-000	RH TANDEM SIDE ASSY	1
1.5.1	358-85-00-251	SPACER BAR	1	3.1	395-01-02-000	LH WALKING BEAM ASSY	1
1.5.2	340-07-08-323	5" CHANNEL @ 9LB	1	3.1.1	395-01-01-002	WALKING BEAM ENDS	2
1.5.3	340-07-08-322	STATIONARY SLEEVE	1	3.1.2	395-01-01-003	SPINDLE SLEEVE	2
1.6	394-01-11-000	INNER SLEEVE ASSY	1	3.1.3	395-01-01-004	REINFORCING PLATE	2
1.6.1	394-01-11-016	SPACER BAR	1	3.1.4	395-01-01-005	TUBE CAPS	4
1.6.2	394-01-11-015	5" CHANNEL @ 9LB	1	3.1.5	394-01-03-012	WALKER SLEEVE	1
1.6.3	394-01-02-006	CENTER SLEEVE TUBE	1	3.1.6	395-01-01-006	INNER SPINDLE SLEEVE GUSSET	2
1.7	395-01-06-015	REINFORCING "U" PC	1	3.1.7	395-01-01-007	INNER SPINDLE SLEEVE GUSSET	2
1.8	340-07-00-329	CROSS AXLE SUPPORT COVER PLATE	2	3.1.8	395-01-01-001	WALKING BEAM	1
1.9	394-01-01-004	HANGER BRKT	2	3.1.9	358-01-00-401	"FRONT" PLATE	1
1.10	394-01-01-003	EXTENSION TUBE CAP	2	3.1.10	394-01-03-056	FILLER BAR	4
1.11	394-01-01-005	HANGER TUBE	2	3.2	394-01-10-000	AXLE "A" FRAME ASSY	1
1.2	330-69-01-000	SILL "Z" PLATE ASSY	2	3.2.1	394-01-10-018	CONNECTOR TUBE	1
1.2.1	358-85-00-253	SILL "Z" PLATE	1	3.2.2	394-01-10-039	FRONT TANDEM ARM	1
1.2.2	330-69-00-550	GUSSET	2	3.2.3	394-01-10-038	REAR TANDEM ARM	1
1.12	394-01-01-034	DOUBLE GUSSET	4	3.2.4	394-01-10-042	GUSSET	2
1.13	394-01-01-033	FILLER PLATE	2	3.2.6	394-01-10-043	REAR TANDEM ARM GUSSET	1
1.3	394-01-13-000	CROSS AXLE EXTENSION TUBE ASSY	2	3.2.5	358-83-01-235	WALKER SLEEVE	1
1.14	395-01-06-065	HANGER BRKT REINF PLATE	2	3.3	395-01-03-011	REAR OUTER GUSSET	2
2	395-01-03-000	LH TANDEM SIDE ASSY	1	3.4	395-01-03-013	REAR CAP	1
2.1	395-01-01-000	LH WALKING BEAM ASSY	1	3.5	395-01-03-008	FRONT OUTER GUSSET	2
2.1.1	395-01-01-001	WALKING BEAM	1	3.6	395-01-03-010	FRONT CAP	1
2.1.2	395-01-01-002	WALKING BEAM ENDS	2	4	395-01-05-000	MAIN AXLE TUBE ASSY-24500L & UP	1
2.1.3	395-01-01-003	SPINDLE SLEEVE	2	4.1	395-01-05-021	MAIN AXLE TUBE	1
2.1.4	395-01-01-004	REINFORCING PLATE	2	4.2	340-63-00-538	STOP RING	1
2.1.5	395-01-01-005	TUBE CAPS	4	5	357-00-00-118	RETAINING RING	1
2.1.6	394-01-03-012	WALKER SLEEVE	1	6	R07660	3/4 x 6 UNC HEX BOLT	1
2.1.7	395-01-01-006	INNER SPINDLE SLEEVE GUSSET	2	7	R07807	3/4" LOCK WASHER	1
2.1.8	395-01-01-007	INNER SPINDLE SLEEVE GUSSET	2	8	R07787	3/4-10 UNC HEX NUT	1
2.1.9	358-01-00-401	"FRONT" PLATE	1	9	357-00-00-196	25000 LB SPINDLE	4
2.1.10	394-01-03-056	FILLER BAR	4	10	R22047	SPINDLE NUT 2 1/2" - 12UN	4
2.2	394-01-10-000	AXLE "A" FRAME ASSY	1	11	357-00-00-128	SPINDLE WASHER	4
2.2.1	394-01-10-018	CONNECTOR TUBE	1	12	R07987	3/8 x 3 1/2" ROLL PIN	4
2.2.2	394-01-10-039	FRONT TANDEM ARM	1	13	357-06-00-000	25000 LB HUB COMPLETE	4
2.2.3	394-01-10-038	REAR TANDEM ARM	1	14	R07927	5/8 x 1 1/2 UNC SQ HD SETSCREW	8
2.2.4	394-01-10-042	GUSSET	2	15	R07816	5/8-18 UNF HEX NUT	8
2.2.6	394-01-10-043	REAR TANDEM ARM GUSSET	1	16	R07878	3/4 UNC NYLOCK NUT	4
2.2.5	358-83-01-235	WALKER SLEEVE	1	17	R07655	3/4 x 2 1/2 UNC HEX BOLT	4
2.3	395-01-03-011	REAR OUTER GUSSET	2	18	R07827	3/4" FLAT WASHER	8




## 27500L SLIM LINE AXLE KIT

PARTS LIST				PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY	ITEM	PART NUMBER	DESCRIPTION	QTY
1	396-01-01-000	LH TANDEM SIDE ASSY	1	2.5	396-01-01-115	REAR CAP	1
1.1	396-01-02-000	LH TANDEM WALKING BEAM ASSY	1	2.6	396-01-01-110	FRONT OUTER GUSSET	1
1.1.1	396-01-02-100	WALKING BEAM	1	2.7	396-01-01-111	FRONT INNER GUSSET	1
1.1.2	396-01-02-101	WALKING BEAM END	2	2.8	396-01-01-114	FRONT CAP	1
1.1.3	356-07-02-012	SPINDLE SLEEVE FOR 5 1/2" SPINDLE	2	2.9	358-01-00-401	"FRONT" PLATE	1
1.1.4	394-01-03-017	COVER PLATE	4	3	395-01-06-000	BASE FRAME ASSY 18-27500L SL	1
1.1.5	394-01-03-012	WALKER SLEEVE	1	3.1	394-01-01-001	CROSS AXLE SUPPORT TUBE	1
1.1.6	395-01-01-004	REINFORCING PLATE	2	3.4	395-01-06-014	REINFORCING BAR	2
1.1.7	396-01-02-103	OUTER SPINDLE SLEEVE GUSSET	2	3.5	358-09-02-000	OUTER SLEEVE ASSY	2
1.1.8	396-01-02-102	INNER SPINDLE SLEEVE GUSSET	2	3.5.1	358-85-00-251	SPACER BAR	1
1.1.9	394-01-03-056	FILLER BAR	4	3.5.2	340-07-08-323	5" CHANNEL @ 9LB	1
1.2	396-01-04-000	"A" FRAME ASSY	1	3.5.3	340-07-08-322	STATIONARY SLEEVE	1
1.2.1	396-01-04-109	CONNECTOR TUBE	1	3.6	394-01-11-000	INNER SLEEVE ASSY	1
1.2.2	396-01-04-105	REAR TANDEM ARM	1	3.6.1	394-01-11-016	SPACER BAR	1
1.2.3	396-01-04-104	FRONT TANDEM ARM	1	3.6.2	394-01-11-015	5" CHANNEL @ 9LB	1
1.2.4	358-83-01-235	WALKER SLEEVE	1	3.6.3	394-01-02-006	CENTER SLEEVE TUBE	1
1.2.5	396-01-04-106	GUSSET	2	3.7	395-01-06-015	REINFORCING "U" PC	1
1.2.6	396-01-04-138	REAR TANDEM ARM GUSSET	1	3.8	340-07-00-329	CROSS AXLE SUPPORT COVER PLATE	2
1.3	396-01-01-110	FRONT OUTER GUSSET	1	3.9	394-01-01-004	HANGER BRKT	2
1.4	396-01-01-114	FRONT CAP	1	3.10	394-01-01-003	EXTENSION TUBE CAP	2
1.5	396-01-01-111	FRONT INNER GUSSET	1	3.11	394-01-01-005	HANGER TUBE	2
1.6	396-01-01-112	REAR OUTER GUSSET	1	3.2	330-69-01-000	SILL "Z" PLATE ASSY	2
1.7	396-01-01-113	REAR INNER GUSSET	1	3.2.1	358-85-00-253	SILL "Z" PLATE	1
1.8	396-01-01-115	REAR CAP	1	3.2.2	330-69-00-550	GUSSET	2
1.9	358-01-00-401	"FRONT" PLATE	1	3.12	394-01-01-034	DOUBLE GUSSET	4
2	396-01-03-000	RH TANDEM SIDE ASSY	1	3.13	394-01-01-033	FILLER PLATE	2
2.1	396-01-05-000	RH TANDEM WALKING BEAM ASSY	1	3.3	394-01-13-000	CROSS AXLE EXTENSION TUBE ASSY	2
2.1.1	396-01-02-100	WALKING BEAM	1	3.14	395-01-06-065	HANGER BRKT REINF PLATE	2
2.1.2	396-01-02-101	WALKING BEAM END	2	4	357-00-00-196	25000 LB SPINDLE	4
2.1.3	356-07-02-012	SPINDLE SLEEVE FOR 5 1/2" SPINDLE	2	5	R07786	5/8 HEX NUT	8
2.1.4	394-01-03-017	COVER PLATE	4	6	R07927	5/8 x 1 1/2 SQ. HD. SET SCREW	8
2.1.5	394-01-03-012	WALKER SLEEVE	1	7	357-06-00-000	25000 LB HUB COMPLETE	4
2.1.6	395-01-01-004	REINFORCING PLATE	2	8	357-00-00-128	SPINDLE WASHER	4
2.1.7	396-01-02-103	OUTER SPINDLE SLEEVE GUSSET	2	9	R22047	SPINDLE NUT 2 1/2" - 12UN	4
2.1.8	396-01-02-102	INNER SPINDLE SLEEVE GUSSET	2	10	R07987	3/8 x 3 1/2" ROLL PIN	4
2.1.9	394-01-03-056	FILLER BAR	4	11	395-01-05-000	MAIN AXLE TUBE ASSY-24500L & UP	1
2.2	396-01-04-000	"A" FRAME ASSY	1	11.1	395-01-05-021	MAIN AXLE TUBE	1
2.2.1	396-01-04-109	CONNECTOR TUBE	1	11.2	340-63-00-538	STOP RING	1
2.2.2	396-01-04-105	REAR TANDEM ARM	1	12	357-00-00-118	RETAINING RING	1
2.2.3	396-01-04-104	FRONT TANDEM ARM	1	13	R07660	3/4 x 6" HEX BOLT	1
2.2.4	358-83-01-235	WALKER SLEEVE	1	14	R07807	3/4" LOCK WASHER	1
2.2.5	396-01-04-106	GUSSET	2	15	R07787	3/4 - 10 UNC HEX NUT	1
2.2.6	396-01-04-138	REAR TANDEM ARM GUSSET	1	16	R07655	3/4 x 2 1/2 UNC HEX BOLT	4
2.3	396-01-01-112	REAR OUTER GUSSET	1	17	R07827	3/4" FLAT WASHER	8
2.4	396-01-01-113	REAR INNER GUSSET	1	18	R07878	3/4 UNC NYLOCK NUT	4

## 25000LB HUB COMPLETE


25000LB 10 BOLT HUB COMPLETE  
**357-06-00-000**

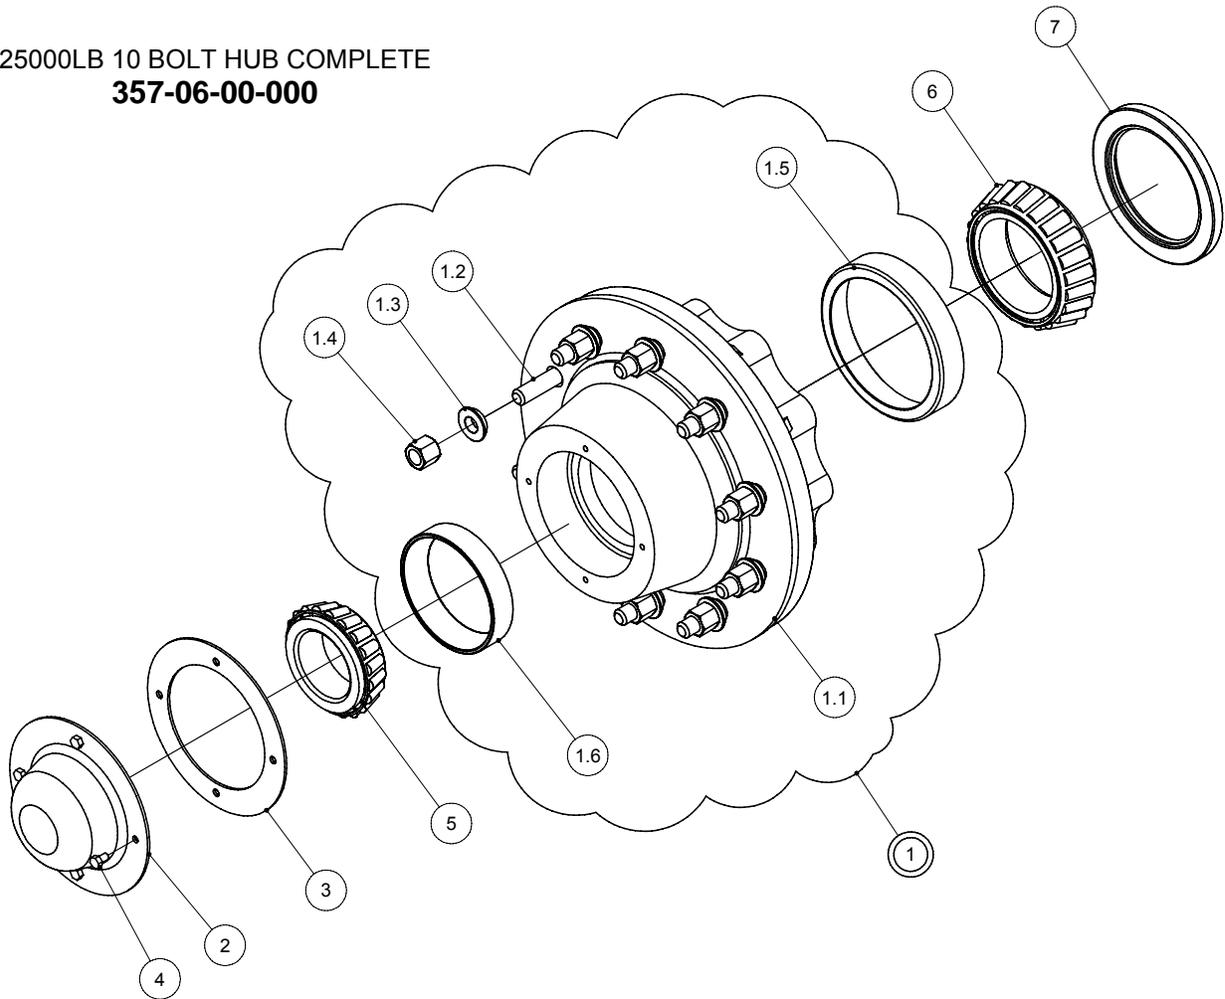

PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY
1	357-06-00-215	25000LB HUB w/ CUPS,BLTS,NUTS & WSHRS	1
1.1	25000LB HUB	25000LB HUB - MACHINED LESS BEARINGS	1
1.2	R20096	3/4" WHEEL BOLTS	10
1.3	R20152	3/4" SPHERICAL WASHER	10
1.4	R07820	3/4" FED. HIGH HEX NUT	10
1.5	R22038	INNER CUP 71750	1
1.6	R22037	OUTER CUP 653	1
2	R22041	DUST CAP - 25000LB HUB	1
3	R22042	DUST CAP GASKET	1
4	R07694	DUST CAP BOLT 5/16 - 18 x 1/2	4
5	R22039	OUTER CONE - 663	1
6	R22040	INNER CONE - 71455	1
7	R22045	HUB SEAL 456192	1


## 24500L SL 6" DISCHARGE PIPE KIT

PARTS LIST				PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY	ITEM	PART NUMBER	DESCRIPTION	QTY
1	395-09-01-000	6" DISCHARGE PIPE ASSY - 24,500L	1	3.3	364-25-00-067	DISCHARGE PIPE END PC	1
1.1	396-08-01-145	28000 L VERTICAL DISCHARGE PIPE	1	3.4	364-19-00-087	DISCHARGE PIPE FLANGE	1
1.2	395-09-01-049	HORIZONTAL DISCHARGE PIPE-24,500L	1	4	364-31-00-000	HOSE TUBE ASSY - 6"	1
1.3	364-19-00-082	DISCHARGE PIPE CORNER PC	1	4.1	364-01-03-376	DISCHARGE RING	1
1.4	364-19-00-087	DISCHARGE PIPE FLANGE	1	4.2	364-01-03-063	DISCHARGE TUBE	1
2	357-16-00-000	6" DISCHARGE PIPE HOLDER KIT	4	5	364-68-00-000	SPLASH PLATE ASSY	1
2.1	357-16-01-000	DISCHARGE PIPE BASE HOLDER ASSY	1	5.1	364-68-00-215	CLAMPING TUBE	1
2.1.1	357-16-01-130	BASE PLATE	1	5.2	364-21-00-069	SPLASH PLATE	1
2.1.2	357-16-01-131	LOWER STUB	1	5.3	364-21-00-224	SPLASH PLATE WING	2
2.2	357-16-02-000	PIPE HOLDER ASSY	1	5.4	364-21-00-071	CLAMPING TUBE BRKT	2
2.2.1	357-16-02-137	UPPER STUB	1	6	364-00-00-066	HOSE SECTION	1
2.2.2	357-16-00-133	TOP PIPE HOLDER - 6"	1	7	R02482	6" HOSE CLAMP	2
2.3	357-16-00-133	TOP PIPE HOLDER - 6"	1	8	R07804	7/16 LOCK WASHER	6
2.4	R07620	3/8 x 1 1/2 HEX BOLT	2	9	R07784	7/16 HEX NUT	6
2.5	R07783	3/8 HEX NUT	3	10	R07671	7/16 x 1 1/4 HEX BOLT	6
2.6	R07803	3/8 LOCK WASHER	3	11	R07783	3/8 HEX NUT	7
2.7	R07621	3/8 x 2" HEX BOLT	1	12	R07803	3/8 LOCK WASHER	7
3	364-25-00-000	DISCHARGE PIPE END SECTION ASSY	1	13	R07622	3/8 x 2 1/2 HEX BOLT	2
3.1	364-25-00-088	DISCHARGE PIPE FLANGE PC	1	14	R07619	3/8 x 1 HEX BOLT	5
3.2	364-19-00-082	DISCHARGE PIPE CORNER PC	1				

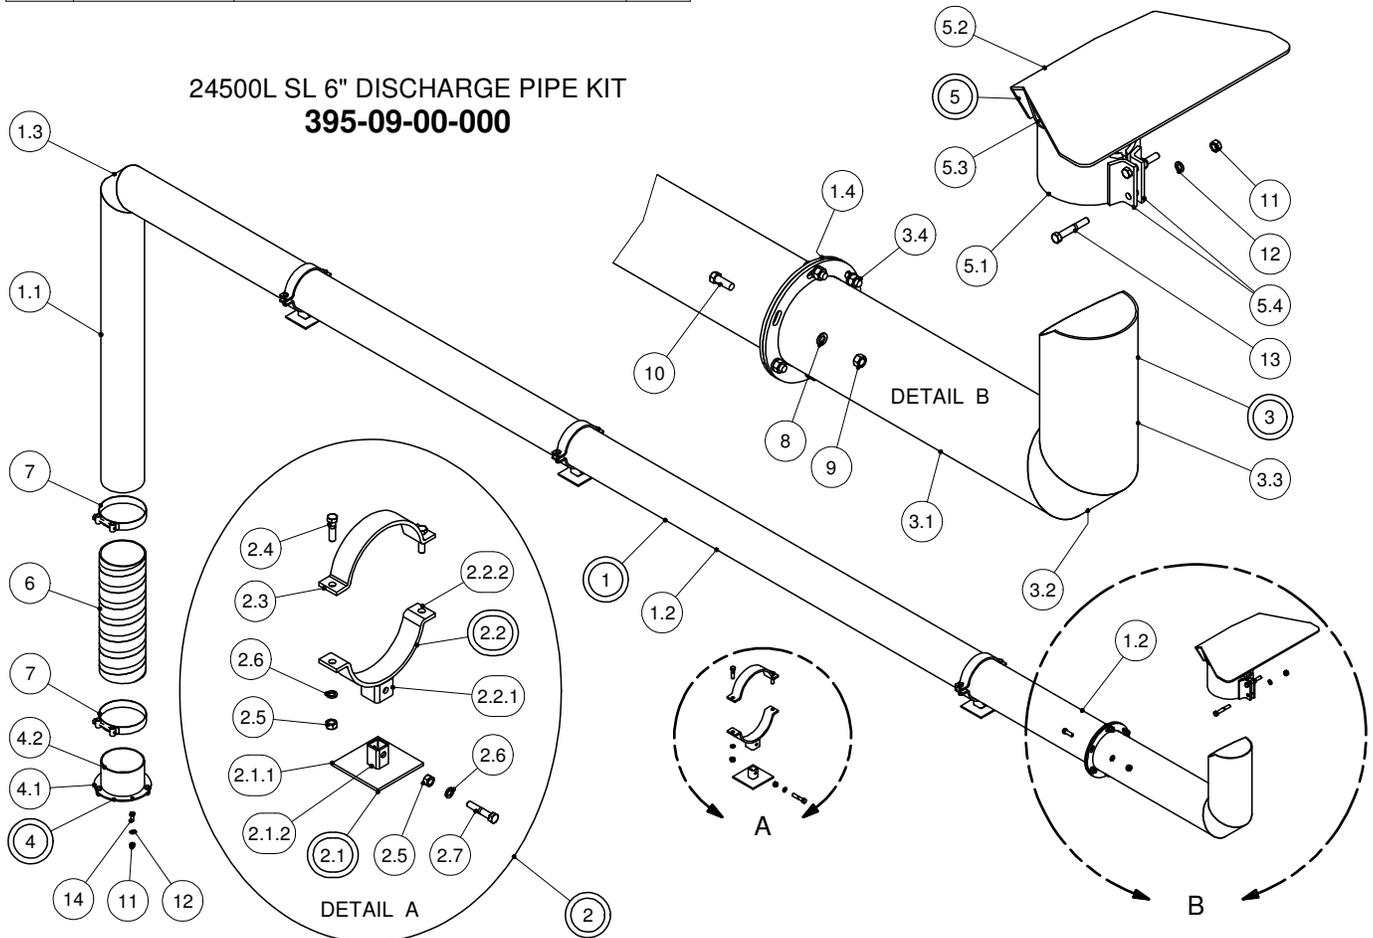

## 24500L SL 8" DISCHARGE PIPE KIT

PARTS LIST				PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY	ITEM	PART NUMBER	DESCRIPTION	QTY
1	395-10-01-000	24,500L 8" DISCHARGE PIPE ASSY	1	3.1.2	358-92-03-307-B	8" EXTENSION PIPE CORNER PC	1
1.1	358-92-02-524	DISCHARGE ELBOW PC	1	3.1.3	358-92-03-307-A	8" EXTENSION TUBE END PC	1
1.2	395-10-01-050	DISCHARGE PIPE - 8" - 24,500L	1	3.2	358-92-02-306	8" DISCHARGE FLANGE	1
1.3	358-92-02-306	8" DISCHARGE FLANGE	1	4	358-92-04-000	8" SPLASH PLATE ASSY	1
1.4	396-07-01-134	28000L 8" VERTICAL DISCHARGE PIPE	1	4.1	358-92-04-308	8" SPLASH PLATE	1
2	357-17-00-000	8" DISCHARGE PIPE HOLDER KIT	4	4.2	358-92-04-309	8" SPLASH PLATE TUBE	1
2.1	357-16-01-000	DISCHARGE PIPE BASE HOLDER ASSY	1	4.3	358-92-04-310	WING FOR 8" SPLASH PLATE	2
2.1.1	357-16-01-130	BASE PLATE	1	4.4	358-92-04-311	CLAMPING TUBE BRKT	2
2.1.2	357-16-01-131	LOWER STUB	1	6	358-92-01-000	8" HOUSING RING & TUBE ASSY	1
2.2	357-17-01-000	PIPE HOLDER ASSY - 8"	1	6.1	358-92-01-302	8" HOUSING OUTLET TUBE	1
2.2.1	357-16-02-137	UPPER STUB	1	6.2	358-92-01-301	8" HOUSING DISCHARGE RING	1
2.2.2	357-17-00-135	TOP PIPE HOLDER - 8"	1	5	358-92-00-329	8" DISCHARGE HOSE	1
2.3	357-17-00-135	TOP PIPE HOLDER - 8"	1	7	R02484	8" SUCTION HOSE CLAMP	2
2.4	R07621	3/8 x 2" HEX BOLT	1	8	R07783	3/8-16 UNC HEX NUT	7
2.5	R07620	3/8 x 1 1/2 HEX BOLT	2	9	R07619	3/8 x 1 UNC HEX BOLT	5
2.6	R07803	3/8 LOCK WASHER	3	10	R07803	3/8" LOCK WASHER	7
2.7	R07783	3/8 HEX NUT	3	11	R07622	3/8 x 2 1/2 UNC HEX BOLT	2
3	358-92-03-000	8" EXTENSION PIPE ASSY	1	12	R07671	7/16 x 1 1/4 UNC HEX BOLT	6
3.1	358-92-03-307	8" EXTENSION PIPE	1	13	R07804	7/16" LOCK WASHER	6
3.1.1	358-92-03-307-C	8" EXTENSION PIPE - HORIZONTAL PC	1	14	R07784	7/16-14 UNC HEX NUT	6

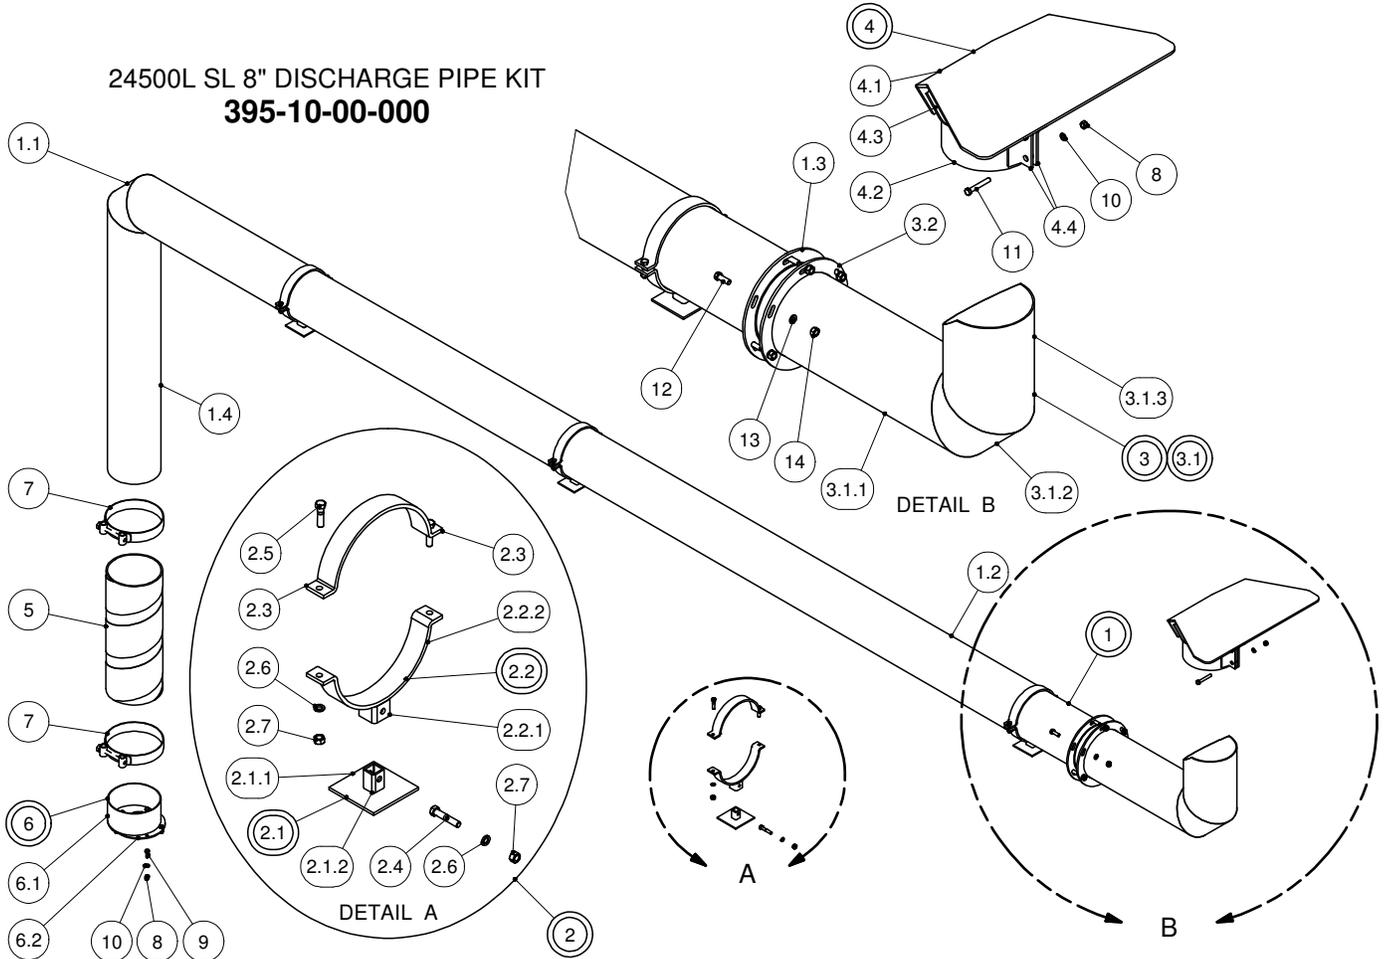


# FAN & HOUSING KIT

**NOTE:**

**THESE NUMBERS ARE FOR REPLACEMENT KITS ONLY**

**1000 RPM FAN, HOUSING & GUARD KIT 364-56-00-000**

**540 RPM FAN, HOUSING & GUARD KIT 364-23-00-000**

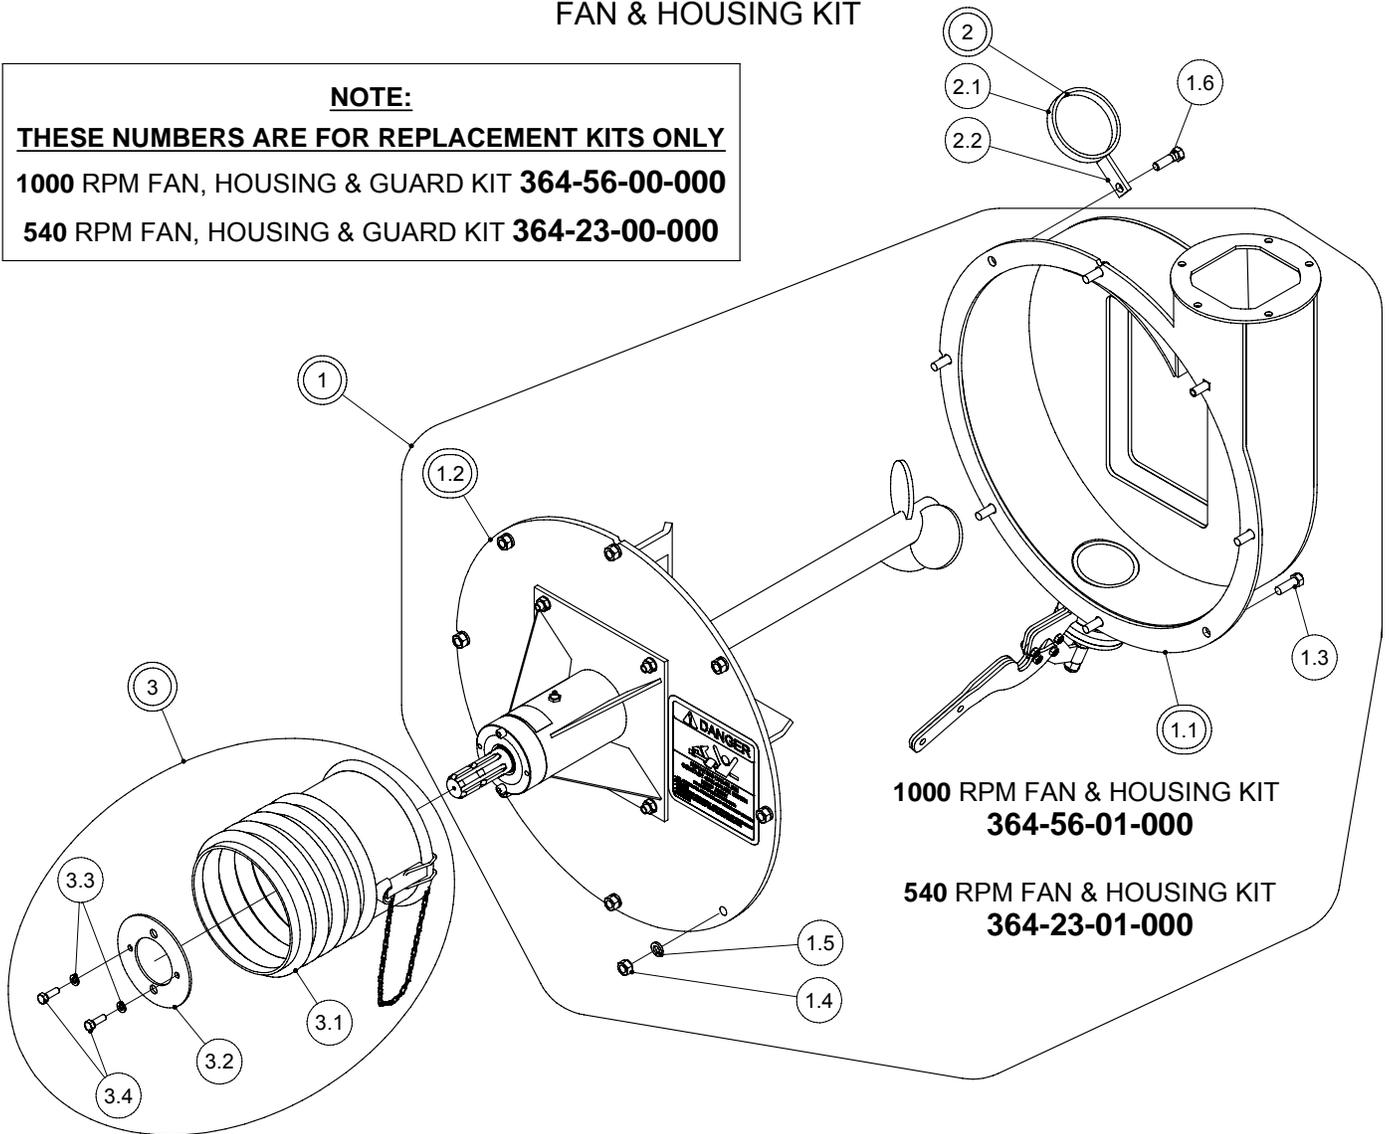


**1000 RPM FAN & HOUSING KIT  
364-56-01-000**

**540 RPM FAN & HOUSING KIT  
364-23-01-000**

PARTS LIST

ITEM	PART NUMBER	DESCRIPTION	QTY
1	364-56-01-000	1000 FAN & HOUSING KIT	1
1	364-23-01-000	540 FAN & HOUSING KIT	1
1.1	364-81-00-000	FAN HOUSING ASSY COMPLETE	1
1.2	364-66-01-000	1000 RPM FAN & COVER PLATE	1
1.2	364-65-01-000	540 RPM FAN & COVER PLATE	1
1.3	R07671	7/16 x 1 1/4 HEX BOLT	6
1.4	R07784	7/16 HEX NUT	8
1.5	R07804	7/16 LOCK WASHER	8
1.6	R07629	7/16 x 1 1/2 HEX BOLT	1
2	364-41-00-000	PTO HOLDER ASSY	1
2.1	364-41-00-132	PTO HOLDER	1
2.2	364-41-00-133	PTO HOLDER BRACKET	1
3	364-69-00-000	PLASTIC PTO GUARD KIT	1
3.1	R22196	SHEILD CONE ASSY	1
3.2	364-00-00-448	GUARD SUPPORT	1
3.3	R07802	5/16 LOCK WASHER	2
3.4	R07611	5/16 x 1" HEX BOLT	2

# FAN HOUSING ASSY

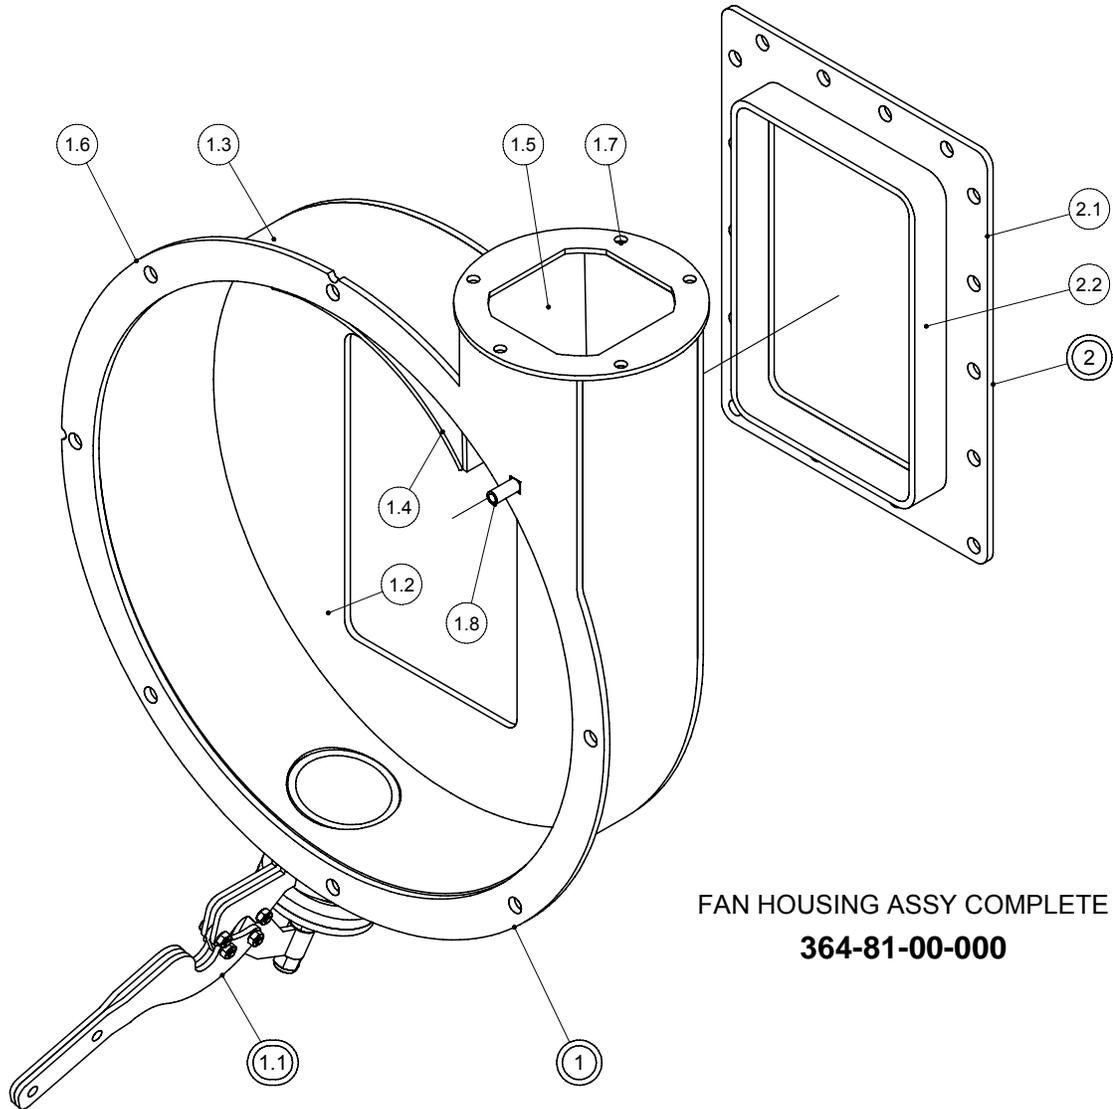


FAN HOUSING ASSY COMPLETE  
**364-81-00-000**

PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY
1	364-81-01-000	FAN HOUSING ASSY LESS FLANGE	1
1.1	364-62-00-000	DRAIN PLUG KIT	1
1.2	364-01-03-106	HOUSING BACK PLATE	1
1.3	364-01-03-018	HOUSING BAND	1
1.4	364-01-03-156	HOUSING BAND AID	1
1.5	364-01-03-081	FAN HOUSING VERTICAL PC	1
1.6	364-01-03-019	HOUSING FLANGE	1
1.7	364-01-03-376	DISCHARGE RING	1
1.8	R07774	7/16 x 1 1/4" GR 5 CARRIAGE BOLT	1
2	364-81-02-000	HOUSING INLET FLANGE ASSY	1
2.1	364-81-02-393	HOUSING FLANGE	1
2.2	364-81-02-424	INLET EXTENSION TUBE	1

## CHT FAN & HOUSING KIT

540 RPM CHT FAN & HOUSING KIT **357-48-00-000**

1000 RPM CHT FAN & HOUSING KIT **357-49-00-000**

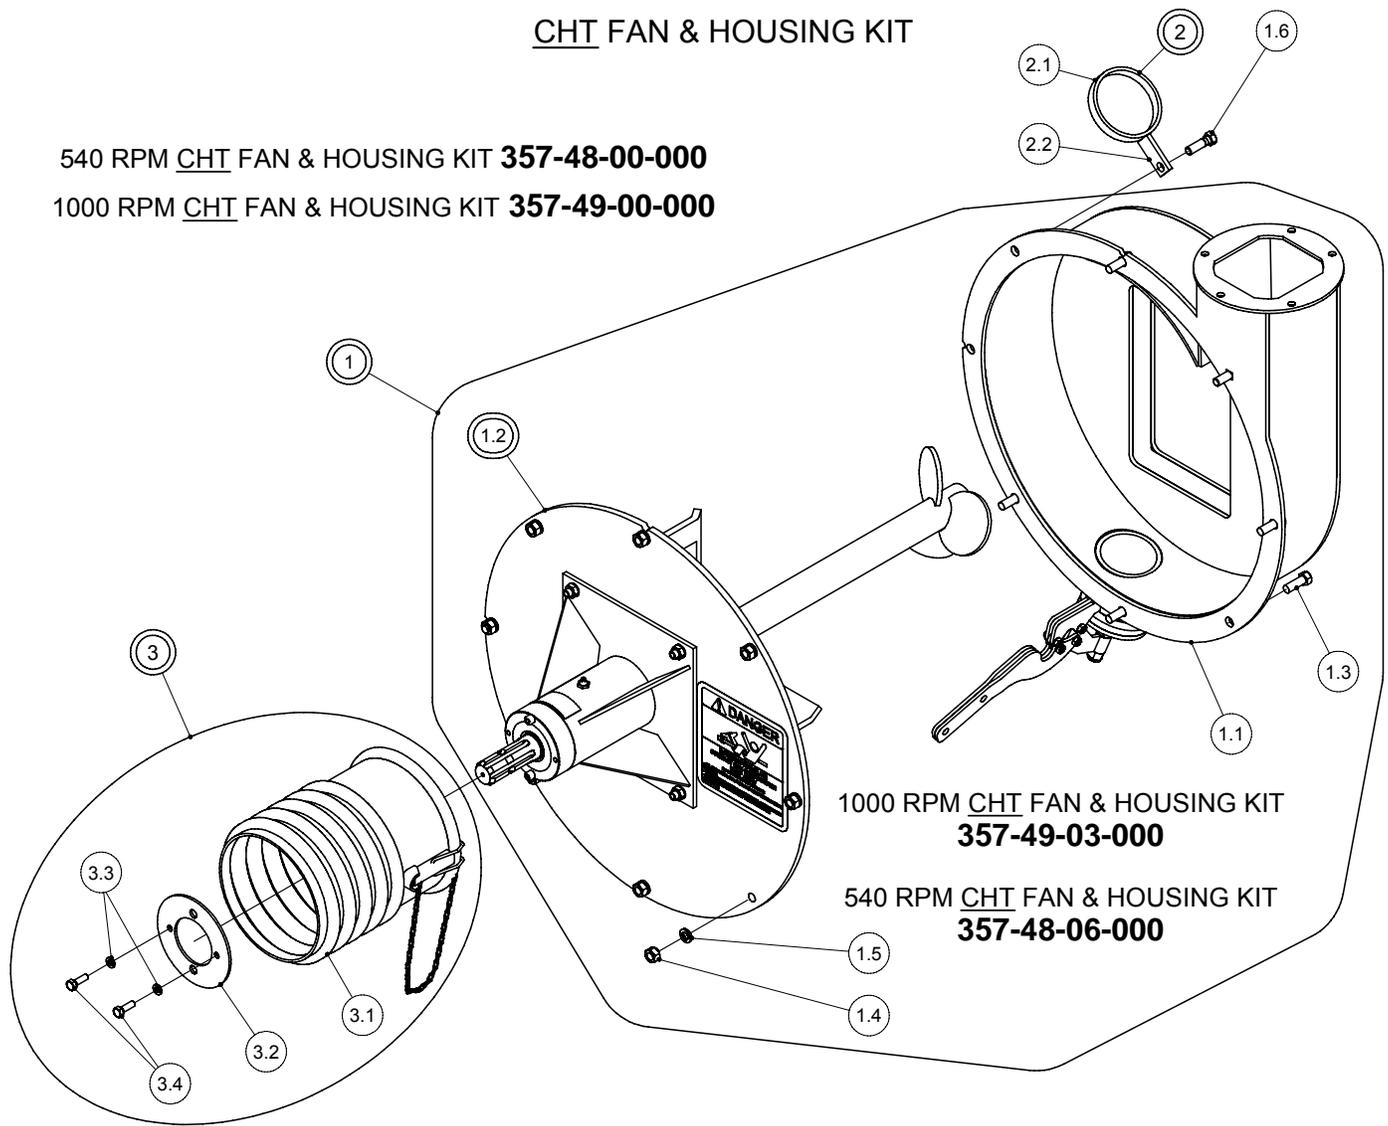


### PARTS LIST

ITEM	PART NUMBER	DESCRIPTION	QTY
1	357-49-03-000	CHT 1000 RPM FAN & HOUSING KIT	OPT
1	357-48-06-000	CHT 540 FAN & HOUSING KIT	1
1.1	357-48-03-000	CHT FAN HOUSING ASSY COMPLETE	1
1.2	364-66-01-000	1000 RPM FAN & COVER PALTE	OPT
1.2	364-65-01-000	540 RPM FAN & COVER PLATE	1
1.3	R07671	7/16 x 1 1/4 HEX BOLT	6
1.4	R07784	7/16 HEX NUT	8
1.5	R07804	7/16 LOCK WASHER	8
1.6	R07629	7/16 x 1 1/2 HEX BOLT	1
2	364-41-00-000	PTO HOLDER ASSY	1
2.1	364-41-00-132	PTO HOLDER	1
2.2	364-41-00-133	PTO HOLDER BRACKET	1
3	364-69-00-000	PLASTIC PTO GUARD KIT	1
3.1	R22196	SHEILD CONE ASSY	1
3.2	364-00-00-448	GUARD SUPPORT	1
3.3	R07802	5/16 LOCK WASHER	2
3.4	R07611	5/16 x 1" HEX BOLT	2

OPT = OPTIONAL

## CHT FAN HOUSING ASSY

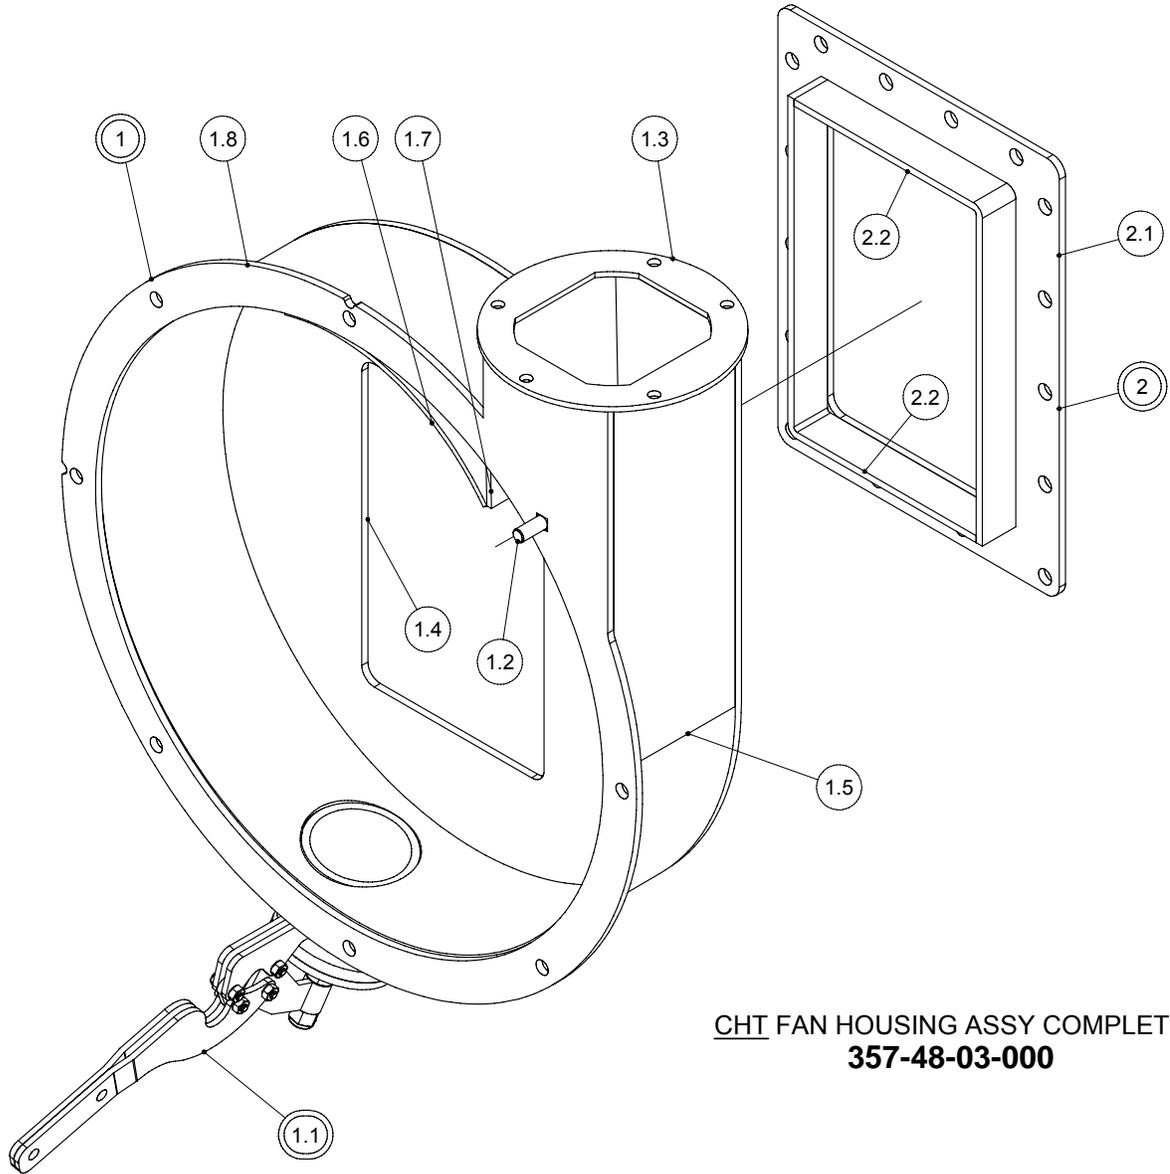


**CHT FAN HOUSING ASSY COMPLETE**  
**357-48-03-000**

PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY
1	357-48-01-000	CHT FAN HOUSING ASSY LESS FLANGE	1
1.1	364-62-00-000	DRAIN PLUG KIT	1
1.2	R07774	7/16 x 1 1/4 UNC CARRIAGE BOLT	1
1.3	364-01-03-376	DISCHARGE RING	1
1.4	357-48-01-228	CHT HOUSING BACK PLATE	1
1.5	357-48-01-232	CHT HOUSING BAND	1
1.6	357-48-01-231	CHT HOUSING BAND AID	1
1.7	357-48-01-230	CHT FAN HOUSING VERTICAL PC	1
1.8	357-48-01-229	CHT HOUSING FLANGE	1
2	357-48-02-000	CHT HOUSING INLET FLANGE ASSY	1
2.1	364-81-02-393	HOUSING FLANGE	1
2.2	357-48-02-233	CHT INLET EXTENSION	2

# 540 RPM FAN, COVER PLATE, & BRG KIT


**NOTE:**  
**THIS NUMBER IS USED FOR REPLACEMENT KITS ONLY**  
**540 RPM FAN, COVER PLATE, BEARING KIT & GUARD 364-65-00-000**

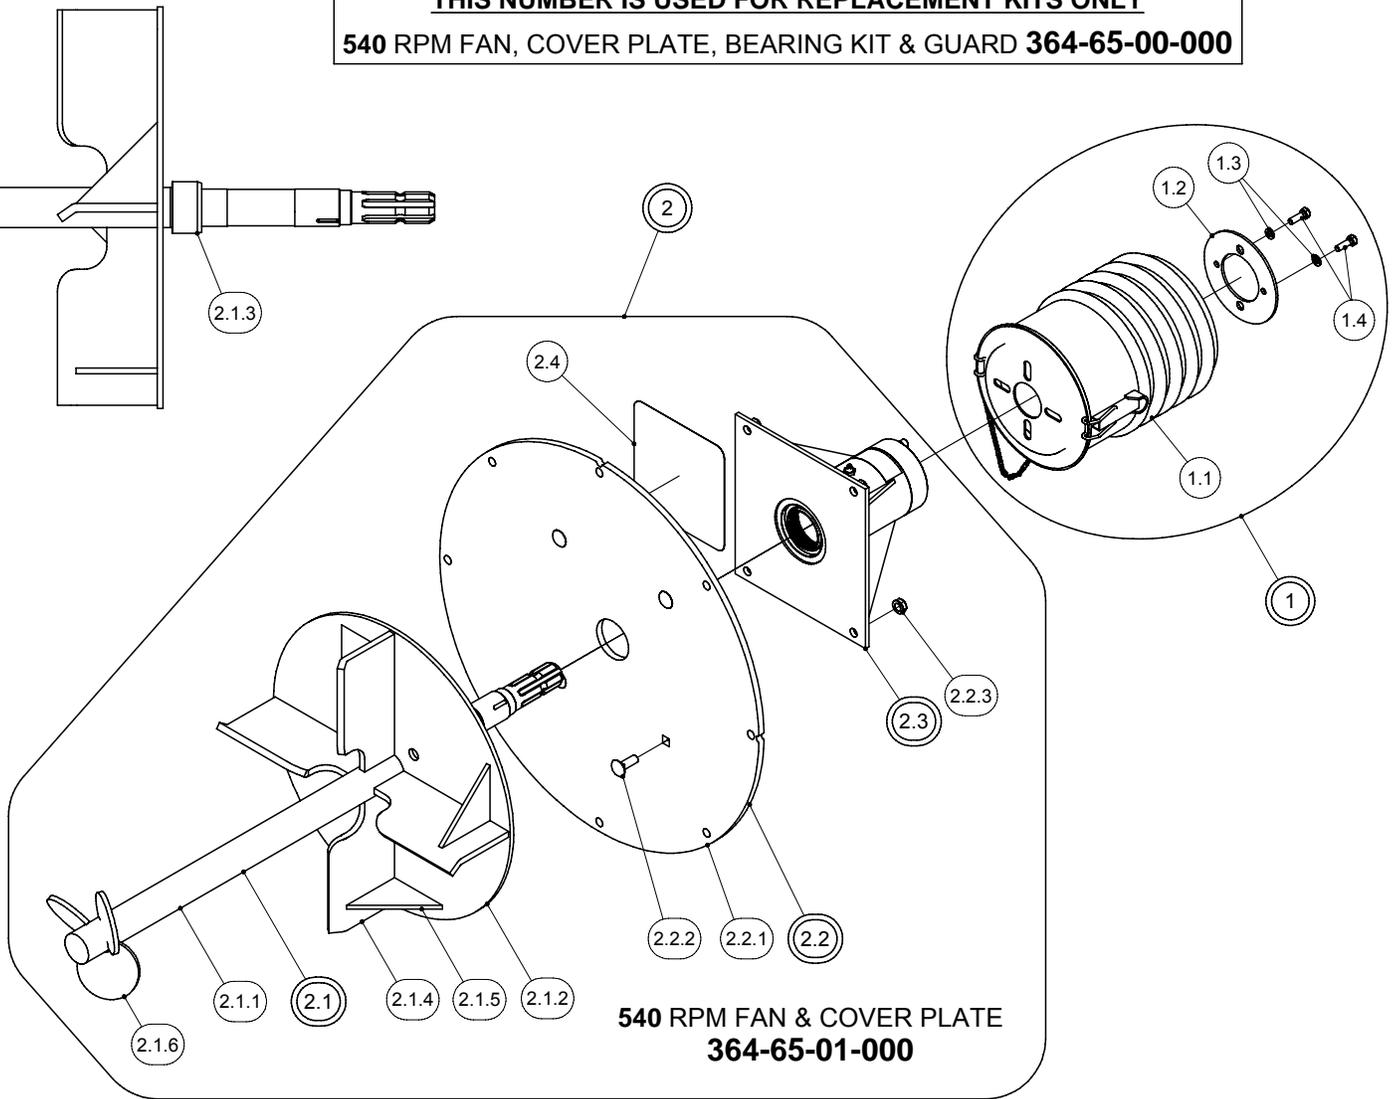

PARTS LIST				PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY	ITEM	PART NUMBER	DESCRIPTION	QTY
1	364-69-00-000	PLASTIC PTO GUARD KIT	1	2.1.4	364-63-00-208	CHT 540 RPM FAN BLADE	4
1.1	R22196	SHEILD CONE ASSY	1	2.1.5	364-72-00-422	FAN BLADE GUSSET	4
1.2	364-00-00-448	GUARD SUPPORT	1	2.1.6	364-72-00-227	AGITATOR BLADE	3
1.3	R07802	5/16 LOCK WASHER	2	2.2	364-67-00-000	COVER PLATE ASSY	1
1.4	R07611	5/16 x 1" HEX BOLT	2	2.2.1	364-67-00-211	HOUSING COVER PLATE	1
2	364-65-01-000	540 RPM FAN & COVER PLATE	1	2.2.2	R07774	7/16 x 1 1/4" GR 5 CARRIAGE BOLT	4
2.1	364-72-00-000	540 RPM SHAFT & IMP. ASSY - CHT	1	2.2.3	R07879	7/16 FLANGE NUT	4
2.1.1	364-72-00-226	FAN SHAFT	1	2.3	357-59-00-000	BEARINGS & HOLDER KIT 2002	1
2.1.2	364-63-00-209	FAN BACK PLATE	1	2.4	R09785	"DANGER ROTATING DRIVELINE"	1
2.1.3	R20238	HARDENED SEAL SLEEVE	1			DECAL	

# 1000 RPM FAN, COVER PLATE & BRG KIT


**NOTE:**  
**THIS NUMBER IS USED FOR REPLACEMENT KITS ONLY**  
**1000 RPM FAN, COVER PLATE, BEARING KIT, & GUARD 364-66-00-000**

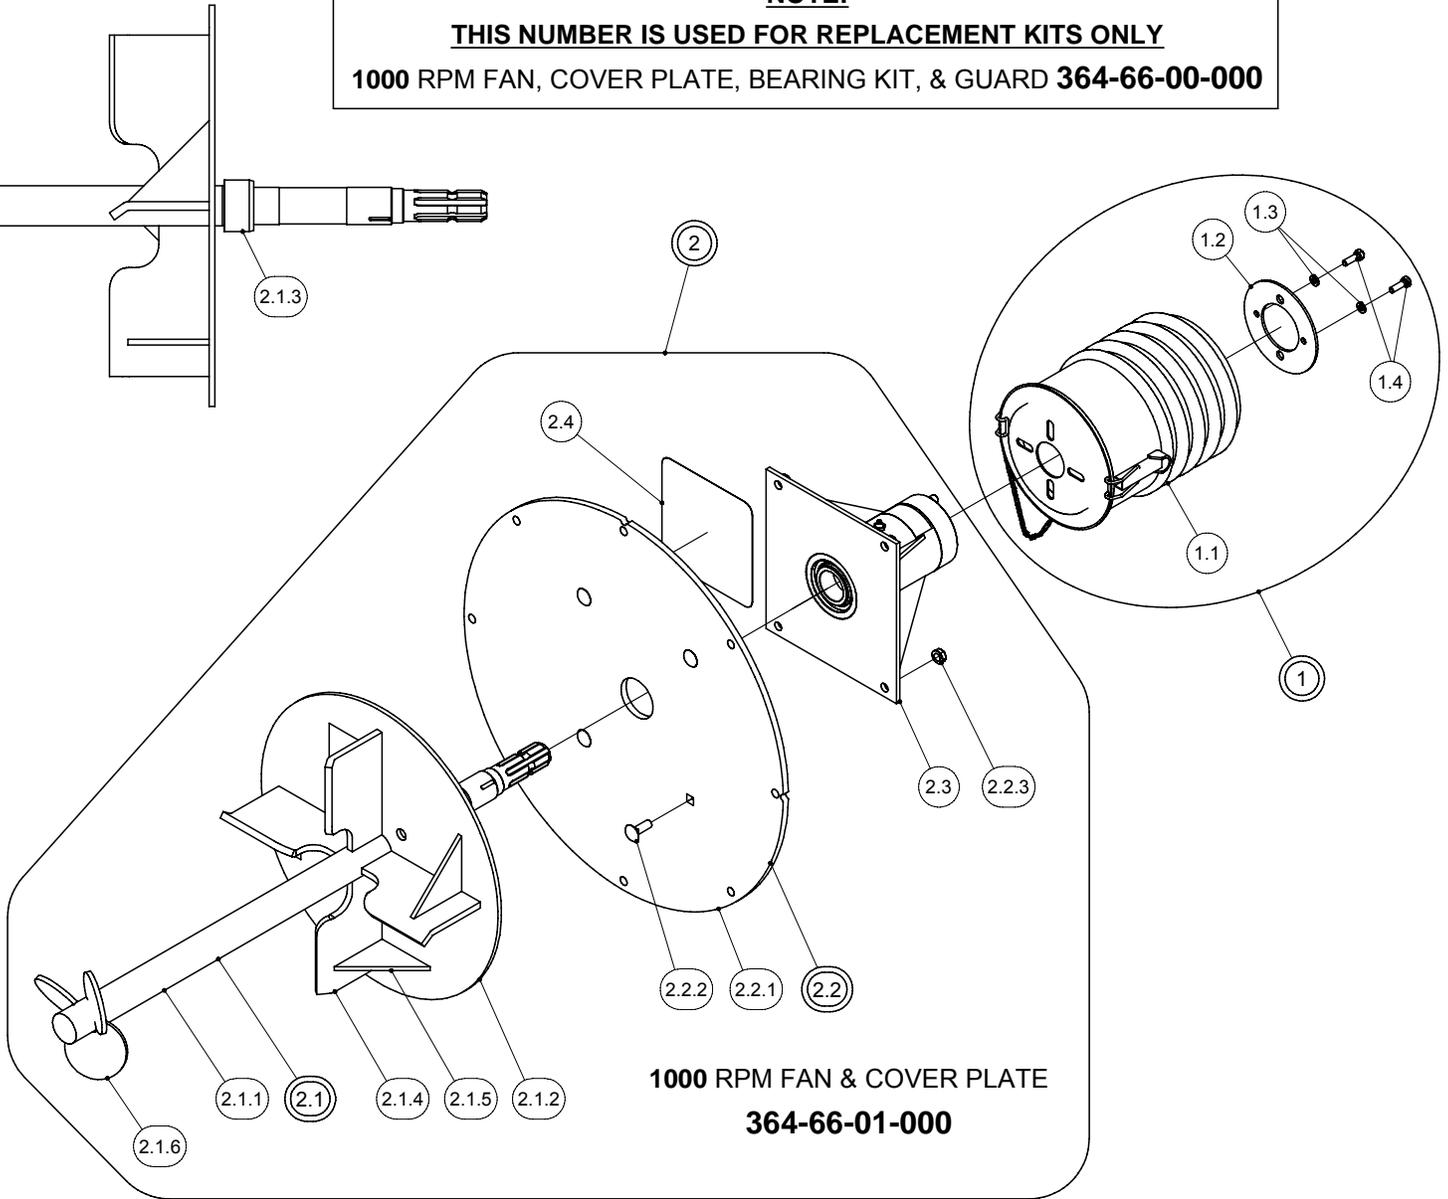

**1000 RPM FAN & COVER PLATE**  
**364-66-01-000**

PARTS LIST				PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY	ITEM	PART NUMBER	DESCRIPTION	QTY
1	364-69-00-000	PLASTIC PTO GUARD KIT	1	2.1.4	364-64-00-210	CHT 1000 RPM FAN BLADE	4
1.1	R22196	SHEILD CONE ASSY	1	2.1.5	364-72-00-422	FAN BLADE GUSSET	4
1.2	364-00-00-448	GUARD SUPPORT	1	2.1.6	364-72-00-227	AGITATOR BLADE	3
1.3	R07802	5/16 LOCK WASHER	2	2.2	364-67-00-000	COVER PLATE ASSY	1
1.4	R07611	5/16 x 1" HEX BOLT	2	2.2.1	364-67-00-211	HOUSING COVER PLATE	1
2	364-66-01-000	1000 RPM FAN & COVER PLATE	1	2.2.2	R07774	7/16 x 1 1/4" GR 5 CARRIAGE BOLT	4
2.1	364-73-00-000	1000 RPM SHAFT & IMP. ASSY - CHT	1	2.2.3	R07879	7/16 FLANGE NUT	4
2.1.1	364-72-00-226	FAN SHAFT	1	2.3	357-59-00-000	BEARINGS & HOLDER KIT 2002	1
2.1.2	364-63-00-209	FAN BACK PLATE	1	2.4	R09785	"DANGER ROTATING DRIVELINE"	1
2.1.3	R20238	HARDENED SEAL SLEEVE	1			DECAL	


## SWING AWAY FAN & HOUSING KIT

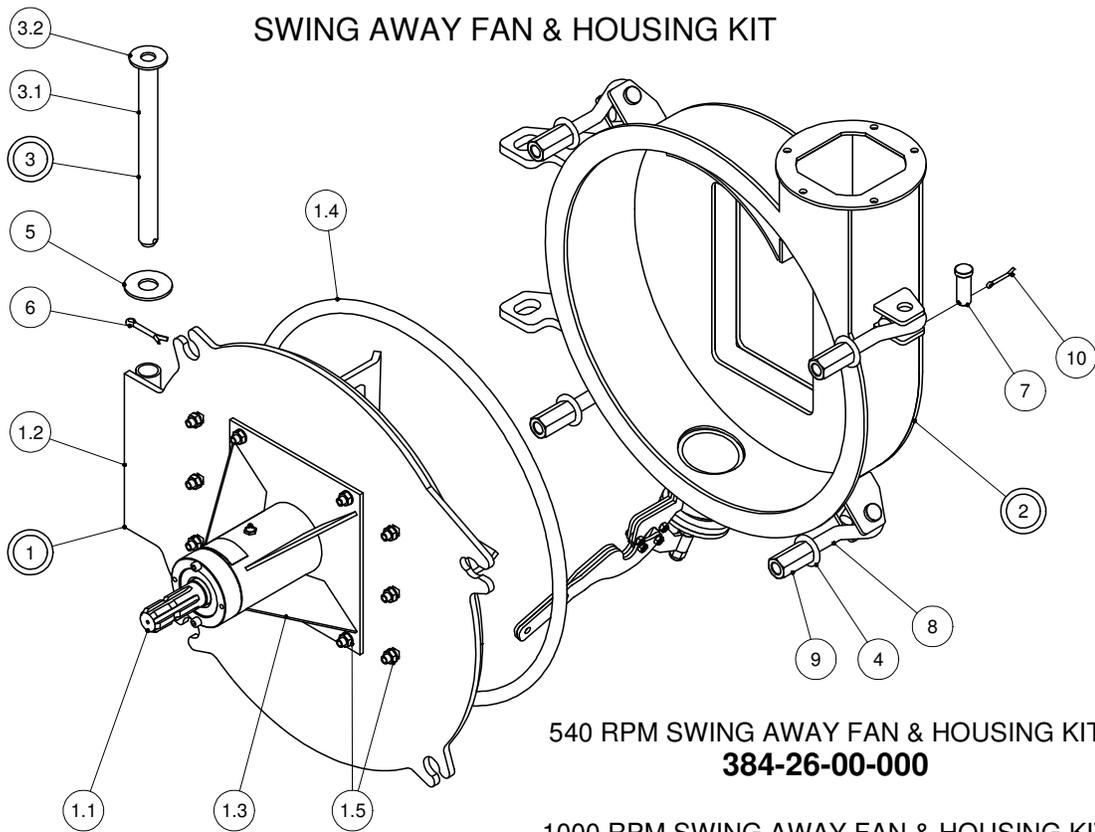

**540 RPM SWING AWAY FAN & HOUSING KIT  
384-26-00-000**

**1000 RPM SWING AWAY FAN & HOUSING KIT  
384-27-00-000**


PARTS LIST				PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY	ITEM	PART NUMBER	DESCRIPTION	QTY
1	384-26-01-000	540rpm S.A. FAN & COVERPLATE-CHT	1	3	376-02-04-000	LID PIN ASSY	1
	384-27-02-000	1000rpm S.A. FAN & COVERPLATE-CHT	1	3.1	376-02-04-508	LID PIN	1
1.1	384-20-05-000	540 RPM SHORT SHAFT & IMPELLER ASSY - CHT	1	3.2	R07827	3/4" FLAT WASHER	1
				4	376-02-00-577	MANWAY WASHER	4
	384-27-01-000	1000 RPM SHORT SHAFT & IMPELLER ASSY - CHT	1	5	R07828	1" FLAT WASHER	1
				6	R08016	1/4 x 2 COTTER PIN	1
1.2	384-20-03-000	HOUSING HATCH ASSY	1	7	R08443	EYE BOLT PIN	4
1.3	357-59-00-000	BEARINGS & HOLDER KIT 2002	1	8	R08442	3/4" EYE BOLT	4
1.4	384-20-00-301	RUBBER SEAL	1	9	R07800	3/4" COUPLING NUT	4
1.5	R07879	7/16 FLANGE NUT	10	10	R08207	5/32 x 1 1/2 S.S. COTTER PIN	4
2	384-20-01-000	HOUSING ASSY-CHT(2007)	1				

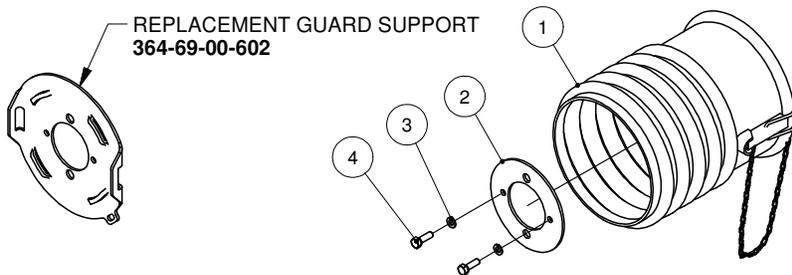

**PLASTIC PTO GUARD KIT  
364-69-00-000**

PARTS LIST				PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY	ITEM	PART NUMBER	DESCRIPTION	QTY
1	R22196	SHEILD CONE ASSY	1	3	R07802	5/16 LOCK WASHER	2
2	364-00-00-448	GUARD SUPPORT	1	4	R07611	5/16 x 1" HEX BOLT	2


# SWING AWAY HOUSING ASSY-CHT

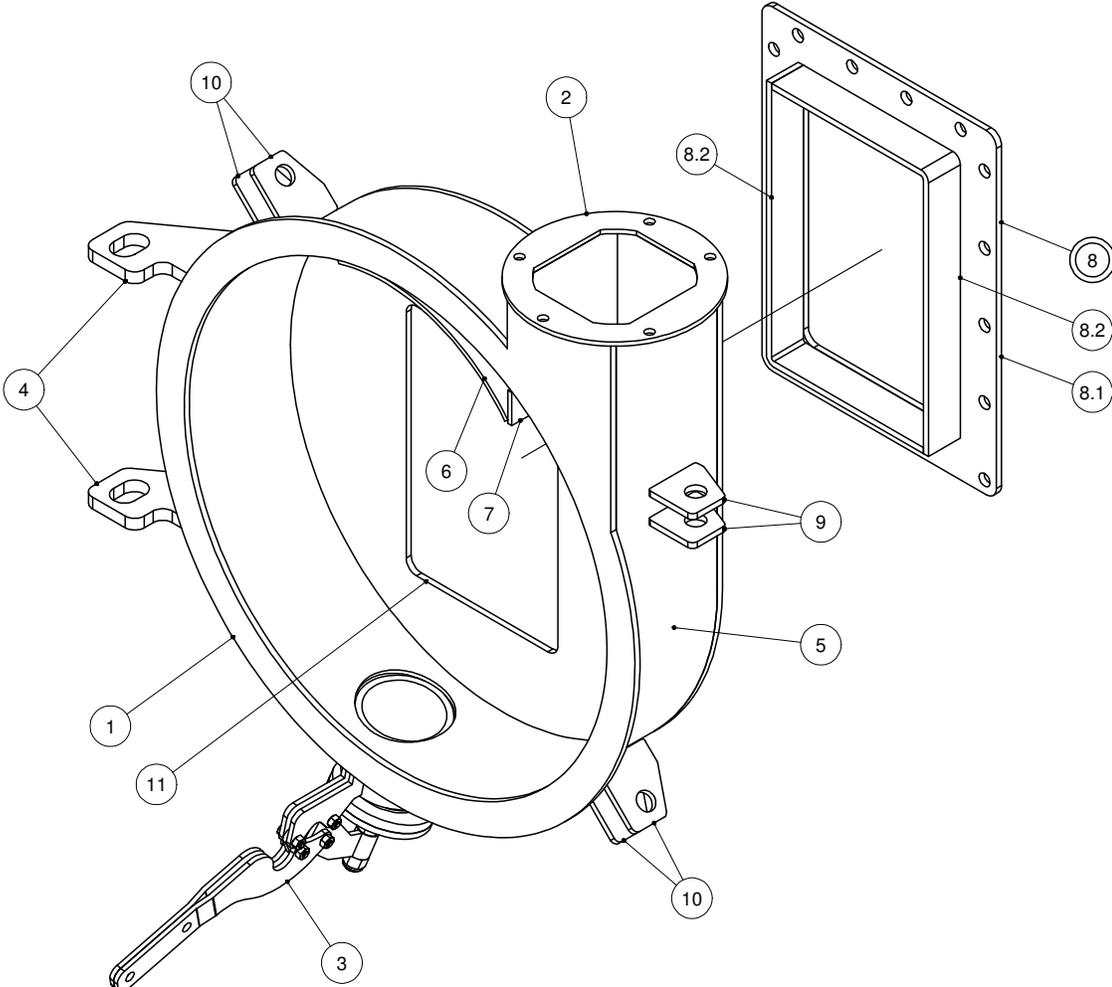

**SWING AWAY HOUSING ASSY-CHT**  
**384-20-01-000**

PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY
1	384-20-01-289	HOUSING FLANGE	1
2	364-01-03-376	DISCHARGE RING	1
3	364-62-00-000	DRAIN PLUG KIT	1
4	384-20-01-290	DOOR HINGE	2
5	357-48-01-232	CHT HOUSING BAND	1
6	357-48-01-231	CHT HOUSING BAND AID	1
7	357-48-01-230	CHT FAN HOUSING VERTICAL PC	1
8	357-48-02-000	CHT HOUSING INLET FLANGE ASSY	1
8.1	364-81-02-393	HOUSING FLANGE	1
8.2	357-48-02-233	CHT INLET EXTENSION	2
9	384-20-01-424	SHORT HOUSING LUG	2
10	384-20-01-423	HOUSING LUG	6
11	357-48-01-228	CHT HOUSING BACK PLATE	1


# SWING AWAY COVER PLATE - 540 RPM

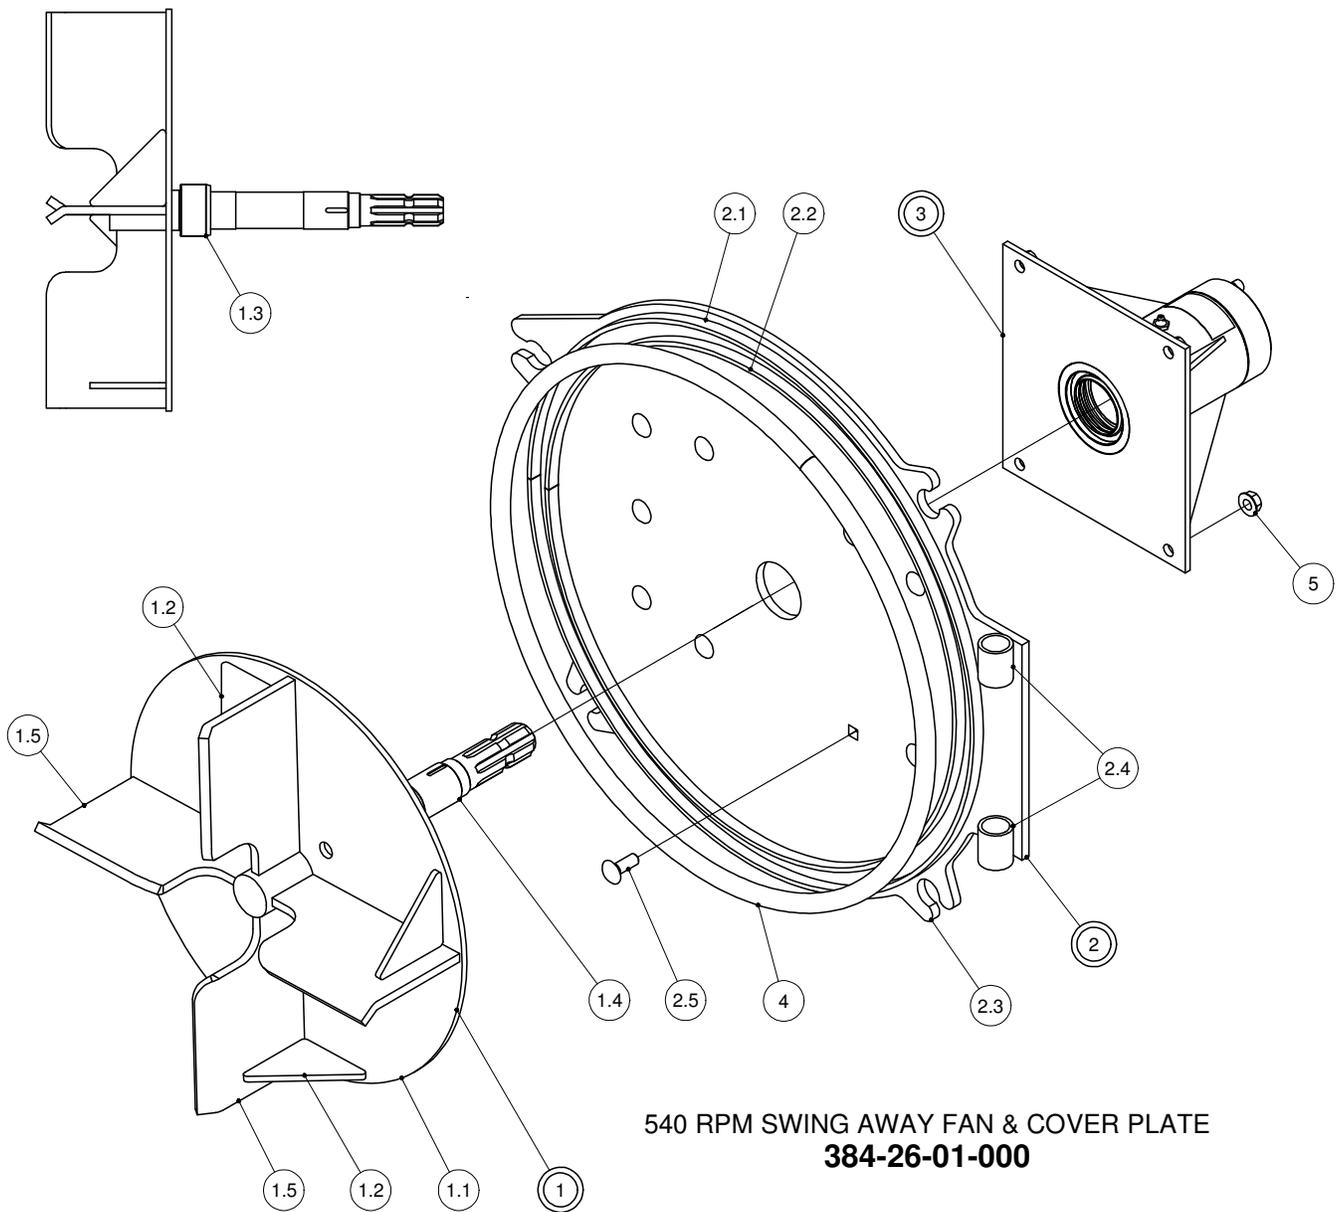

**540 RPM SWING AWAY FAN & COVER PLATE  
384-26-01-000**

PARTS LIST				PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY	ITEM	PART NUMBER	DESCRIPTION	QTY
1	384-20-05-000	540 RPM SHORT SHAFT & IMPELLER ASSY - CHT	1	2.1	384-20-03-295	OUTER RING	1
				2.2	384-20-03-296	INNER RING	1
1.1	364-63-00-209	FAN BACK PLATE	1	2.3	384-20-03-294	COVER PLATE	1
1.2	364-72-00-422	FAN BLADE GUSSET	4	2.4	384-20-03-570	HATCH PIN SLEEVE	2
1.3	R20238	HARDENED SEAL SLEEVE	1	2.5	R07774	7/16 x 1 1/4 UNC CARRIAGE BOLT	10
1.4	384-20-05-318	SHORT FAN SHAFT	1	3	357-59-00-000	BEARINGS & HOLDER KIT 2002	1
1.5	384-20-05-541	CHT 540 RPM FAN BLADE	4	4	384-20-00-301	RUBBER SEAL	1
2	384-20-03-000	HOUSING HATCH ASSY	1	5	R07879	7/16-14 UNC FLANGE NUT	10


# SWING AWAY COVER PLATE - 1000 RPM

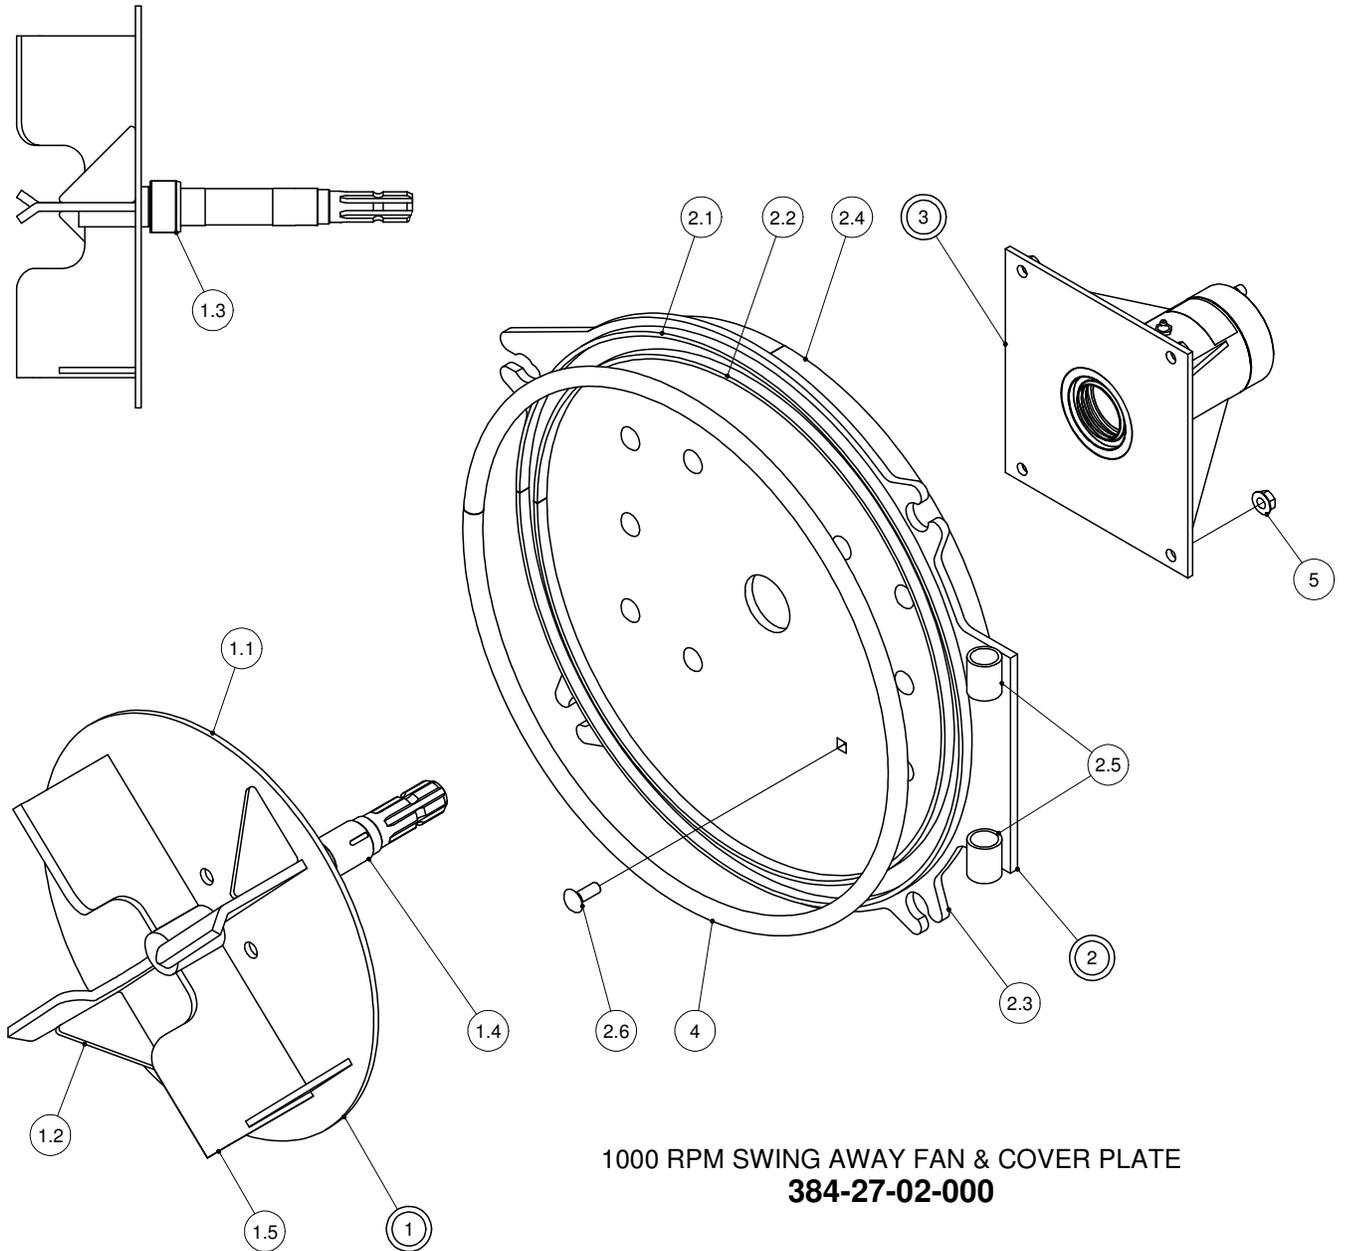

**1000 RPM SWING AWAY FAN & COVER PLATE  
384-27-02-000**


PARTS LIST				PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY	ITEM	PART NUMBER	DESCRIPTION	QTY
1	384-27-01-000	1000 RPM SHORT SHAFT & IMPELLER ASSY - CHT	1	2.2	384-20-03-296	INNER RING	1
				2.3	384-20-03-294	COVER PLATE	1
1.1	364-63-00-209	FAN BACK PLATE	1	2.4	384-27-02-534	REIN. RING-1000 RPM COVER PLATE	1
1.2	364-72-00-422	FAN BLADE GUSSET	4	2.5	384-20-03-570	HATCH PIN SLEEVE	2
1.3	R20238	HARDENED SEAL SLEEVE	1	2.6	R07774	7/16 x 1 1/4 UNC CARRIAGE BOLT	10
1.4	384-20-05-318	SHORT FAN SHAFT	1	3	357-59-00-000	BEARINGS & HOLDER KIT 2002	1
1.5	384-27-01-542	CHT 1000 RPM HIGH FAN BLADE	4	4	384-20-00-301	RUBBER SEAL	1
2	384-27-03-000	HOUSING HATCH ASSY W/RING	1	5	R07879	7/16-14 UNC FLANGE NUT	10
2.1	384-20-03-295	OUTER RING	1				

# BEARING HOLDER KIT

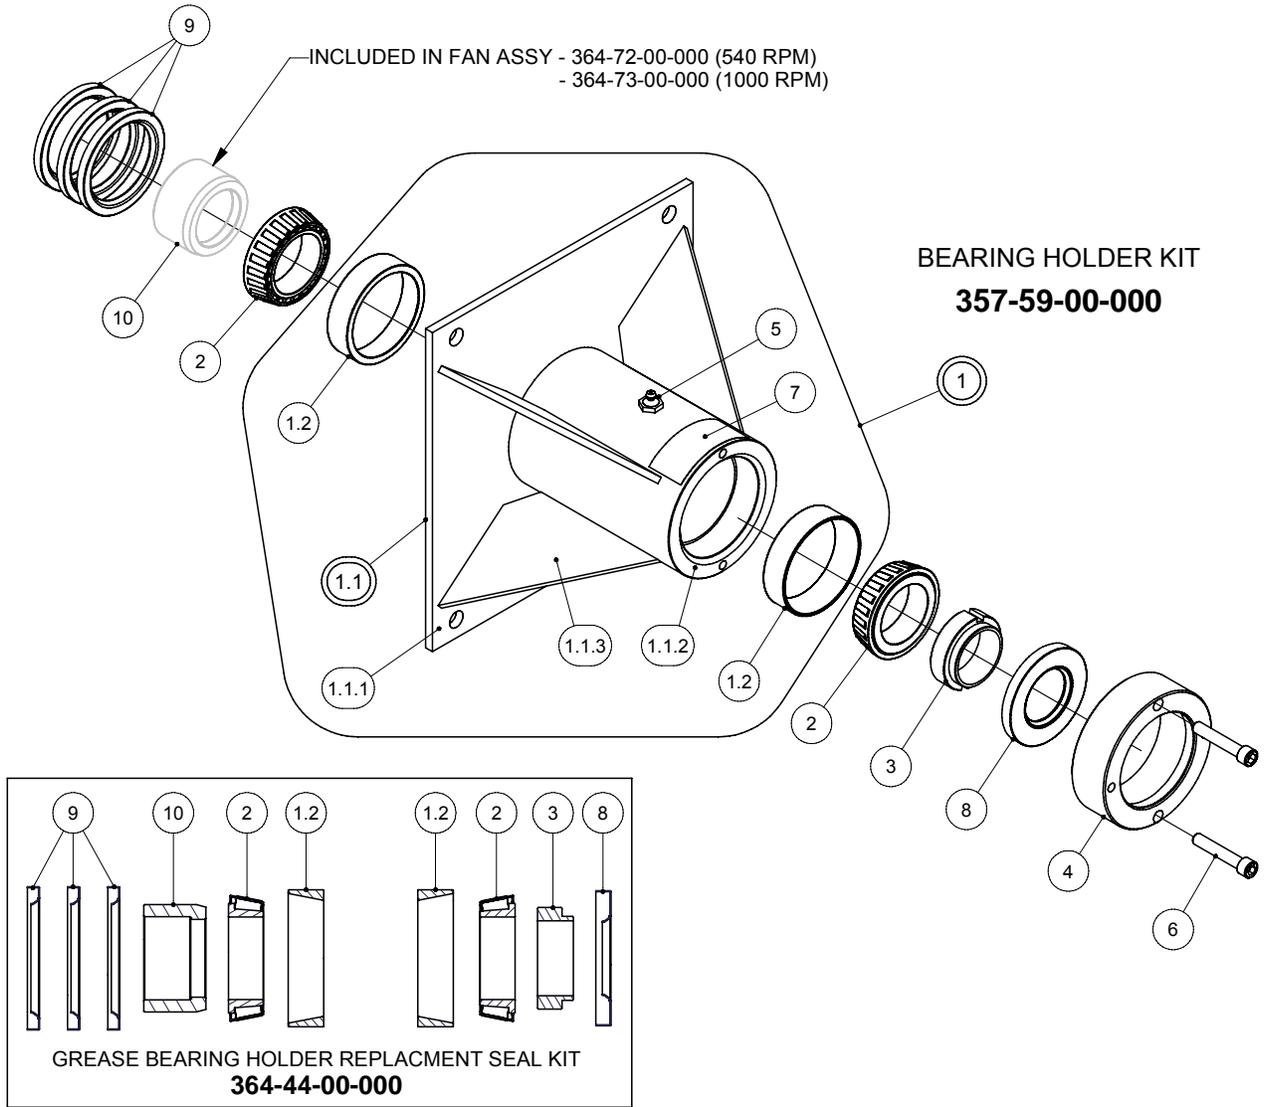

PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY
1	357-59-01-000	BEARING HOLDER w/ CUPS KIT	1
1.1	357-59-02-000	BEARING BOX ASSY	1
1.1.1	364-61-00-192	SEAL TUBE BACK PLATE	1
1.1.2	364-61-00-191	BEARING TUBE	1
1.1.3	357-59-02-289	BEARING BOX GUSSET	4
1.2	R20113	LM501310 OUTER CUP	2
2	R20115	LM501349 OUTER CONE	2
3	364-00-00-212	STAKE NUT	1
4	364-00-00-332	SEAL TUBE KIT	1
5	R08188	1/4" NPT STRAIGHT GREASE FITTING	1
6	R08175	5/16 - 18 UNC x 1 3/4" CAP SCREW	2
7	R09787	GREASE DECAL	1
8	R21196	SL LIP SEAL 152833TB 1.5"	1
9	R21197	2.25 x 3.005 x .25 SEAL	3
10	R20238	HARDENED SEAL SLEEVE (NOT INCLUDED IN BEARING HOLDER KIT)	1

## DRAIN PLUG KIT

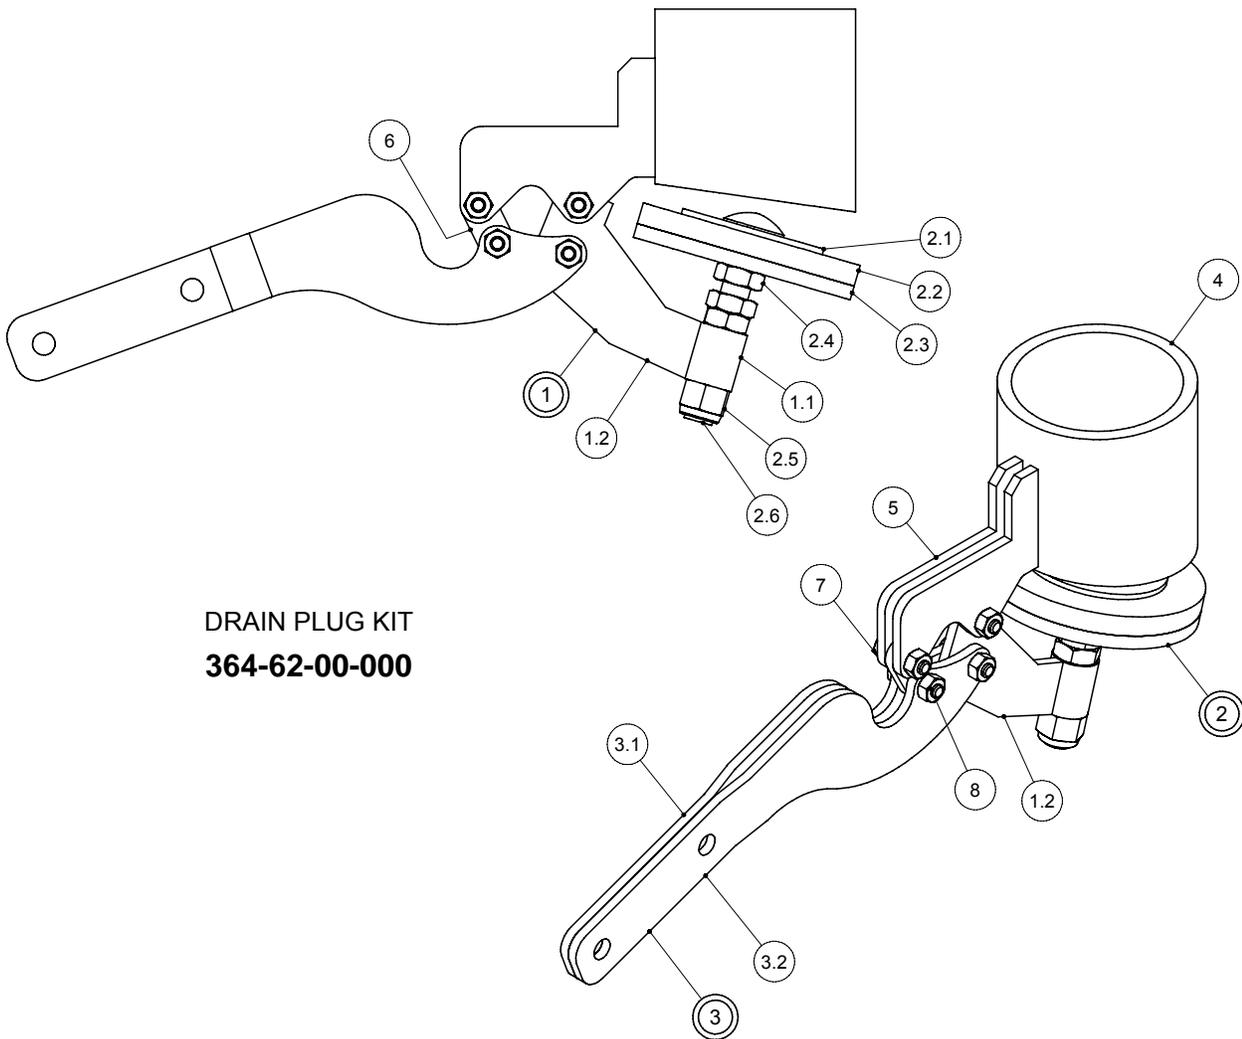


**DRAIN PLUG KIT**  
**364-62-00-000**

PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY
1	364-62-01-000	DRAIN PLUG SLEEVE ASSY	1
1.1	364-62-01-201	SLEEVE	1
1.2	364-62-01-200	SLEEVE LINKAGE	1
2	364-62-05-000	DRAIN PLUG REPLACMENT KIT	1
2.1	364-62-04-370	PLUG WASHER	1
2.2	364-62-02-204	RUBBER PLUG	1
2.3	364-62-02-203	PLUG PLATE	1
2.4	R08046	1/2 - 13 JAM NUT	3
2.5	R08219	1/2 UNC NYLOCK NUT	1
2.6	R08316	1/2 x 3 1/2" FULL THREAD CAR BOLT	1
3	364-62-03-000	HANDLE ASSY	1
3.1	364-62-03-206	LH HANDLE	1
3.2	364-62-03-207	RH HANDLE	1
4	364-01-03-110	DRAIN PIPE	1
5	364-62-00-199	PLUG HOUSING BRKT	2
6	364-62-00-205	SHORT LINKAGE	1
7	R08176	1/4 x 7/8" HEX BOLT	4
8	R08048	1/4" 2 WAY LOCK NUT	4

# TAIL LIGHT KIT

PARTS LIST				PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY	ITEM	PART NUMBER	DESCRIPTION	QTY
1	357-30-01-000	RH LIGHT BAR ASSY	1	10	R10357	3/4" NYLON TITE CONNECTOR	1
1.1	357-30-01-171	LIGHT BAR	1	11	R10095	7 POLE CONNECTOR	1
1.2	357-30-01-172	RH LITE BOLT PLATE	1	12	357-30-00-311	SAFETY EDGING	2
1.3	357-30-01-173	STUB BAR	1	13	R04046	4-WIRE TRAILER CABLE - APPROX. 4M	1
2	357-30-02-000	LH LIGHT BAR ASSY	1	14	R04235	14/6 TRAILER CABLE - APPROX. 10.5M	1
2.1	357-30-01-171	LIGHT BAR	1	15	R09636	RUBBER BOOT	1
2.2	357-30-01-173	STUB BAR	1	16	R10345	1/2" ELECTRICAL BOX LOCK NUT	3
2.3	357-30-02-245	LH LITE BOLT PLATE	1	17	R10087	RED LIGHT KIT	2
3	357-30-03-000	MOUNT BRKT ASSY	2	18	R10347	AMBER LIGHT KIT w/ CLEAR BACK	2
3.1	357-30-03-174	MOUNT BRKT	1	19	R10346	AMBER REPLACEMENT LENS	2
3.2	R07674	1/2 x 1 1/4 HEX BOLT	2	20	R04343	#451 YELLOW WING NUT CONNECTOR	8
3.3	R07795	1/2" UNC FLANGE NUT	2	21	R04422	#452 RED WING NUT CONNECTOR	2
4	R10349	RH LAMP BOX w/ 2 LAMPS	1	22	R09808	CABLE - LIGHT BOX DECAL	1
5	R10348	LH LAMP BOX w/ 2 LAMPS	1	23	R21104	HYD. HOSE CLIPS	12
6	R07721	3/8 x 1 CARRIAGE BOLT	4	24	R08301	1/4 x 20 UNC x 1/2" WELD STUD	12
7	R07823	3/8 FLAT WASHER	4	25	R07801	1/4" LOCK WASHER	12
8	R07794	3/8 FLANGE NUT	4	26	R07781	1/4-20 UNC HEX NUT	12
9	R10193	1/2" NYLON TITE CONNECTOR	2				

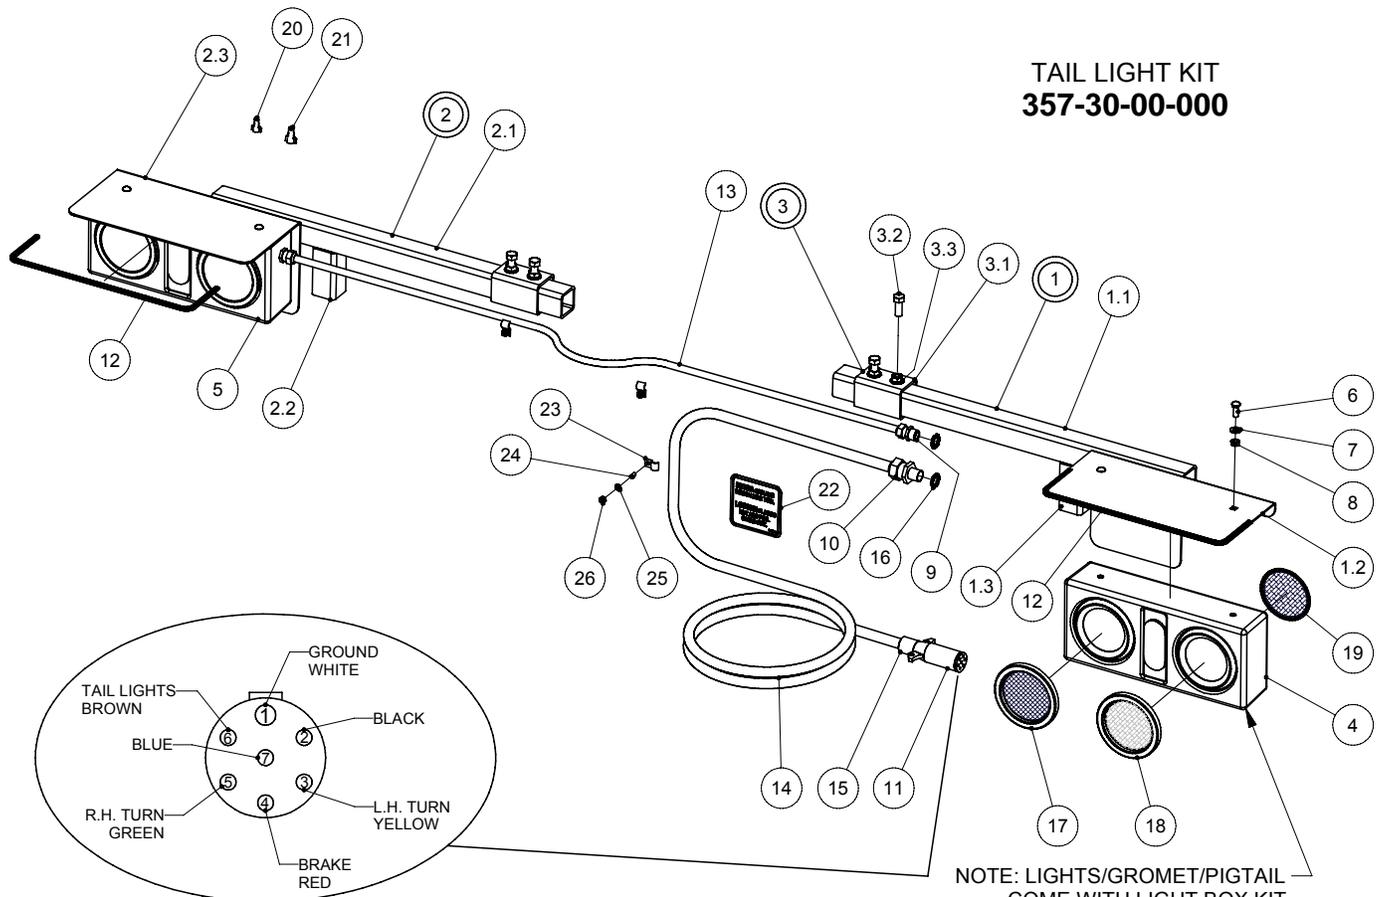


# SIGHT GAUGE KIT

PARTS LIST				PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY	ITEM	PART NUMBER	DESCRIPTION	QTY
1	330-20-03-000	ACCESS TUBE ASSY	1	5	R04100	SILICONE SEALANT	1
1.1	330-20-03-560	ACCESS TUBE FLANGE	1	6	R07675	3/8 x 1 1/4" HEX BOLT	6
1.2	330-20-03-556	ACCESS TUBE	1	7	R07803	3/8 LOCK WASHER	6
2	330-20-04-000	COVER PLATE ASSY	1	8	R07783	3/8 HEX NUT	6
2.1	330-20-00-557	COVER PLATE	1	9	R07974	EXTERNAL RETAINING RING	2
2.2	330-20-04-562	BUSHING HOLDER	1	10	R09524	FLOAT	1
2.3	R21173	1/2 x 5/8 x 1/2" BRONZE BUSHING	3	11	330-20-01-552	FLOAT STRAPS	1
2.4	R20865	O-RING #11-014	1	12	R08241	3/16 x 1 SS ROLL PIN	1
3	330-20-01-000	FLOAT ARM ASSY	1	13	R09529	"FULL" DECAL	1
3.1	330-20-01-551	FLOAT ARM	1	14	R09530	"EMPTY" DECAL	1
3.2	330-20-01-552	FLOAT STRAPS	1	15	R08021	1/8 x 1 S.S. COTTER PIN	1
4	330-20-02-000	INDICATOR ARM ASSY	1	16	330-21-01-000	WRAP AROUND SITE ARM ASSY	1
4.1	330-20-02-554	INDICATOR ARM	1	16.1	330-19-46-546	WRAP AROUND SITE ARM	1
4.2	330-20-02-553	INDICATOR ARM HUB	1	16.2	330-20-02-553	INDICATOR ARM HUB	1


**330-22-00-000**  
SITE GAUGE LESS ACCESS TUBE

**330-23-00-000**  
WRAP AROUND SITE GAUGE LESS ACCESS TUBE

SIGHT GAUGE KIT **330-20-00-000**  
WRAP AROUND SIGHT GAUGE KIT **330-21-00-000**

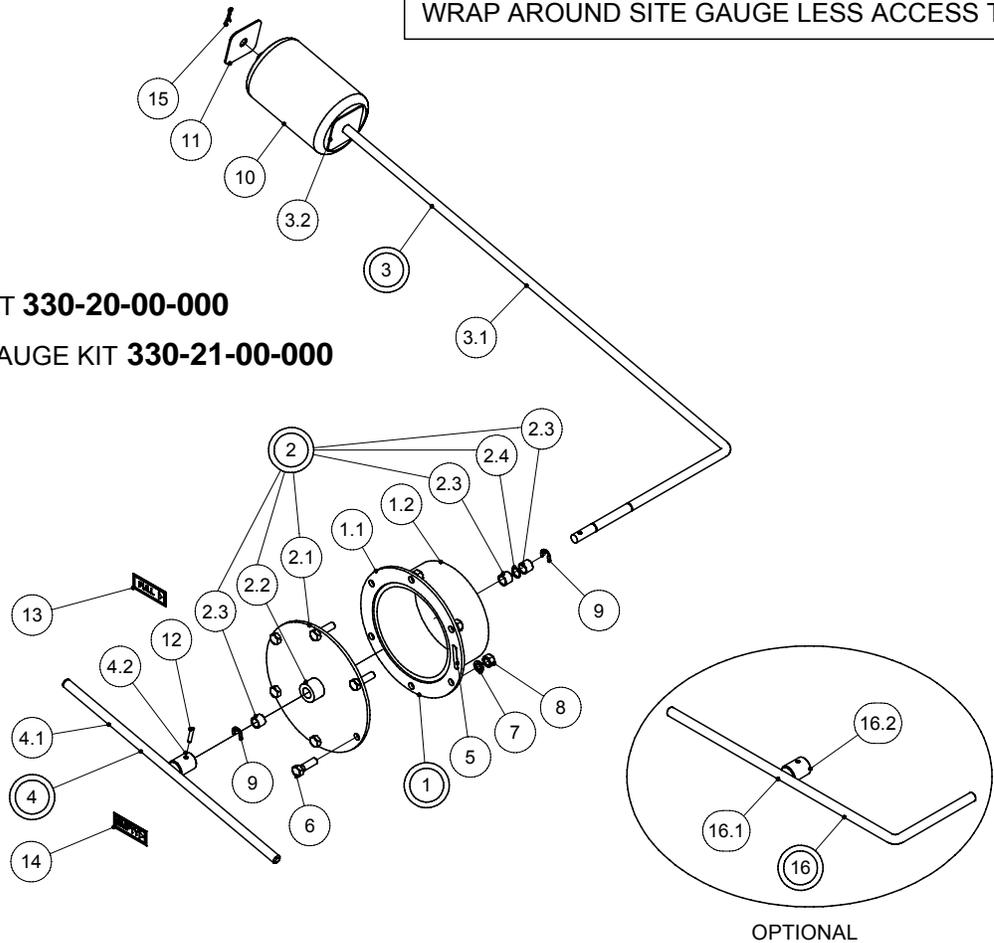


## BUTTERFLY LID & SAFETY GRATE

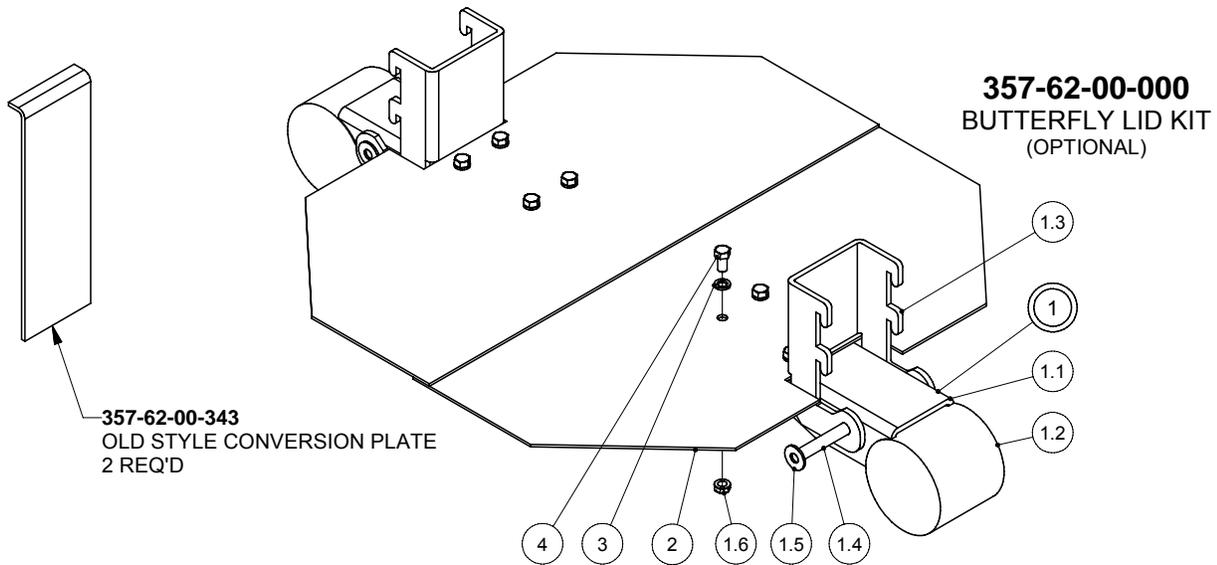

NOTE: WITH INSTALLATION OF A BUTTERFLY LID, A SAFETY GRATE MUST BE USED TO LOCK LID IN PLACE


PARTS LIST				PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY	ITEM	PART NUMBER	DESCRIPTION	QTY
1	357-62-01-000	BUTTERFLY HINGE KIT	2	1.5	R07824	7/16 FLAT WASHER	2
1.1	357-62-01-316	U - CHANNEL HINGE	1	1.6	R07794	3/8 FLANGE NUT	4
1.2	357-62-01-317	COUNTER WEIGHT	1	2	357-62-00-318	BUTTERFLY LID	2
1.3	357-62-01-319	DROP-IN HINGE	1	3	R08319	3/8 S.S. LOCK WASHER	8
1.4	357-62-01-315	HINGE PIN	1	4	R08317	3/8 x 3/4 S.S. HEX BOLT	8

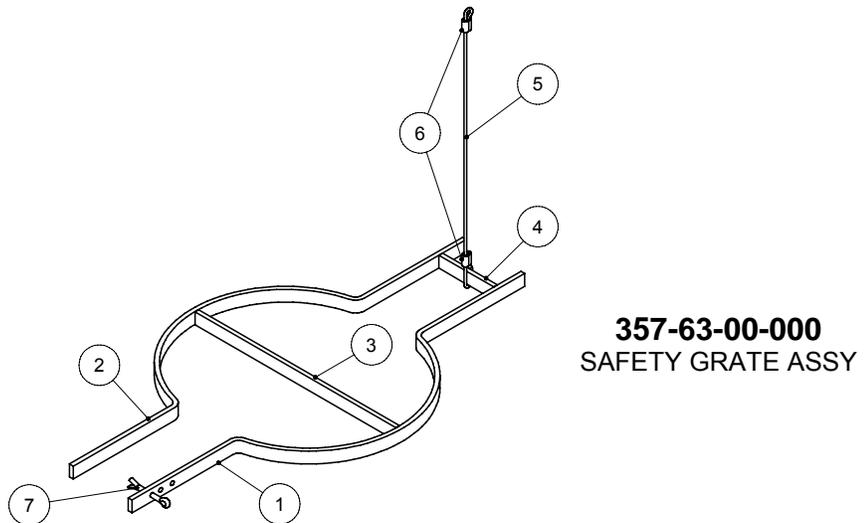

PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY
1	357-63-00-320	SAFETY BAR w/ HOLE	1
2	357-63-00-332	SAFETY BAR	1
3	357-63-00-321	CROSS SAFETY BAR	1
4	357-63-00-322	STOP BAR	1
5	357-63-00-331	SAFETY CABLE	1
6	R08068	1/8" ALUMINUM CRIMP SLEEVES	2
7	R08016	1/4 x 2 COTTER PIN	1


# SLIM LINE LADDER KIT

SLIM LINE LADDER KIT  
394-07-00-000

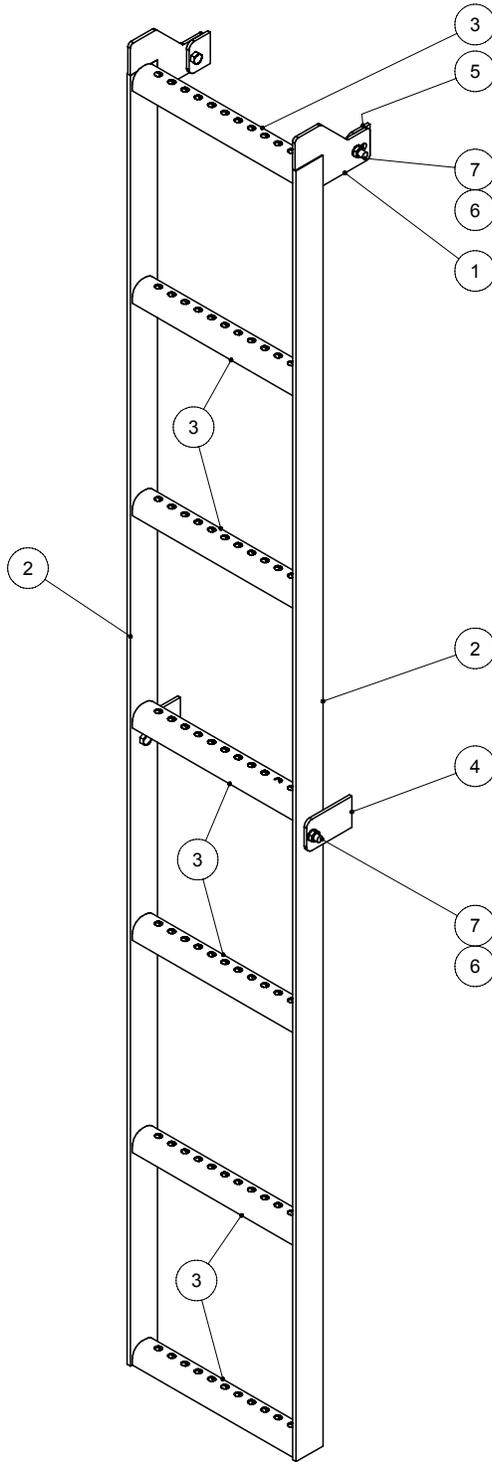


PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY
1	364-95-00-326	LADDER LUG	2
2	394-07-00-057	LADDER SIDE	2
3	364-95-00-324	LADDER RUNG	7
4	364-00-00-414	TANK LUG	2
5	364-95-00-327	UPPER TANK LUG	2
6	R07794	3/8 FLANGE NUT	4
7	R07619	3/8 x 1 HEX BOLT	4

# LOWER DISCHARGE PIPE KIT

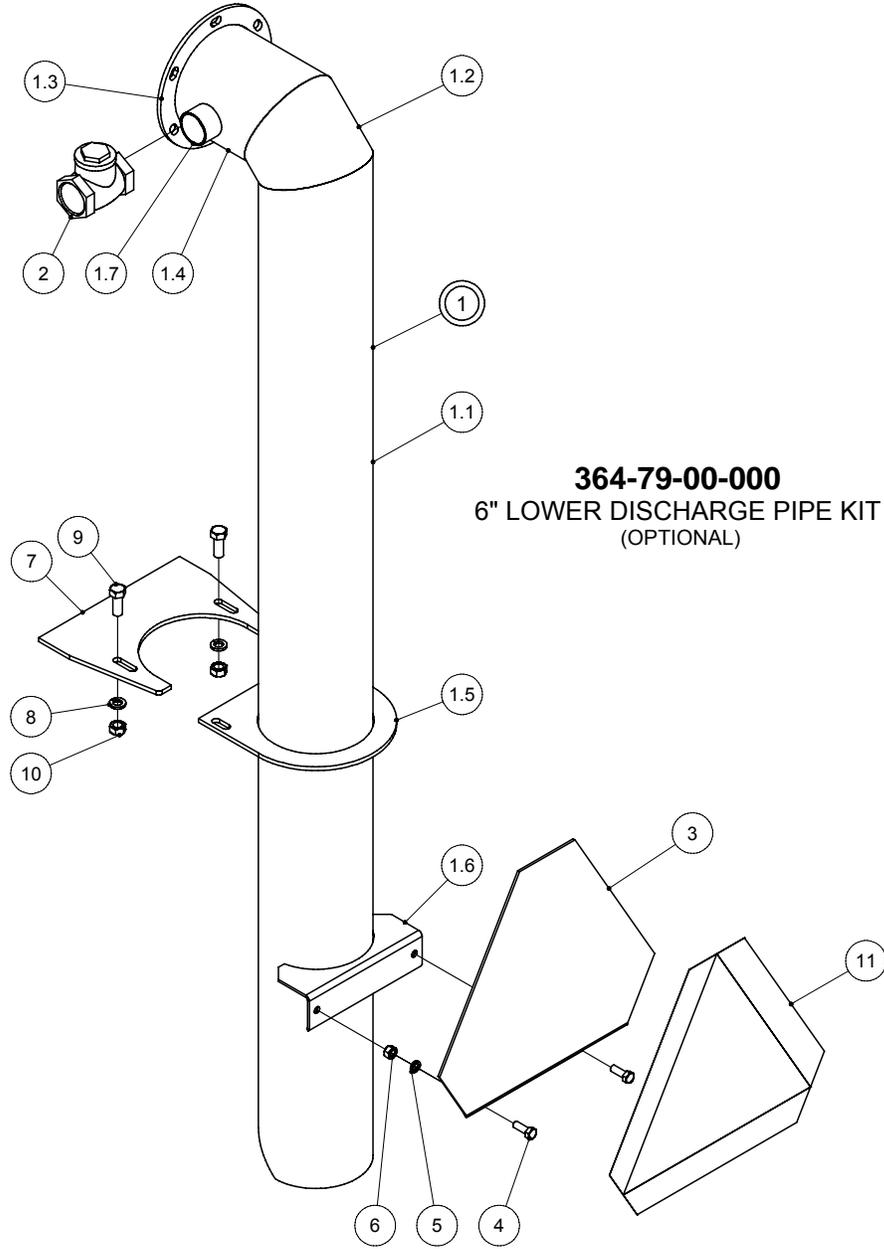

PARTS LIST				PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY	ITEM	PART NUMBER	DESCRIPTION	QTY
1	364-79-01-000	6" DROP PIPE ASSY-15000 PROFILE TANK	1	3	200-00-00-132	S.M.V. SIGN HOLDER	1
				4	R07619	3/8 x 1 HEX BOLT	2
1.1	364-79-01-295	LONG DROP PIPE	1	5	R07803	3/8 LOCK WASHER	2
1.2	364-19-00-082	DISCHARGE PIPE CORNER PC	1	6	R07783	3/8 HEX NUT	2
1.3	364-19-00-087	DISCHARGE PIPE FLANGE	1	7	384-05-03-070	TANK BRKT	1
1.4	364-79-01-296	SHORT HORIZONTAL PIPE	1	8	R07805	1/2 LOCK WASHER	2
1.5	384-05-02-069	TUBE ATTACHMENT BRKT	1	9	R07674	1/2 x 1 1/4 HEX BOLT	2
1.6	308-77-00-226	S.M.V. SIGN HOLDER	1	10	R07785	1/2 HEX NUT	2
1.7	R02127	1 1/2 CLOSE NIPPLE	1	11	R09501	SLOW MOVING VEHICLE DECAL	1
2	R02490	1 1/2" CHECK VALVE	1				

# TANK VENT KIT

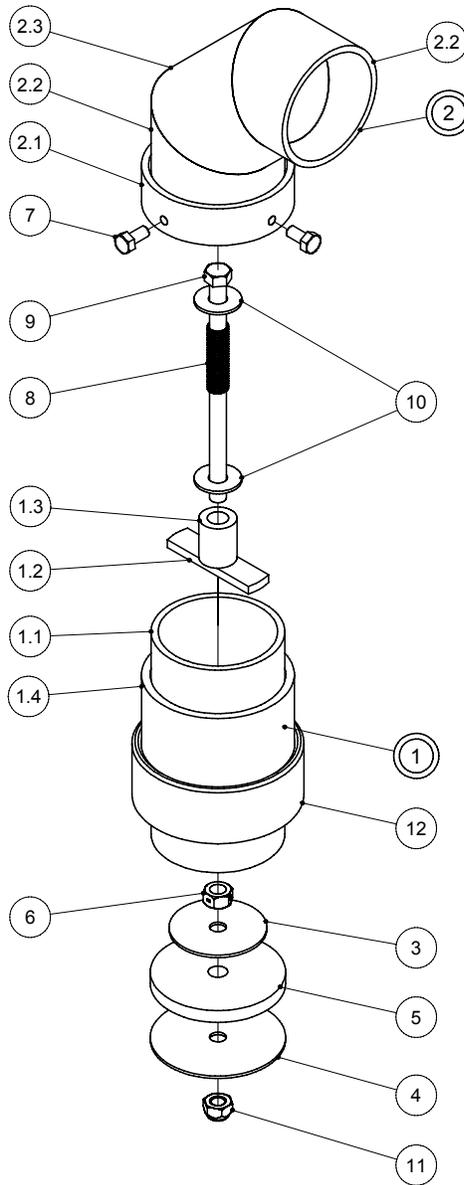


**TANK VENT KIT**  
**357-51-00-000**  
(OPTIONAL)

PARTS LIST				PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY	ITEM	PART NUMBER	DESCRIPTION	QTY
1	357-51-01-000	VENT TUBE ASSY	1	4	357-51-00-258	LOWER STAINLESS STEEL WASHER	1
1.1	357-51-01-246	VENT TUBE	1	5	357-51-00-334	RUBBER PLUG	1
1.2	357-51-01-247	VENT STRAP	1	6	R07891	7/16 2-WAY LOCK NUT	1
1.3	357-51-01-248	INNER SLIDE TUBE	1	7	R07690	5/16 x 5/8 HEX BOLT	2
1.4	357-51-01-335	OUTER NIPPLE	1	8	357-51-00-249	SPRING	1
2	357-51-02-000	CAP ASSY	1	9	R07689	7/16 x 7 HEX BOLT	1
2.1	357-51-02-251	SLEEVE	1	10	R07833	7/16" SAE FLAT WASHER	2
2.2	357-51-02-252	ELBOW SECTION	2	11	R08178	7/16 NYLOCK HEX NUT	1
2.3	357-51-02-253	ELBOW MIDDLE SECTION	1	12	R02969	3 1/2" HALF COUPLER	1
3	357-51-00-250	STAINLESS STEEL WASHER	1				

# HYD COUPLING DRIVE - 26GPM

HYDRAULIC COUPLING DRIVE KIT - 26 GPM  
 USED ON **NON SWING OPEN FAN & HOUSINGS**  
**357-71-00-000**

HYDRAULIC COUPLING DRIVE KIT - 26 GPM  
 USED ON **SWING OPEN FAN & HOUSINGS**  
**357-72-00-000**

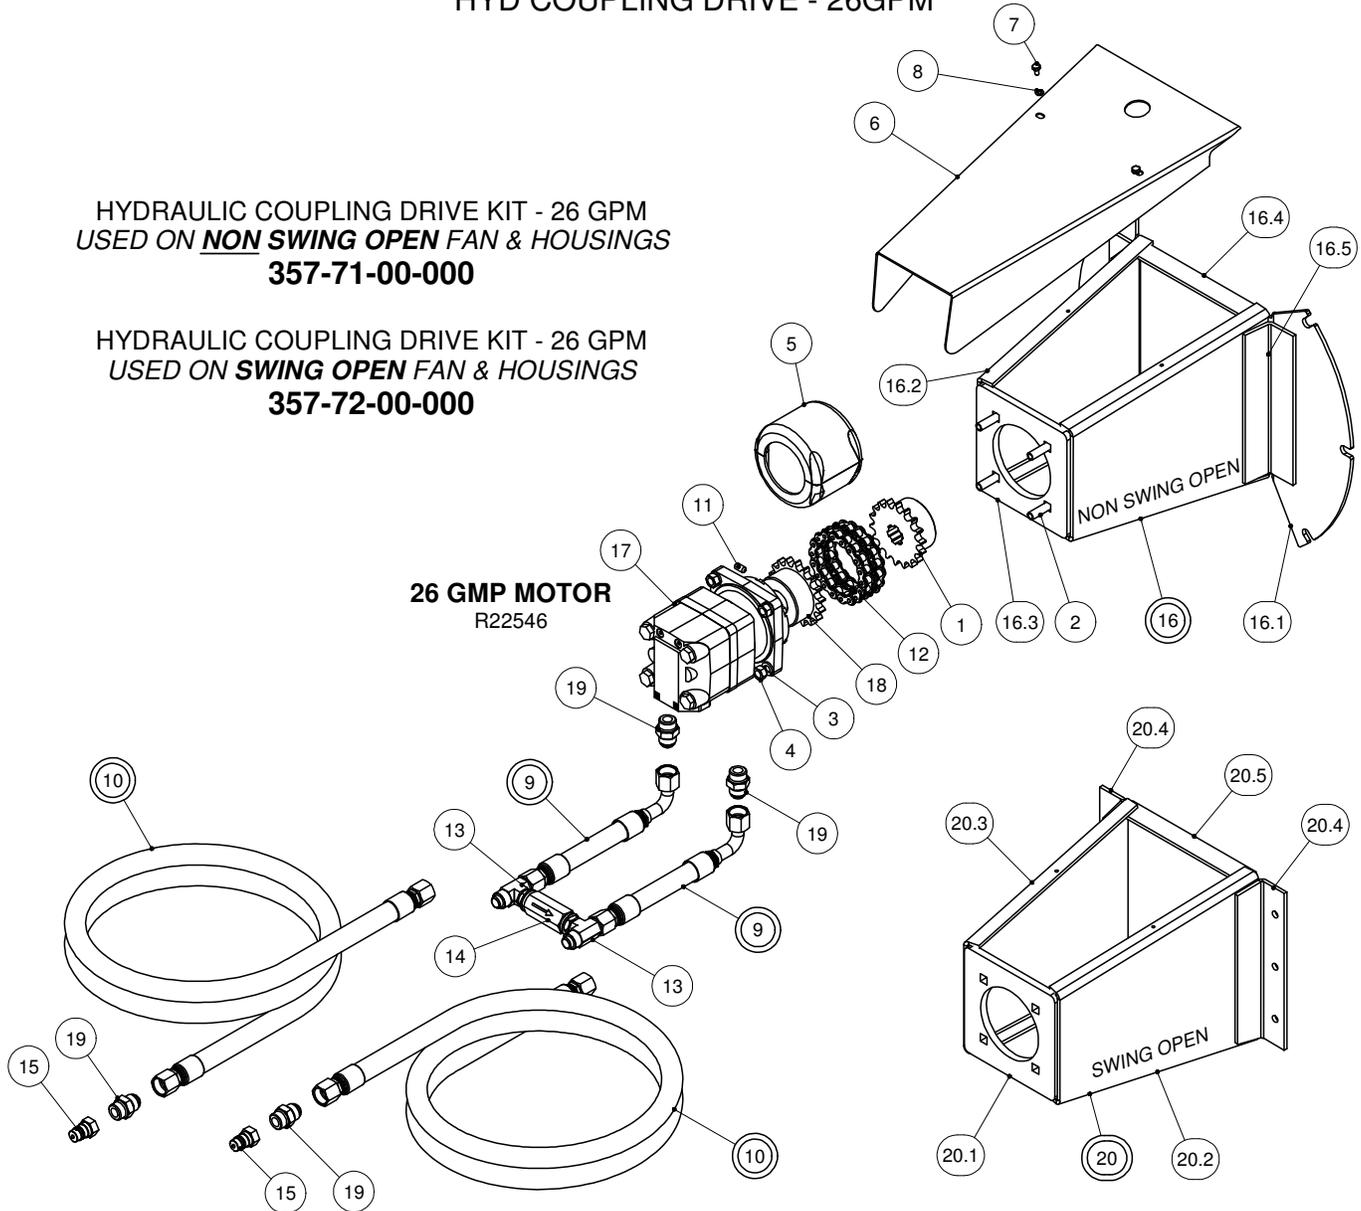


PARTS LIST				PARTS LIST			
ITEM	PART NUMBER	DESCRIPTION	QTY	ITEM	PART NUMBER	DESCRIPTION	QTY
1	384-02-00-072	SPROCKET FOR 6 TOOTH SPLINE	1	16	384-18-01-000	N.S.O. MOTOR MOUNT ASSY	1
2	R07744	1/2" x 2 CARRIAGE BOLT	4	16.1	384-18-01-273	LH EXTENSION PLATE	1
3	R07805	1/2 LOCK WASHER	4	16.2	384-18-01-274	RH LONG EXTENSION PLATE	1
4	R07785	1/2 HEX NUT	4	16.3	384-11-01-231	6000 & MLHT 160 SERIES MOUNT PLATE	1
5	R20617	60 - 18 COUPLING COVER	1	16.4	384-02-01-012	REINFORCING STRAP	2
6	384-02-00-005	GUARD	1	16.5	384-18-01-275	REINFORCING ANGLE	2
7	R07698	1/4 x 1/2 HEX BOLT	2	17	R22546	M+S HYD MOTOR - MLHT 160	1
8	R07801	1/4 LOCK WASHER	2	18	384-00-00-277	60B - 18 SPR.-1 1/2" STR SHAFT	1
9	364-48-32-000	3/4" HYD HOSE ASSY	2	19	R23098	ORB-12 x 3/4" JIC M. ADAPTOR	4
10	364-48-24-000	3/4" HYD HOSE ASSY	2	20	384-22-01-000	S.O. MOTOR MOUNT ASSY	1
11	R07911	3/8 x 3/4" SET SCREW	2	20.1	384-11-01-231	6000 & MLHT 160 SERIES MOUNT PLATE	1
12	R20883	60-18 COUPLING CHAIN	1	20.2	384-22-01-309	LH EXTENSION PLATE	1
13	R23066	3/4" X 3/4" JIC X ORB-12 M TEE	2	20.3	384-22-01-310	RH EXTENSION PLATE	1
14	R23328	ORB-12 IN-LINE CHECK VALVE	1	20.4	384-20-04-299	MOUNT ANGLE PLATES	2
15	R23182	MALE PIONEER TIP-ORB-10	2	20.5	384-02-01-012	REINFORCING STRAP	2

N.S.O = NON SWING OPEN

S.O. = SWING OPEN


# KNOTT BRAKE KIT

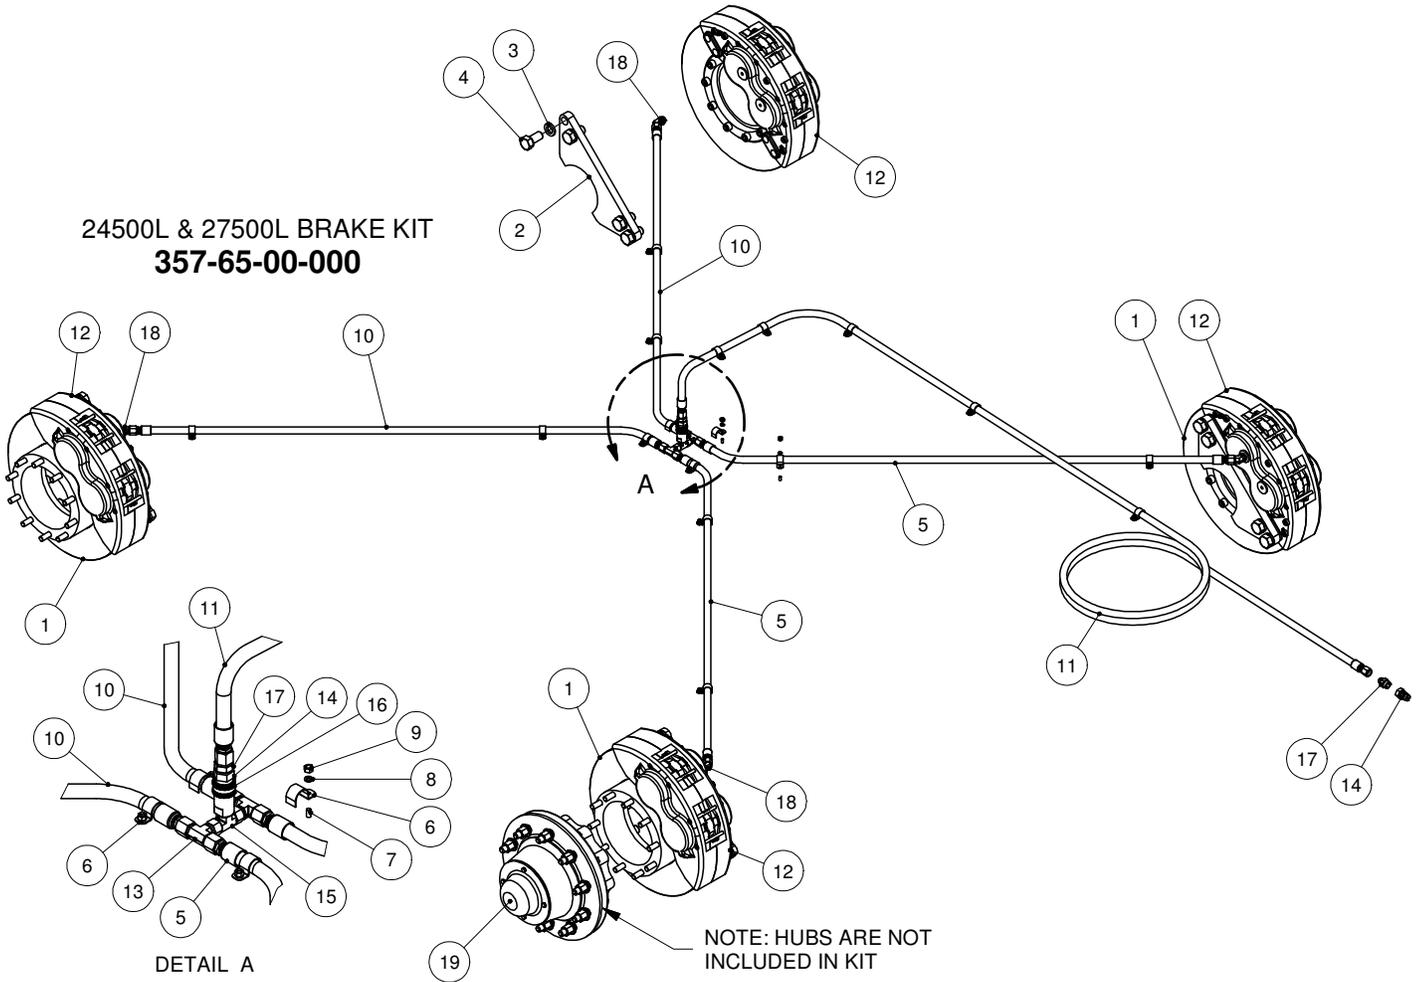

## PARTS LIST


ITEM	PART NUMBER	DESCRIPTION	QTY
1	357-65-01-000	SPACER & DISC KIT-25000	4
2	357-00-00-313	KNOTT BRAKE MT PLATE-25000LB HUB	4
3	R07808	1" LOCK WASHER	16
4	R07661	1"-8 UNC X 2" HEX BOLT	16
5	357-65-04-000	HYDRAULIC BRAKE HOSE ASSY-FRONT	2
6	R09778	3/4 DIAMETER STRAP	17
7	R08301	1/4 x 20 UNC x 1/2" WELD STUD	17
8	R07801	1/4 LOCK WASHER	17
9	R07781	1/4 HEX NUT	17
10	357-65-03-000	1/2" REAR BRAKE HOSE ASSY	2
11	357-65-05-000	MAIN BRAKE LINE ASSY-1/2" TO TRACTOR	1
12	R22570	KNOTT CALIPER ASSY W PAD 118-010	4
13	R23121	1/2" M X 1/2" M X 1/2" SW F LIC TEE	2
14	R23182	MALE PIONEER TIP-ORB-10	2
15	R23062	1/2" X 1/2" X 1/2" JIC M. TEE	1
16	R23181	FEMALE PIONEER COUPLER-ORB 8	1
17	R23095	ORB-10 x 1/2" JIC M ADAPTOR	2
18	R23211	ORB-6 X 1/2" JIC X 45 SWIVEL	4
19	357-06-00-000	25000 LB HUB COMPLETE	-

# KNOTT - 4X85 HYDRAULIC FIXED CALIPER

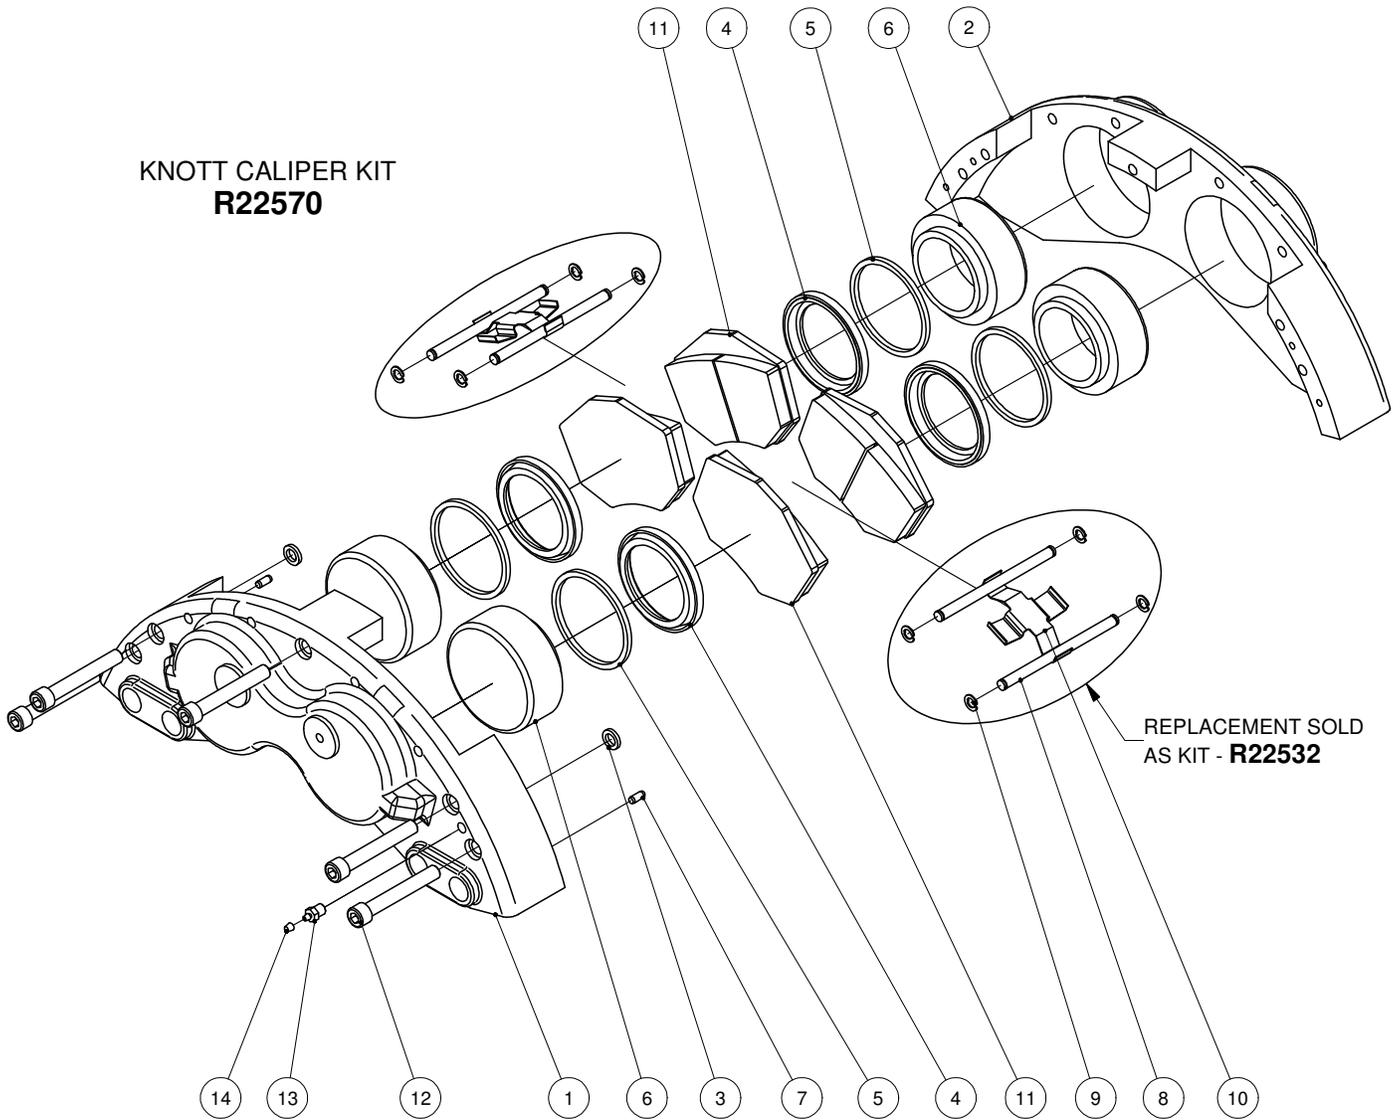

PARTS LIST				
ITEM	PART NUMBER	KNOTT PART #	DESCRIPTION	QTY
1	NOT SOLD SEPARATELY	850126-011/012	CALIPER HOUSING A, MACHINED	1
2	NOT SOLD SEPARATELY	850184-010	CALIPER HOUSING B, MACHINED	1
3	R22557	850191-010	SEAL,SQUARE,CALIPER	2
4	R22552	35385	DUST RING	4
5	R22551	35383.02	SEAL,SQUARE,PISTON	4
6	R22561	850153-030	PISTON	4
7	R22564	850150-010	DOWEL PIN	2
8	NOT SOLD SEPARATELY	800506-010	RETAINER ROD	4
9	NOT SOLD SEPARATELY	850173-010	FASTENER E-CLIP	8
10	NOT SOLD SEPARATELY	850143-020	SPRING PAD	2
11	R22523	850181-010	BRAKE PAD	4
12	R08415	850132-040	FASTENER, SOCKET HEAD CAP SCREW	5
13	R22562	45559	BLEEDER	1
14	R22563	44129.02	BLEEDER CAP	1

SPREADERS PTO - 2012

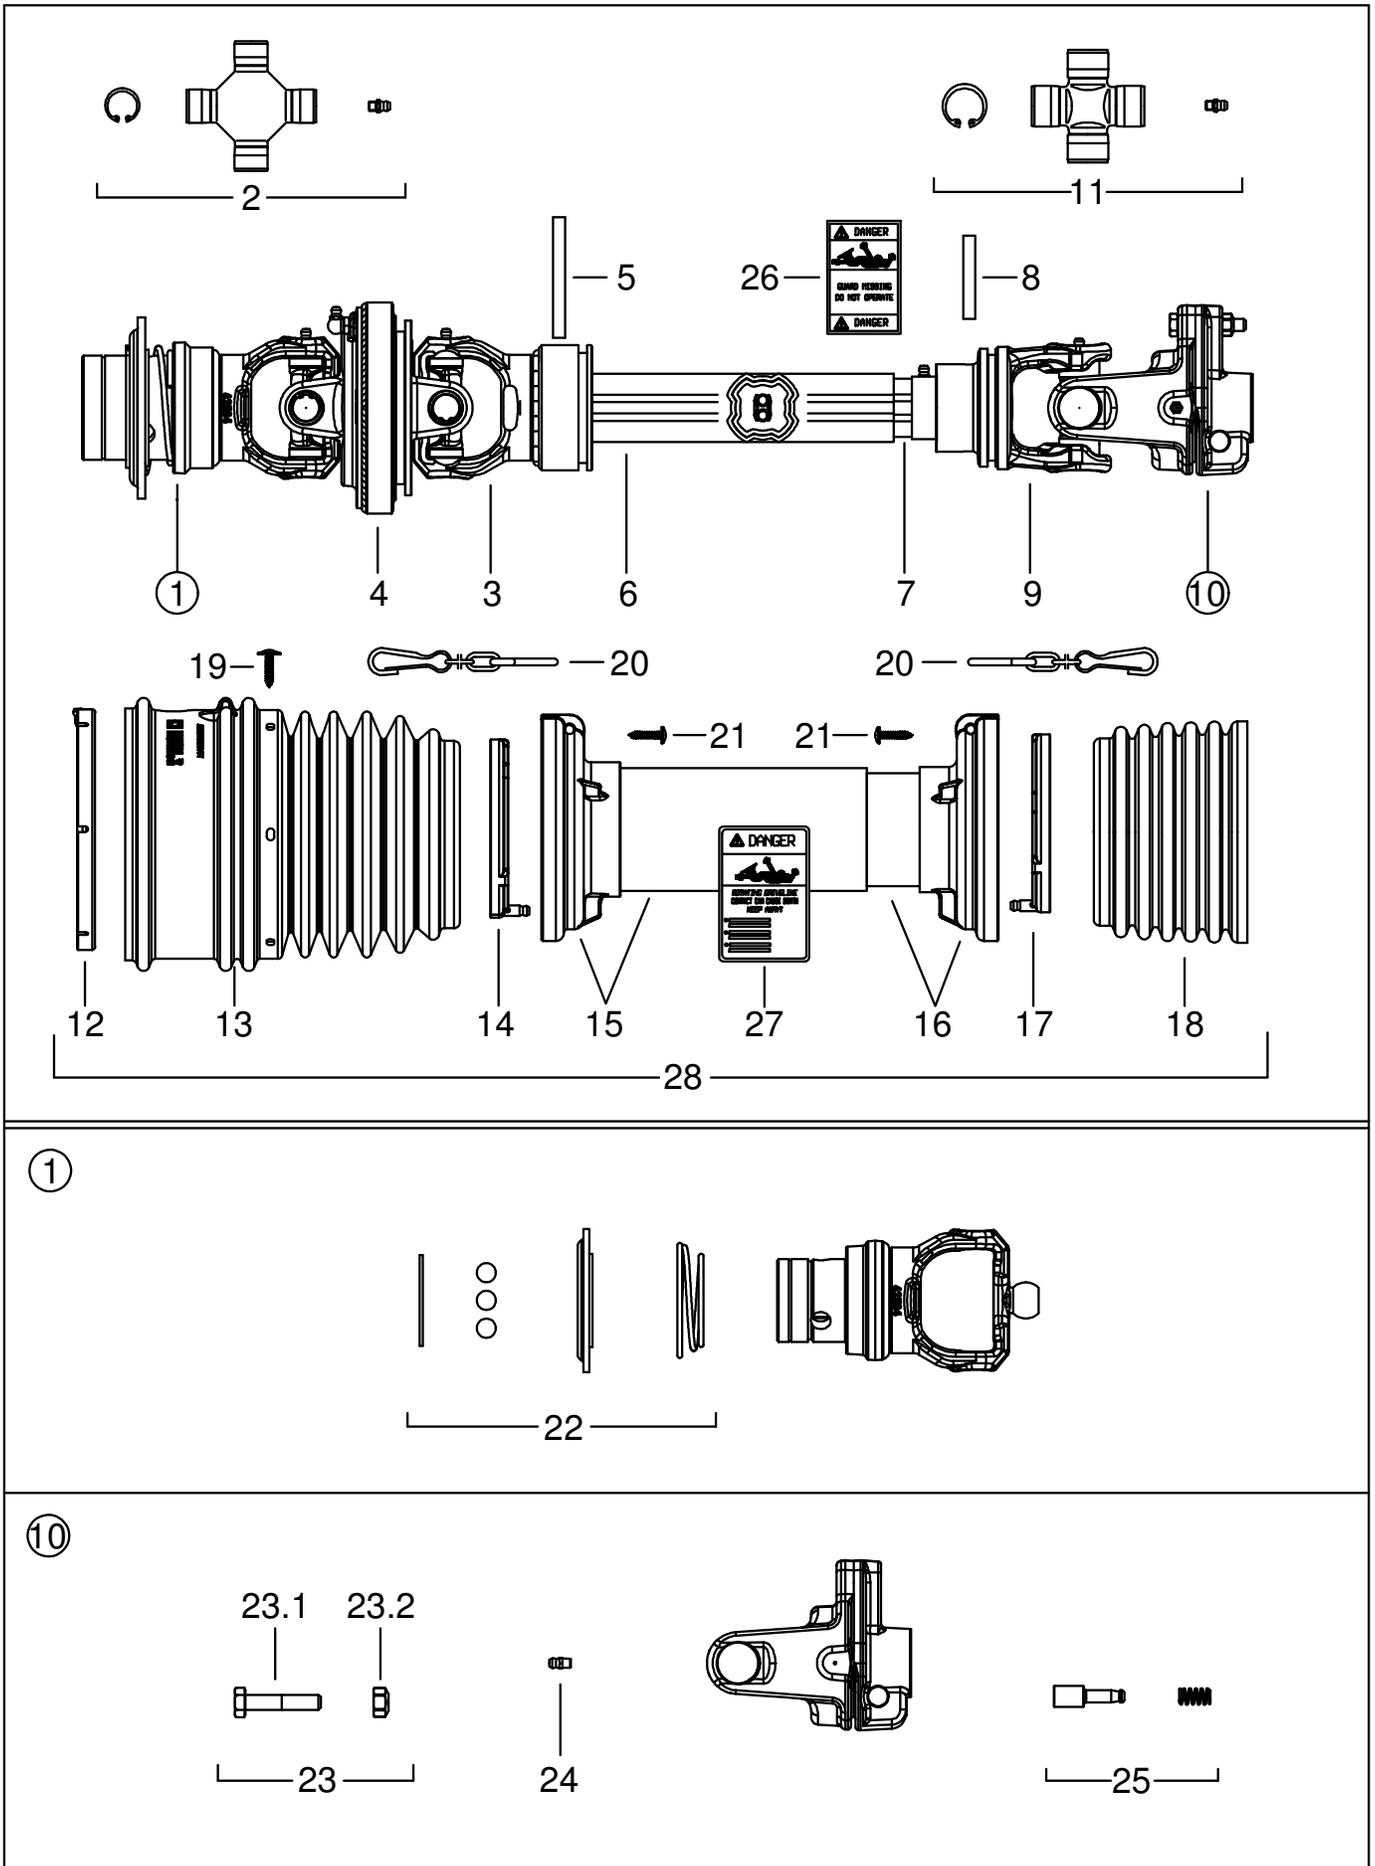

## SPREADERS PTO - 2012

**R21582** - 1 3/8" 6 TOOTH - 540 RPM

**R21583** - 1 3/8" 21 TOOTH - 1000 RPM

**R21584** - 1 3/4" 20 TOOTH - 1000 RPM

PARTS LIST				
ITEM	MFG #	PART NUMBER	DESCRIPTION	QTY
1	5730E0384	R22707	#4 1-3/8" CV YOKE - 6 TOOTH SLIDING YOKE COLLAR - 540rpm	1
	5730E3784	R22706	#4 1-3/8" CV YOKE - 21 TOOTH SLIDING YOKE COLLAR - 1000rpm	1
	5730E3884	R22708	#4 1-3/4" CV YOKE - 20 TOOTH SLIDING YOKE COLLAR - 1000rpm	1
2	4120E0051	R22709	#4 CROSS KIT - 22x86mm	2
3	2150E6871	R23381	#4 OUTER TUBE YOKE	1
4	5110E0052	R22711	#4 CENTRAL BODY-CV	1
5	341078000	R23382	FLEXIBLE ROLL PIN - 8x80mm	1
6	2253L1050	R23383	#4 OUTER DRIVE TUBE - L=1050mm	1
7	528S4R121WN	R23384	#4 INNER DRIVE TUBE - L=1075mm	1
8	341048000	R21476	FLEXIBLE ROLL PIN - 8x55mm	1
9	204S46853	R23385	#4 TUBE YOKE 4 LOBE - INNER	1
10	6060E0302	R22712	#4 SHEAR CLUTCH 1700Nm 1-3/8" 6T - PUSH PIN	1
11	4120E0012	R23386	#4 CROSS KIT - 27x74.6mm GREASE ZERK CAP	1
12	2550E0005	R23387	SHIELD OUTER BELL SUPPORT	1
13	2190E0121	R23388	CONE SHIELD BELL - OUTER	1
14	2550C0001	R23389	SHIELD SUPPORT - OUTER TUBE	1
15	5TWN3S4121U	R23390	#4 SHIELD TUBE & CONE - OUTER	1
16	5MWN3S4121U	R23391	#4 SHIELD TUBE & CONE - INNER	1
17	2550C0002	R23392	SHIELD SUPPORT - INNER TUBE	1
18	2190E0201	R23393	CONE SHIELD BELL - INNER	1
19	310001428	R22719	SCREW FLANGE HEAD - SELF TAP 4.8x22mm	6
20	252000050	R21738	SHIELD CHAIN w/ S-HOOK L=500mm	2
21	310001431	R23394	SCREW - SELF TAP 4.8x22mm	6
22	435000323	R22722	BALL COLLAR KIT 1-3/8" 6T & 1-3/8" 21T	1
	435000420	R22723	BALL COLLAR KIT 1-3/4" 20T	1
23	432000047	357-36-00-000	SHEAR BOLT & NUT - 5/PACK	1
23.1	-	R08251	M8x1.25x45 BOLT GR8.8 (NOT FOR INDIVIDUAL SALE)	1
23.2	-	R08252	M8x1.25 NYLOCK NUT (NOT FOR INDIVIDUAL SALE)	1
24	348017000	R21687	GREASE FITTING M6x1 STRAIGHT	1
25	403000001	R22724	COMPLETE PUSH PIN 1-3/8" 6T	1
26	399143000	R21523	DANGER SHIELD MISSING LABEL	1
27	399141000	R21521	DANGER ROTATING DRIVELINE LABEL	1
28	5CS4121U2WSG	R23395	COMPLETE SHIELD KIT	

## **HUSKY FARM EQUIPMENT LIMITED**

ALMA, ON

NOB 1A0

PHONE: (519) 846-5329

FAX: (519) 846-9378

### **FIVE YEAR AXLE WARRANTY**

Husky Farm Equipment Limited will guarantee for five (5) years from date of invoice, all Manure Spreader undercarriages and axle assemblies, if used on a farm for farm purposes.

Husky will replace free of charge:

1. Any part of the axle which should break or collapse through normal use.
2. Any spindles or hubs which should break through normal use.
3. Any wheel and rim assemblies which should fail through normal use.

Exempt from extended warranty are:

1. Any part of the axle which should break or collapse through overload. Overload includes: Any attachments (ie. injectors) and any product being transported in Spreader weighing more than 10 lb/gallon. (ie. manure mixed with sand).
2. Bearings and tires which are covered under normal warranty and do require maintenance to avoid failure.
3. Wheel or rim damage resulting from owner failing to keep wheel bolts tight.
4. Spindles damaged through bearing failure.
5. Any axle that is custom built.
6. Any axle used in commercial custom hauling applications.

To qualify for extended warranty, damaged parts must be returned to Husky Farm Equipment Limited, prepaid shipping, along with serial number and copy of the original invoice.

All parts supplied by Husky on warranty, will be shipped freight collect. Extended warranty covers damaged parts only and does not cause liability on Husky for any damage resulting from such failure.

### **TEN YEAR WARRANTY AGAINST RUSTOUT**

Husky Farm Equipment provides a ten (10) year warranty from date of invoice, against premature perforation (rust out) of any liquid manure spreader manufactured. Providing the manure spreader is used for manure or sludge and not for chemical products.

Extended warranty is pro rated and will be paid only through the crediting off of the then current list price of a replacement manure spreader of the portion of warranty not used up in time.

Warranty will be effective toward replacing spreader only and no cash payment will be made. It will be understood that the original equipment to be replaced will then become property of Husky Farm Equipment Limited.

This extended warranty will be effective through Husky Farm Equipment factory or factory outlet only. A copy of the original invoice is to be supplied along with the serial number. This warranty will not be effective for commercial custom haulers or to owners other than the original.

Transportation to and from the factory is to be paid for by the owner of the equipment and not by Husky Farm Equipment Limited.